



① ZT310-R通用说明书\*1  
(博世电喷)  
3040301-036200



② ZT250-S左后视镜\*1  
1190100-107000



③ ZT310铅酸电池充电器\*1  
1184200-105000



④ ZT250-SM8螺栓装饰扣\*4  
1224100-025000



⑤ ZT310-R1方向把压块\*1  
(TFT仪表)  
1134200-018000



⑥ ZT180MN精滤密封组件\*1  
(纸盒包装)  
4134200-003000



⑦ ZONTES机油(SN5W-40/1L)\*2  
3070100-012100



⑧ GB6177.1M6 (环保彩) \*2  
1250303-010093



⑨ ZT250-R平衡块\*1  
1134200-023000



⑩ ZT310感应钥匙(手环版)\*2  
1184200-092000



⑪ ZT310 感应钥匙胶环\*2  
1244200-100000



⑫ 非标螺栓M6×12\*2  
(304不锈钢)  
1251100-101000



⑬ 十字球头M5\*30(右手把开关  
定位螺栓)\*1  
1251100-219000



⑭ ZT310-R1随车工具  
1274200-234000



⑮ 后广告牌 (ZONTES升仕) \*1  
1210201-362000



⑯ ZT310感应钥匙包装盒\*1  
1224100-035000



⑰ ZT310-R1单摇臂\*1  
黑色轮辋标牌  
1210142-000100  
(R1)

注意：标注（R1）表示单摇臂车型的零件,其他零件单双摇臂车型通用。