



① ZT310-V通用说明书*1
3040301-034800



② ZT310-V脚踏安装卡*1
3040302-020700
(V)



③ ZT310-V后靠背安装说明书*1
3040301-023900



④ ZT250-S后视镜*1
1190100-107000
(V)



⑤ ZT310-R随车工具*1
1274200-078000



⑥ ZONTES机油 (SN5W-40/1L) *2
3070100-012100



⑦ ZT310 感应钥匙总成
(手环版) *2
1184200-142000



⑧ ZT310 感应钥匙胶环*2
1244200-100000



⑨ GB70.1M6×30
(不锈钢) *4
1250205-031091



⑩ GB70.1 内六角螺栓M8×16
(环保彩锌) *4
1250205-040095



⑪ 非标螺栓M6×12
(304不锈钢) *2
1251100-101000




⑫ ZT310-V后刹主泵活塞
推杆加长杆*1
1274200-170000



⑬ 十字球头螺丝M5×30*1
1251100-219000



⑭ ZT250-R平衡块*1
1134200-023000

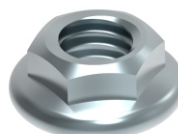

⑮ GB6177.1M6 (环保彩) *2
1250303-010093



⑯ ZT250-SM8螺栓装饰扣*4
1224100-025000



⑰ 后广告牌 (ZONTES升仕) *1
1210201-362000



⑱ ZT310铅酸电池充电器*1
1184200-105000



⑲ ZT310前挡泥板衬套
(黑锌)*2
1274200-035194



⑳ ZT180MN精滤密封组件*1
4134200-003000



㉑ ZT310-V后尾裙前小盖
(深灰哑光)*2
4044201-257051



㉒ ZT310-V后尾裙前小盖
双面胶*4
1244200-090000



㉓ ZT310-V后靠背部装总成*1
(深灰哑光)
4024200-075051



㉔ ZT310感应钥匙包装盒*1
1224100-035000



 
㉕ 非标螺栓M6×16*2
(304不锈钢)
1251100-102000
(V1)



㉖ 翻边衬套缓冲胶*2
($\phi 8.5 \times \phi 14 \times 1$)
1244100-052000
(V1)



㉗ ZT310-V后尾裙装饰罩支架*1
1274200-138000
(V1)



㉘ 翻边衬套*2($\phi 6.2 \times \phi 8.4$
 $\times 3.5 + \phi 14 \times 1.5$)
1274100-057095
(V1)



㉙ GB16674 M6×12*2
(镀铬/HH)
1250104-006097
(V1)



㉚ ZT310-VX脚踏安装卡*1
3040302-028400
(V1)



㉛ ZT310-VX后视镜*1
1190100-407000
(V1)

注意：标注 (V1) 表示单摇臂车型的零件,其他零件单双摇臂车型通用。

标注 (V)表示双摇臂车型的零件,其他零件单双摇臂车型通用。