



ZT310-R1 (EURO IV)

Service manual



Contents

Table of Contents	Page
0 Table of Contents	1
1 Frame component	
1.1 Electrical device component-1..... Main harness, dump switch, relay, flasher, rectifier, ignition coil	7
1.2 Electrical device component-2..... Flameout switch, horn, wake-up switch	8
1.3 Frame plastic parts..... Line clamp, side cover round glue, fuel tank liner limit glue	9
1.4 Directional column component..... Lower plate component	10
1.5 Frame, side bracket, oil handling..... Side bracket, frame oil drain bolt component	11
2 Frame & engine combination	
2.1 Frame & engine combination..... Hanging piece, bracket, sprocket cover	12
3 Intake system components	
3.1 Intake system components..... Throttle valve body component, air filter, oil pipe	13
3.2 Canister component..... Carbon canister, canister solenoid valve	16
3.3 Replace the air filter element.....	17
4 Rear wheel and rear fork component	
4.1 Adjustment chain.....	18
4.2 sprocket guard..... Removing the sprocket guard	19
4.3 Sprocket assembly 1.....	20
4.4 Sprocket assembly 2..... Disassemble the sprocket assembly	21
4.5 Rear wheel component 1..... Decomposed rear rim component	22
4.6 Rear wheel component 2..... Demolition of rear wheel bearing, rear disc brake disc, rear sub-mud assembly	23
4.7 Rear sub-slab assembly 1..... Disassembled rear mud plate bracket assembly	24
4.8 Rear auxiliary mud plate assembly 2..... Disassembled rear mud plate bracket assembly	25

Contents

Table of Contents	Page
4.9 Rear turn signal after sale parts.....	26
Rear left and right turn signals and rear license plate lights for sale	
4.10 Chain adjuster assembly.....	27
Disassemble chain adjuster and maintain	
4.11 Rear mud board.....	28
4.12 Rear shock absorption.....	29
Demolition after shock absorption, rear shock absorption adjustment	
4.13 Rear fork component.....	30
Decomposed flat fork component	
4.14 Replace the rear brake pads.....	31
4.15 Rear brake main pump adds brake fluid.....	32
 5 Pedal component	
5.1 Pedal height adjustment.....	33
Shift lever, brake pedal height adjustment	
5.2 Right footrest component-1.....	34
Remove the right foot support component	
5.3 Right footrest component-2.....	35
Decomposition brake pedal component	
5.4 Right footrest component-3.....	36
Decompose the right pedal component	
5.5 Left footrest component-1.....	37
Remove the left foot support component and the shift lever component	
5.6 Left footrest component-2.....	38
Decomposition shift lever component, front left pedal component	
5.7 Left footrest component-3.....	39
Decompose the left footrest component	
 6 Cooling system component	
6.1 Change the oil.....	40
6.2 Replace the oil filter.....	41
6.3 Radiator tubing component.....	42
Disassemble the radiator tubing component	
6.4 Add coolant.....	43
6.5 Cooling liquid.....	44
Remove the shroud component and release the coolant	
6.6 Right tank component.....	45
Disassemble the right tank component and the right water pipe component	
6.7 Left tank component.....	47
Disassemble the left tank component, the left water pipe component, and the auxiliary water tank component	

Contents

Table of Contents	Page
7 Front fork component	
7.1 Throttle/clutch cable clearance adjustment, light height adjustment.....	48
Adjust the throttle line, clutch cable free travel; adjust the headlights light height	
7.2 Replacement clutch cable.....	49
7.3 Replace the throttle line.....	50
7.4 Steering adjustment.....	51
Adjustment steering device	
7.5 Right hand component.....	52
Remove right rear view mirror, right hand rubber sleeve, balance block	
7.6 Add brake fluid, rocker adjustment.....	53
Add brake fluid, brake rocker adjustment	
7.7 Replace the front brake pads.....	54
7.8 Front wheel component.....	55
Disassemble the front wheel, front disc brake disc, front axle component	
7.9 Front mud board & wheel speed sensor component.....	56
Decompose front wheel speed sensor component, front mud plate component	
7.10 Head component.....	57
Remove the headlight component and disassemble the storage box	
7.11 Headgear headlight component 1.....	58
Demolition headlight cover, headlight bracket	
7.12 Headgear headlight component 2.....	59
Dismantle the headlights, hood, hood cover	
7.13 Left hand component.....	60
Remove left rear view mirror, left hand rubber sleeve, balance weight, left switch	
7.14 Direction handle&TFT Instrument.....	61
Demolition handle, clamp, TFT instrument component	
7.15 Front shock absorber, upper plate component.....	62
Front shock absorber, headlight bracket, faucet lock, upper plate component	
7.16 Uplink plate, direction handle block component.....	63
Disassemble the direction of the block, the upper plate	
7.17 ABS Brake System-1.....	64
Brake brake fluid、 disassemble the front disc brake main pump and the tubing、 ABS control unit	
7.18 ABS Brake System-2.....	65
Disassemble the front disc brake caliper and the FC-HU tubing	
7.19 ABS Brake System-3.....	66
Disassemble the rear disc brake main pump and the tubing	
7.20 ABS Brake System-4.....	67
Disassemble the rear disc brake caliper and the FC-HU tubing	
8 Fuel tank cover component	
8.1 Tank middle cover component.....	68

Contents

Table of Contents	Page
Demolition tank cover component	
8.2 Fuel tank cover, fuel tank cover, fuel tank lock.....	69
Decompose the tank cover component	
8.3 Decorative cover grill.....	70
Demolition cover grill	
8.4 Fuel tank trim cover component.....	71
Remove left and right fuel tank trim cover	
8.5 Fuel tank trim cover rear shell component.....	72
Demolition tank trim cover rear case, USB charging cable, front turn signal	
8.5 New fuel tank trim cover rear shell component.....	73
Demolition tank trim cover rear case, USB charging cable, front turn signal	
8.6 Fuel tank cover component 1.....	74
Remove the left and right tank cover assemblies	
8.7 Fuel tank cover component 2.....	75
Decompose the left and right tank cover assemblies	
9 Tank liner component	
9.1 Tank liner component.....	76
Demolition tank liner component, seat cushion fixing block	
9.2 Tank liner.....	77
Demolition tank liner, fuel pump, fuel tank cover bracket, fuel tank cap	
10 Side cover component	
10.1 Side cover component(old applique).....	78
Decomposition side cover component	
10.2 Side cover component(stripes applique).....	79
Decomposition side cover component	
11 Skirt, rear mud board, electrical component box component	
11.1 Skirt trim cover component(lithium battery).....	80
Remove the tail skirt left and right trim cover component	
11.2 Skirt trim cover component(lithium battery).....	81
Remove the tail skirt left and right trim cover component	
11.3 Skirt trim cover component(lithium battery).....	82
Remove the tail skirt interior left and right trim cover component	
11.4 Skirt trim cover component(lithium battery).....	83
Remove the tail skirt interior left and right trim cover component	
11.5 Tail skirt taillight component 1.....	84
Rear skirt taillight component	
11.6 Tail skirt taillight component 2.....	85
Disassemble the skirt, rear position mounting plate and taillight component	

Contents

Table of Contents	Page
11.7 Tail light component.....	86
Disassemble the taillight component	
11.8 Electrical device cover component（TFT Instrument/lithium battery）.....	87
Disassembled device cover, ECU, relay and fuse box	
11.9 Battery pack(lithium battery).....	88
Battery removal, wake-up switch and charging precautions	
11.10 Electrical component box component 1(lithium battery).....	89
Disassembled device box component, electric device box lower cover	
11.11 Electrical component box component 2(lithium battery).....	90
Remove PKE, electrical box	
11.12 Electrical device box component(collid battery).....	91
Disassemble electrical device box cover、ECU、Relay and fuse box	
11.13 Battery component(collid battery).....	92
Disassemble battery、Wake-up switch and charging precautions	
11.14 Electrical device box component-1(collid battery).....	93
Disassemble electrical device box component、lower cover of electrical device box	
11.15 Electrical device box component-2(collid battery).....	94
Disassemble PKE、Electrical device box	
11.16 External battery to start PKE system.....	95
Emergency method to turn on PKE after battery power is exhausted	
12 Cushion component	
12.1 cushion.....	96
Discomponent and component cushion; seat cushion rubber separately purchased parts	
13 Muffler component	
13.1 Muffler rear section.....	97
Disassemble the rear section of the muffler, anti-scalding plate, muffler clamp	
13.2 Muffler front section 1.....	98
Remove the front part of the muffler	
13.3 Muffler front section 2.....	99
Decompose the front section of the muffler, oxygen sensor, muffler flange	
14 Lower shroud component	
14.1 Lower shroud component-1.....	100
Remove the shroud component, shroud bracket	
14.2 Lower shroud component-2.....	101
Decompose the lower shroud component	


Contents

Table of Contents

Page

All the information, illustrations and photographs collected in this manual are compiled according to the latest products. However, there may be some inconsistencies between your motorcycle and this manual due to the continuous improvement of the product and other changes.

©Guangdong Tayo Motorcycle Technolog Co.
Ltd All rights reserve

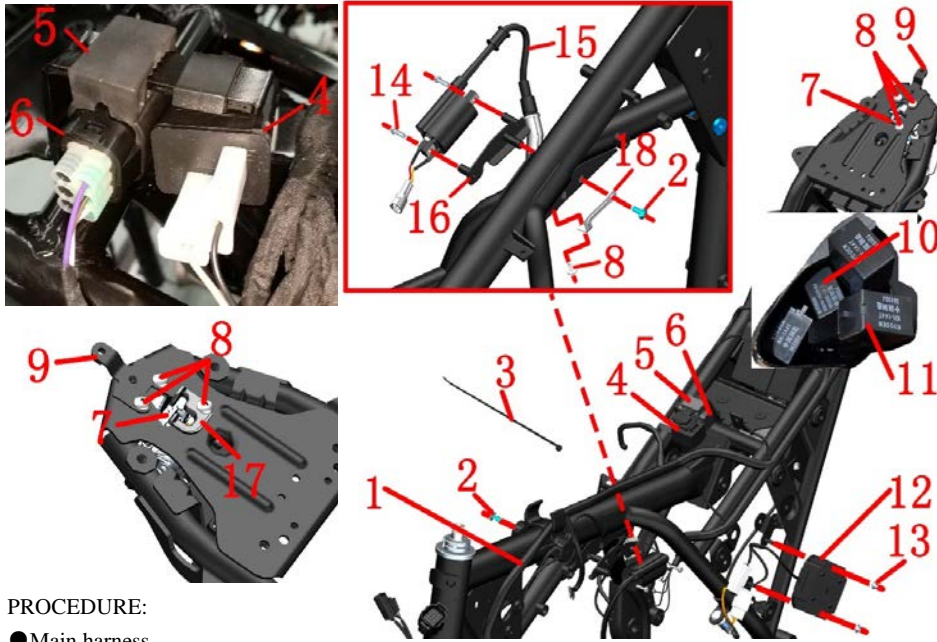

PROCEDURE:

● Main harness

Different plug-in methods are different, please unplug all the electrical components connected to the main thread according to the actual operation. It needs to use a word screwdriver, forceps, scissors and other tools to assist. The binding(3) can be picked out by using scissors.

● Flasher and dump switch

Remove the rubber sleeve(4) that connects the flasher(5) to the mounting bracket on the frame, and remove the dump switch with the same method, then separate the dump switch(6).

● Relay & head light diode

Pull out the side stand relay(10) and electric injection relay(11) directly.

● Ignition coil & support

Remove the crosshead bolts(14) with a cross screwdriver and remove the ignition coil(15). Remove the bolt (2) and remove the ignition coil support(16).

● Rectifier

Remove the nuts(13) and remove the rectifier(12). Note that the rectifier is not universal. The back of rectifier printed "ZT310(230W)" for the colloid battery, otherwise for the lithium battery. The standard rectifier for Bosch EFI is "ZT310 rectifier (five-wire)".

● Rear light holder、seat lock

Find and take off the plug of the seat lock, and cut off binding(3). Remove bolts (8), then remove the rear light holder(9), seat lock guide block(17) and seat lock(7).

Fig.1 FRAME&ELECTRONIC PARTS COMPONENT		Electronic parts COMPONENT-1		CHK	
				ADJ	
NO.	PART NO.	PART NAME	QTY	CAUTION	
1	1184200-080007	ZT310—R1 Wire Harness component	1	TFT Instrument	
	1184100-104000	ZT310—R Wire Harness component			
	1184200-167000	ZT310—R1 Wire Harness component (Bosch)		Bosch EFI	
2	1251100-102000	Non-standard bolt M6×16 (304 stainless steel)	1		
3	1224100-037000	0 level antiframping binding (black 3.6×295)	11		
4	1184200-039000	ZT250—S Flasher	1		
5	1244100-082000	ZT250—S Dump switch rubber	1		
6	1184100-002000	ZT250—S Dump switch	1		
7	1274100-058000	ZT310 seat lock	1		
8	1251100-102000	Non-standard bolt M6×12 (304 stainless steel)	4		
9	1274200-017000	ZT310—R rear light holder	1		
10	1184200-024000	ZT310—R side stand relay	1	G8HN-1C4T-RJ	
11	1184100-017000	ZT250—S Electronic fuel injection relay	2	KH-1A4T	
12	1184200-033000	ZT310-R rectifier (for lithium battery)	1	Delphi EFI	
	1184200-133000	ZT310 rectifier (230W)			
	1184200-174000	ZT310 rectifier (five wire)		Bosch EFI	
13	1250303-010093	GB6177.1 M6	2		
14	1250201-032093	GB818M5×16 bolt	2		
15		ZT310 EFI ignition coil	1		
16	1274100-085000	ZT250—R Ignition coil installing holder	1		
17	1224200-205000	ZT310 electronic seat lock guide block	1		
18	1274200-291000	ZT310-R ignition coil connection bracket	1		

CAUTION:

● In order to avoid the improper contact of the bending electrical parts, please pay attention to the direction and angle of force when plugging the electrical parts, so as to avoid the improper contact of the bending electrical parts. No violent operation.

● The type of side stand relay: G8HN-1C4T-RJ. The type of EFI Ignition coil installing: KH-1A4T.

● From the end of October 2020, a new seat lock guide block (17).

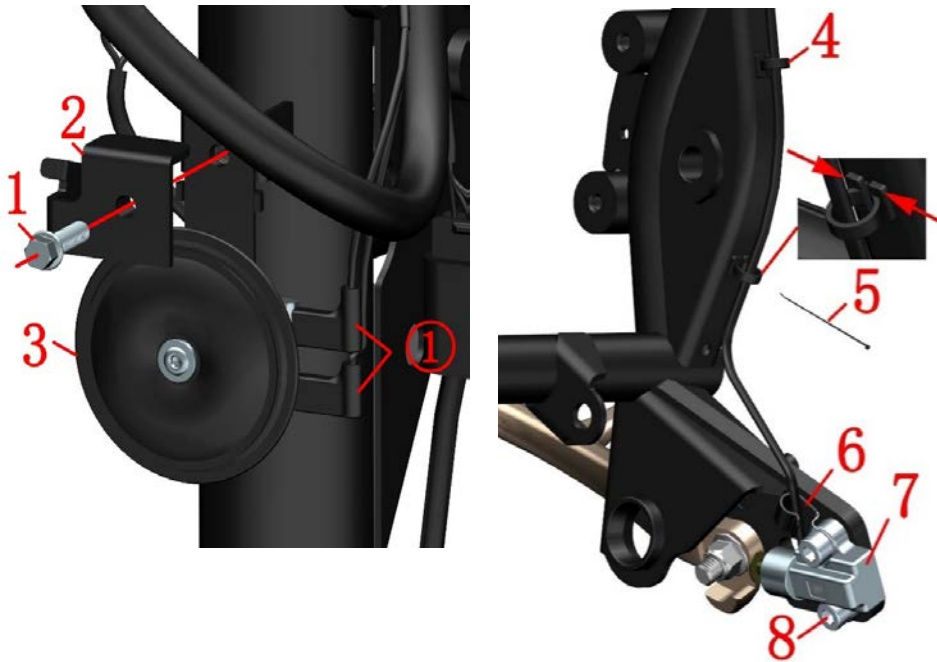


Fig.2 FRAME&ELECTRONIC PARTS COMPONENT		Electronic parts COMPONENT-2		CHK	
				ADJ	
NO.	PART NO.	PART NAME		QTY	CAUTION
1	1251100-061093	M6×22 Screw bolt		1	
2	1274200-033000	ZT310—R No.2 holder of front disc oil pipe		1	
3	1184200-004000	ZT310 Horn		1	
4	1274100-017000	ZT250—S Cable clip		2	
5	1224100-037000	frane retardant ribbon		2	
6	1274100-095000	ZT250—S Holder of flameout switch cable		1	
7	1184100-012000	ZT250—S Flameout switch		1	
8	1250205-040095	GB70.1M8×16 blot		2	

PROCEDURE:

●Horn

Take off the plug of horn① take the horn(3) by one hand use tool rotate the screw(1) by another hand remove the holder(2) then take off the horn.

●Flameout switch

Find and take off the plug of the flameout swich(7) press and take off the cable clip(4) cut ribbon (5).Using the inner hexagon tool remove the bolts(8) , remove the holder(6) and the flameout switch(7).

CAUTION:

- When Take off the plug①、②can't drag any cable.
- Attention the the strength and direction of force when removing cable clip.
- Can't overcharge the charging time. Please refer to the manual for details about tthe battery.





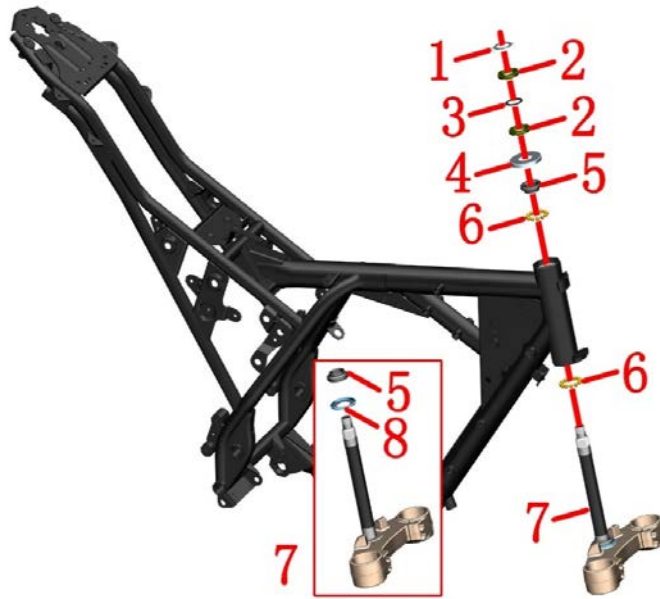
Fig.3 FRAME&ELECTRONIC PARTS COMPONENT		Frame plastic parts	CHK	
			ADJ	
NO.	PART NO.	PART NAME	QTY	CAUTION
1	1244100-019000	ZT250—S Inner fuel tank fix glue cushion	1	
2	1240300-007000	HJ125—6 battery cushion	1	
3	1244100-002000	ZT250—S side cover cushion	10	
4	1244100-061000	ZT250 Frame water proof rubber plug	4	
5	1224200-016000	ZT250—R Cable collection clip	1	
6	1274100-007000	ZT250-S flanging sleeve（φ6.4×φ9×6+φ20×2）	1	
7	1250105-236093	GB5789M6×55（environmental color zinc）	1	
8	1240100-023000	battery anode protection glue	1	colloid battery

PROCEDURE:

- Inner fuel tank fix glue cushion
Use both hands to hold the two ends cylinder parts of the inner fuel tank limited glue cushion(1)and should push it out.
- Side cover cushion
Remove the side cover cushion(3)with your hand directly.
- Frame waterproof rubber plug
Remove the frame waterproof rubber plug (4)with your hand directly.
- Cable collection clip
First, take the cable and the main thread out from the collection clip, then use the straight screwdriver to pick up the screw(7)and then take the cushion (6) and cable collection clip(5) off.
- Battery cushion
Put off the battery cushion (2) directly by hand.
The battery anode protection glue(8) use for colloid battery models.

CAUTION:

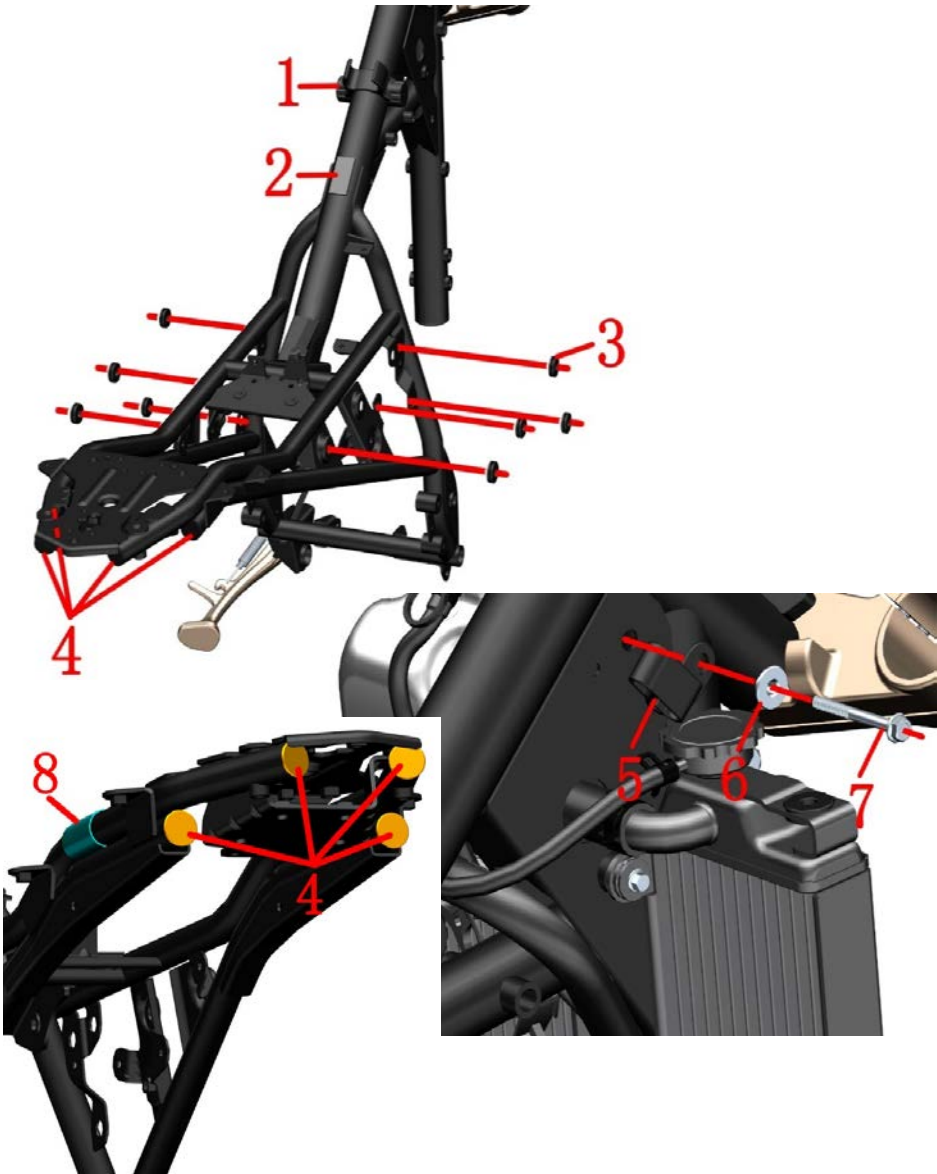- It must be dismantled them first, such as the cushion, fuel tank cover, inner fuel tank, sider cover, tail dress and so on.
- All parts should be correctly assembled.



PROCEDURE:

●Disassembly

Remove the lock washer(1).

Remove the top adjusting nut (2) by using a special four-jaw or hook wrench tools.

Remove the rubber pad (3).

With one hand to hold down the down connected plate assembly (7), the other hand use a special four-jaw set or hook wrench to remove the adjusting nut(2).

Remove the upper dustproof cover(4).

Remove the down connected plate component(7).

Remove the axle tee ring (5) of the upper riser and the steel ball(6).

Remove the steel ball of the down connected plate component(7).

●Assemble

When reassembling, the conjoined steel beads should be painted lubricating grease, attention to the dosage.

The torque of rating nut which closes to upper dustproof cover is required to about 14N.m.so as to be able to rotate out of nimbleness.

The top adjusting nut only needs to rotate to the bottom of the nut groove alignment, not too tight to prevent the rubber pad (3) from deformation too large.

Fig.4 FRAME&ELECTRONIC PARTS COMPONENT		Steering rack component		CHK	CAUTION
				ADJ	
NO.	PART NO.	PART NAME		QTY	
1	1134100-007000	ZT250—S Rating nut lock washer		1	
2	1251300-046093	ZT250—S Steering column rating nut (color zinc)		2	
3	1244100-015000	ZT250—S Rating nut glue cushion		1	
4	1224100-005000	ZT250—S Steering column upper dustproof cover		1	
5	1130900-024000	ZT250—S Blowout patch		1	
6	1130900-022000	ZT250—S One-piece steel ball		2	
7	1134100-015000	ZT250—S Down connected plate (selfmade/with blowout patch) component		1	
8	1224100-006000	ZT250—S Steering column down dustproof cover		1	【1】

CAUTION:

● Remove the head part component, handlebar component and front shock absorber component first.

● Please pay attention to fix the awaiting repair motorcycles during disassembly, prevent dumping by accident.

● Please check whether the steel beads of the conjoined body have abnormal phenomena such as partial abrasion and rust. If YES, please buy the regular accessories on ZONTES official website, if not, please be sure to grease the old grease and repaint the lubricating grease on it.

● It must be to check whether the steel ball is available during reassembly.

● It must be reasonable to adjust the steering, too loose will cause the locomotive to brake slightly, and the locomotive will shake slightly, too tight can lead to inflexibility, resulting in safety hazards.

● If you have the ability and the right tool, you can change the shaft ring (5) and the dustproof cover (8). During the replacement process, pay attention to the protection of the lower connected plate. After replacement, it must be to check the parallelism of the column and the damping hole, the vertical degree of the vertical column and the lower connected plate.

● 【1】 the down connected plate (selfmade/with blowout patch) component(7), has been contains the Steering column down dustproof cover(8).



PROCEDURE:

●Checking the cushion loop

Checking whether the cushion loop (2) is frayed, if as it, please replace it on ZONTES website, fix the cushion loop well and paint the lubricating grease on it with appropriate tool.

●Replacing the engine oil filter screen

Put the oil pan on the bottom and use the appropriate tools to remove the oil cold joint (5), O ring (4), and oil filter screen(3). When replacing the oil filter screen (3), the O-ring(4) must be replaced at the same time. The oil cooling joint(5) must be tightened well when re-assembling which meets the standard torque value.

●Release the frame tube enging oil

Put the oil pan at the bottom, use the appropriate tool to remove the oil bolts(7) and the sealing gasket(6), and remove the oil from the frame tube. Refer to the instructions for detailed steps to replace the oil. It is recommended that the engine oil should be replaced with oil bolts (7) and sealing gasket(6) to prevent oil leakage.


●Sider support

Use the cross screwdriver to remove the side support spring, and guard against the personal injury caused by spring contraction, remove the nuts (8) and bolts (11) with the appropriate tools. Remove the side support (10) and bush(9), paint the lubricating grease on the bush(9) when re-assembling ,then put it into the frame(1).

Fig.5 FRAME&ELECTRONIC PARTS COMPONENT		Frame, Side support, the operation of releasing engine oil	CHK ADJ	CAUTION
NO.	PART NO.	PART NAME	QTY	
1	4014200-012000	ZT310—R frame after-sales component	1	【1】
2	1130900-026000	ZT250—S Fix loop	2	
3	1274100-006000	ZT250—S Frame engine oil filter screen	1	
4	1051453-003000	27.4×2.65 Acrylate O gule cushion loop	1	
5	1274100-024000	ZT250—S Oil cooling joint	1	
6	1244100-033000	Sealing gasketφ12×φ20×2	1	
7	1251100-066093	M12×1.5×15 Ablassschraube (color zinc)	1	24±4N.m
8	1251300-057093	Non-standard bolt M10×1.5 (dacromet)	1	
9	1251700-025091	ZT250—S Side support bush	1	
10	1274200-200000	ZT310—T side support(short)	1	
	1271200-165000	ZT310-T side bracket (short/dark gray)		
11	1251100-088094	Non-standard bol M10×1.5×43 (dacromet)	1	
12	1264100-001000	ZT250—S side support spring	1	

CAUTION:

- Remove the wind deflector component, handle bar component, steering column component first.
- Paint the lubricating grease on the cushion ring to decrease the rotary resistance of front forklift.
- The waste oil needs to be collected and returned to qualified institutions. It is forbidden to dump and pollute the environment and the source of water.
- Pay attention to safety when mounting side support spring.
- All parts should be correctly assembled.
- 【1】 the frame after-sales component contains fix loop and nameplate.

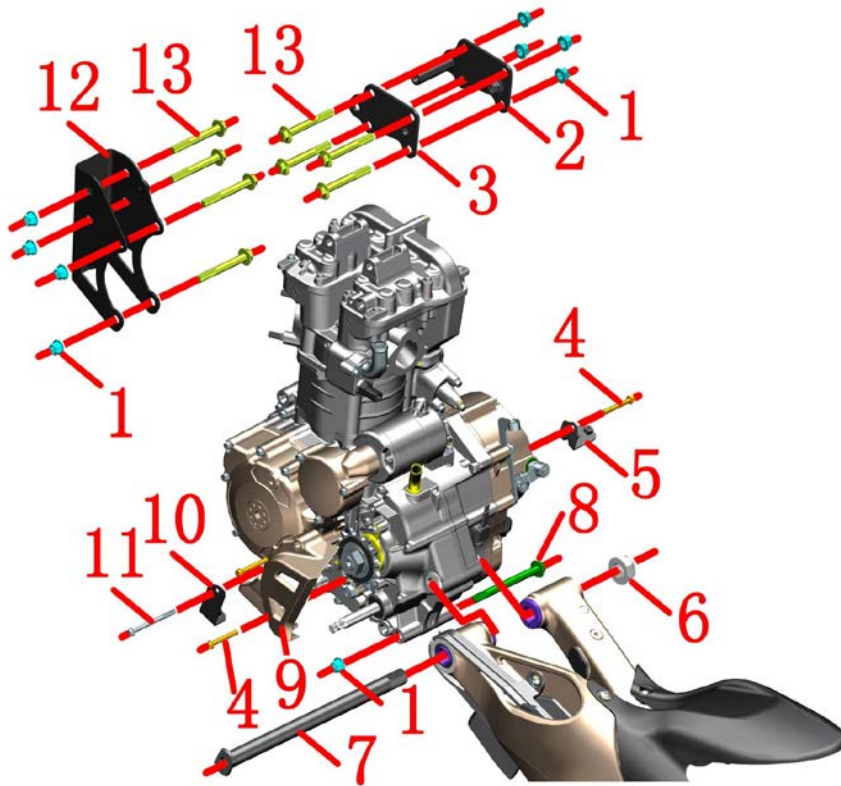**CAUTION:**

- It is necessary to remove the seat cushion, fuel tank, side cover, pedal support, wind deflector, shift lever, muffler, radiator and pipe, cable, air filter joint, chain, engine positive pole, etc.
- Use appropriate tools to support the motorcycle to prevent motorcycle dumping during disassembly. Single operation is forbidden.
- The waste oil needs to be collected and returned to qualified institutions. It is forbidden to dump and pollute the environment and the source of water.
- Please pay attention to safety to prevent accident.
- It must be operated the engine with more than one people at the same time when removing the engine.
- All standard parts must meet the standard torque value when reassembling, and refill the engine oil according to the operation instruction.

Fig.1 FRAME&ENGINE		Frame&Engine	CHK	CAUTION
NO.	PART NO.	PART NAME	QTY	
1	1251300-057093	Non-standard nut M10×1.5 (Dacro)	9	65±5N.m
2	1020242-186000	ZT310—R Right hanging piece	1	
3	1020242-185000	ZT310—R Left hanging piece	1	
4	1251112-003093	M6×45 Hexagonal flange face 9.8 level bolt	3	
5	1274200-016000	ZT310—R Lower shroud right bracket	1	
6	1251300-067000	ZT250—R rear wheel hollow shaft nut	1	110±5N.m
7	1252200-040000	ZT310—R1 rear flat fork hollow shaft	1	
8	1251100-086093	Non-standard bolt M10×1.5×112 (Dacro)	1	
9	4044201-022051	ZT310—R Engine left rear cover	1	
	4050854-002051	ZT310—R Engine left rear cover (dark gray)		
10	1274200-015000	ZT310—R Lower shroud left bracket	1	
11	1251112-005093	M6×75 Hexagon flange bolt	1	
12	4024200-005000	ZT310—R Bracket	1	
13	1251100-132003	Non-standard bolt M10×1.5×80 (Dacro)	8	

PROCEDURE:

● Engine left rear cover, shroud bracket

Remove the engine left two bolts (4) with a sleeve and remove the engine left rear cover (11). Remove the bolts (11) and (4) with the sleeve and then remove the left and right brackets (10) and (5) of the shroud. Reinstall the bolts (11), (4) back into the engine to prevent oil leakage.

● The middle part of the engine is connected with the frame and the rear fork

First, fix the rear flat fork hollow shaft (7), and then remove the nut (6) with a sleeve. Other parts cannot be removed.

● Hanging piece

Use the sleeve to cover the head of the bolt (13) and remove the nut (1) with the sleeve. Can not remove the bolt and the hanging piece (2) and (3); the nuts (1) are completely removed and then screwed back 3 to 5 screws.

● Bracket engine hanging

Use the sleeve to cover the head of the bolt (13) then dismantle the nut (1) with the sleeve. Remove the bolt then dismantle the bracket (12). Use the sleeve to cover the head of the bolt (8) then dismantle the nut (1) with the sleeve. The bolt (8) cannot be removed.

Hold the rear fork assembly and then remove the rear flat fork hollow shaft (7), then remove the rear fork assembly.

Both of them hold the left and right boxes of the engine at the same time; remove the bolt (9) and remove the upper right hanging piece (2) and the upper left hanging piece (3). Remove the bolt (6).

Hold the engine to translate to one side and pay attention to safety during the movement. Place the engine smoothly on the ground.

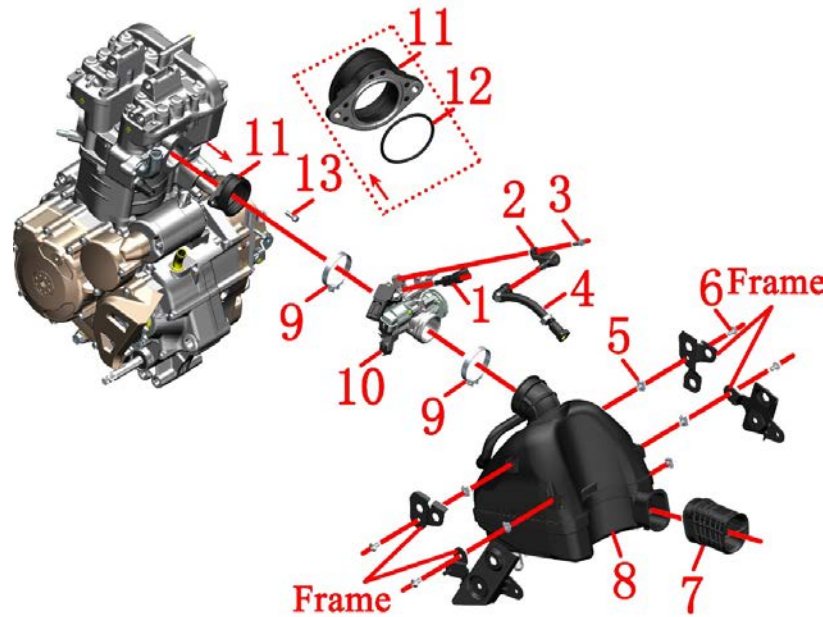


FIG.1 INTAKE SYSTEM COMPONENT		Intake system component		CHK	CAUTION
NO.	PART NO.	PART NAME	QTY	ADJ	
1	1050954-007000	39—N008 Fuel injector	1		
2	1050954-008000	39—N008 Fuel injector fixator	1		
3	1251112-001093	M6×16 Hexagon flange bolt (color zinc)	1		
4	1050954-006000	ZT250-R Fuel injector high pressure oil pipe unit	1		
5	1251300-063093	Plywood M6×11×15 (Environmental protection)	5		
6	1251100-101000	Non-standard bolt M6×12 (304stainless steel)	5		
7	1244200-017000	ZT310—R Air filter large air inlet	1		
8	1224200-058000	ZT310—R Air filter second generation	1		
9	1051354-004000	Φ56×10 Hoop assembly	1		
10	1050954-005000	TB39 Throttle body part	1		
11	1050954-012000	TB39 Intake pipe assembly	1		
12	1051453-007000	45×2.1 Fluorine rubber O-ring	1		
13	1251100-061093	M6×22 Hexagon flange bolt (color zinc)	2		

PROCEDURE.

● High-pressure oil pipe

First press the high pressure oil pipe(4),the anti-loose snap ring close to the fuel pump connector and pull it out directly.A small amount of fuel in the oil pipe needs to be caught in the oil can; prevent fuel from dripping to any part of the vehicle.Then press the anti-loose snap ring near the injector holder(2) and remove the high pressure oil pipe,as shown in the lower right figure. Fireworks should be strictly forbidden during the disassembly process.

● Air filter

First use the inner hexagon tool to remove the bolt(6),Pull off the brake oil pipe from the oil pipe clamp(7) and remove it. Loosen the pipe clamp assembly(10) on the end of the air filter, Clamp the clamp on the exhaust pipe with pliers and unplug the exhaust pipe connected to the exhaust port of the engine.Then use the rubber plug that is delivered with the car when buying the car to prevent foreign matter from entering the damaged engine.Remove the air filter(9) and the plywood nut(5),finally pull out the air inlet(8).

● Throttle assembly

Use the plum blossom wrench to loosen the bolt(14),and remove the throttle assembly.Loosen the hoop between the intake pipe assembly (12) and throttle assembly(11), and then remove them separately.Remove the O-ring (13) from the intake oil pipe assembly.Loosen the bolt (3) on the injector holder (2)with a sleeve. Remove the holder and remove the injector (1).

CAUTION:

- First it need to remove the cushion,side cover,oil tank outside cover and liner,rear shock absorber and electrical device box etc.
- When removing the high pressure oil pipe,It is sure to operate until the engine and muffler are completely cooled.
- Fireworks, answering or dialing should be strictly prohibited near the car-breaking site to prevent accidents.



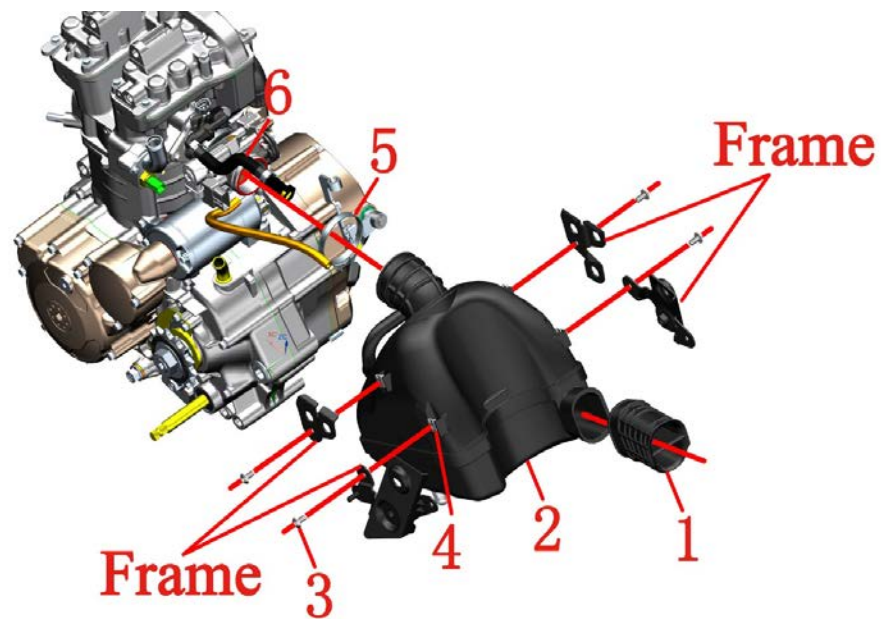


FIG.2 INTAKE SYSTEM COMPONENT		Intake system component (Bosch EFI)		CHK	
				ADJ	
NO.	PART NO.	PART NAME		QTY	CAUTION
1	1244200-017000	ZT310—R Air filter large air inlet		1	
2	1224200-171000	ZT310-T1 Air Filter (Bosch)		1	
3	1251100-101000	Non-standard bolt M6×12 (304stainless steel)		5	
4	1251300-063093	Plywood M6×11×15 (Environmental protection)		5	
5	1051354-004000	Φ56×10 Hoop assembly		1	
6	1050954-035000	ZT310-R Fuel injector high pressure oil pipe unit		1	
7	1274200-034000	ZT310—R Rear disc brake tubing clamp (steel)		1	

PROCEDURE:

- High-pressure oil pipe

First press the high pressure oil pipe(2),the anti-loose snap ring close to the fuel pump connector and pull it out directly.A small amount of fuel in the oil pipe needs to be caught in the oil can; prevent fuel from dripping to any part of the vehicle. Fireworks should be strictly forbided during the disassembly process.


- Air filter

Fisrt use the inner hexagon tool to remove the bolt(3),Pull off the brake oil pipe from the oil pipe clamp(7) and remove it. Loosen the pipe clamp assembly(5) on the end of the air filter, Clamp the clamp on the exhaust pipe with pliers and unplug the exhaust pipe connected to the exhaust port of the engine.Then use the rubber plug that is delivered with the car when buying the car to prevent foreign matter from entering the damaged engine.Remove the air filter(2) and the plywood nut(4),finally pull out the air inlet(1).

CAUTION:


- First it need to remove the cushion,side cover,oil tank outside cover and liner,rear shock absorber and electrical device box etc.
- When removing the high pressure oil pipe,It is sure to operate until the engine and muffler are completely cooled.
- Fireworks, answering or dialing should be strictly prohibited near the car-breaking site to prevent accidents.

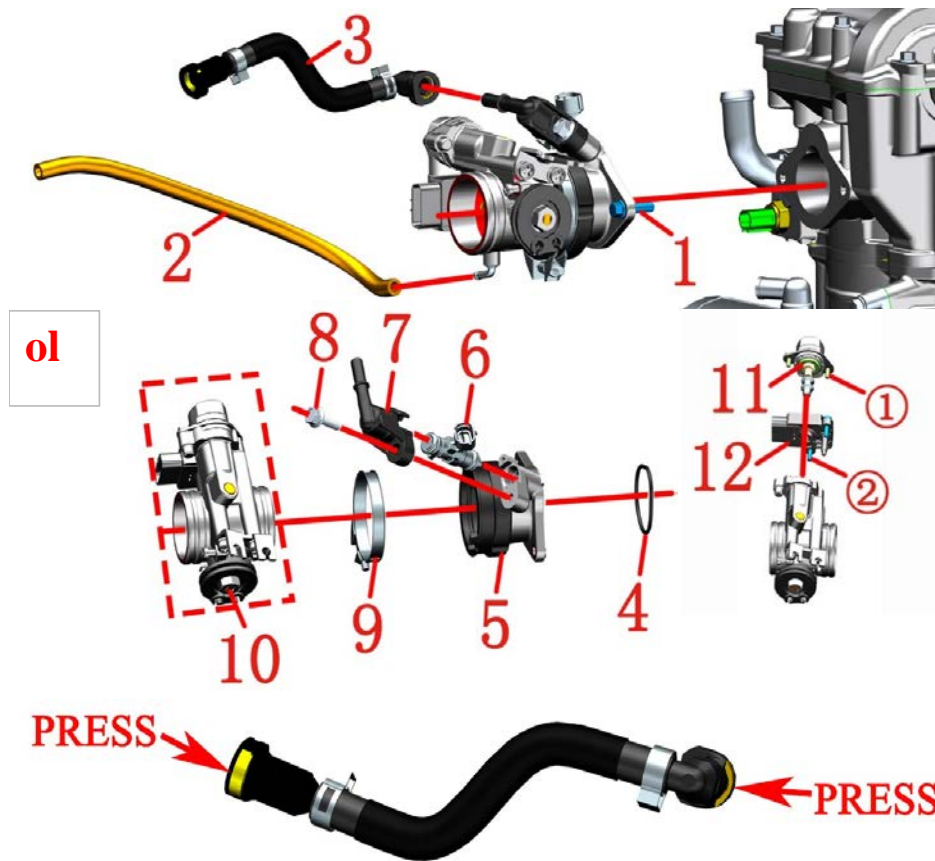



**PROCEDURE:**

● Throttle assembly

Use a wrench to remove the bolt (1), remove the throttle valve assembly, and remove the O-ring (4) from the intake pipe assembly (5). Then press the anti-loose snap ring near the injector holder (7) and remove the high pressure oil pipe, as shown in the lower right figure. Pull out the throttle valve desorption rubber tube (2) from the throttle valve body, use a sleeve to remove the bolt (8) that fixes the injector holder (8) to remove the holder, and remove the injector (6). Loosen the pipe clamp (9) between the intake pipe assembly (5) and the three-in-one valve body (10), remove the bolts ① and ② with a cross-shaped screw, and take out the stepping motor (11) and the three-in-one sensor (12).

FIG.3 INTAKE SYSTEM COMPONENT		Intake system component (Bosch EFI)		CHK	
NO.	PART NO.	PART NAME	QTY	ADJ	
1	1251100-061093	M6×22 Hexagon flange bolt (color zinc)	2		
2	1244200-117000	ZT40 Throttle valve desorption rubber tubing	1		
3	1050954-035000	ZT310-R Fuel injector high pressure oil pipe unit	1		
4	1051454-016000	45×2.5 Fluorine rubber O-ring	1		
5	1050954-034000	ZT180MN Intake pipe assembly (Bosch)	1		
6	1050954-023000	EV14 Fuel injector G48	1		
7	1050968-002000	ZT1P58MJ Fuel injector fixator	1		
8	1250105-138093	GB5789M6×20 (color zinc)	1		
9	1051354-004000	Φ56×10 Hoop assembly	1		
10		Three-in-one valve body (⑩)	1		
11	1050954-025000	DLA-mini flangeless stepper motor 8mm	1		after-sale
12	1050954-024000	CTS three-in-one sensor	1		

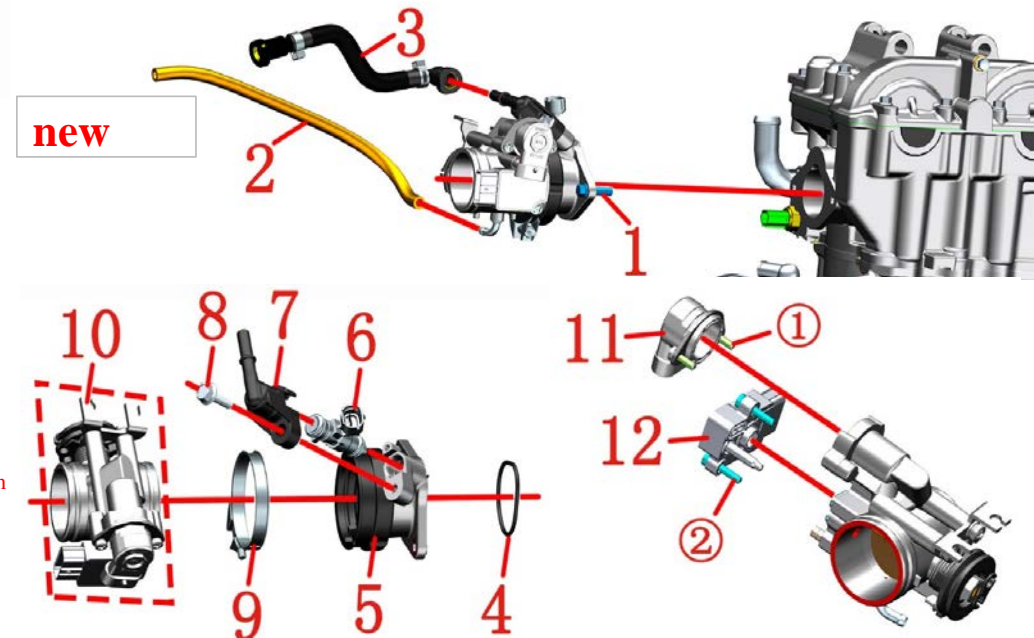

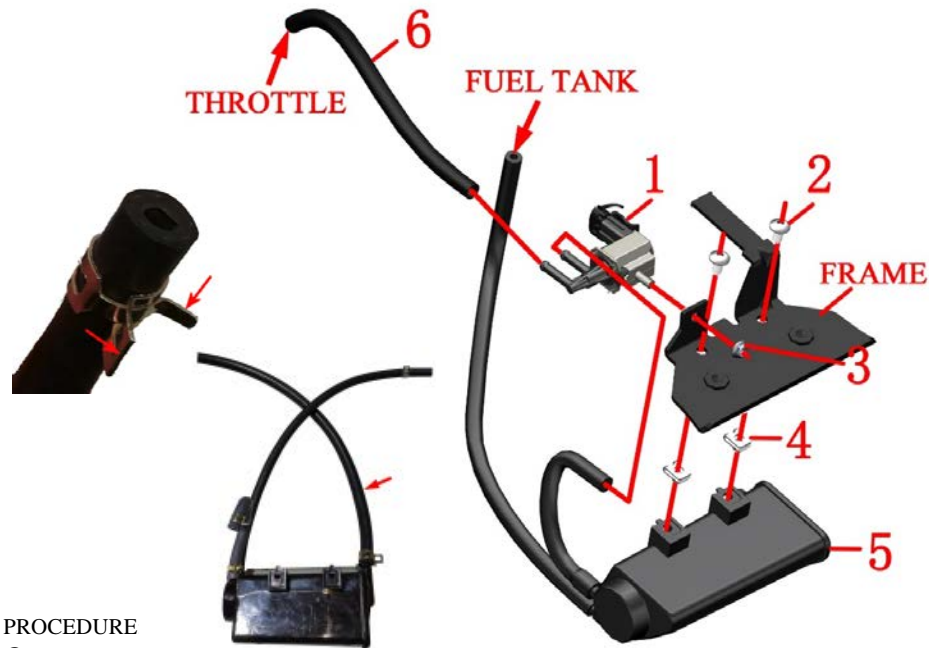

PROCEDURE

● Carbon tank


Clamp the pipe clamp on the exit of the oil and gas separator at the bottom of the tank with pliers and pull out the tubing. Unplug carbon tank solenoid valve (1) with the same method. Remove the bolts with the inner hex tool (2). Remove the carbon tank (5) from the left side of the frame and remove the plywood nut (4).

● Desorption tubing

Clamp the pipe clamp on both ends of the desorption tubing, and take it (6) out.

● Carbon tank electromagnetic valve

Remove the plug of the solenoid valve (1), then remove the nut (3) with the sleeve and remove the electromagnetic valve.

Fig.4 INDUCTION SYSTEM COMPONENT		Induction system component	CHK	
			ADJ	
NO.	PART NO.	PART NAME	QTY	CAUTION
1	1050954-009000	YH Carbon tank electromagnetic valve	1	
2	1251100-101000	Non-standard bolts M6×12（304 stainless steel）	2	
3	1250303-010093	GB6177.1M6（color zinc）	1	
4	1251300-063093	Plywoord M6×11×15（color zinc）	2	
5	1224200-158000	ZT310—R Carbon tank II（with fuel pipe）	1	
6	1244200-004000	TB41 Throttle valve desorption rubber tubing	1	
	1050958-015000	ZT44 Throttle Valve Decoupling Rubber Tube (Φ6×Φ10×L420+Φ9 pipe clamp ×2)		

CAUTION:

- It needs to remove the seat cushion, side cover, oil tank cover, bladder and so on.
- Regularly check whether the filter element of the carbon tank and air filter is not ventilated, otherwise it may cause the oil supply to affect the driving experience.
- It should be no crimp, entanglement and other phenomena.
- The fuel pipe used for prevent fuel dropping onto the muffler surface.

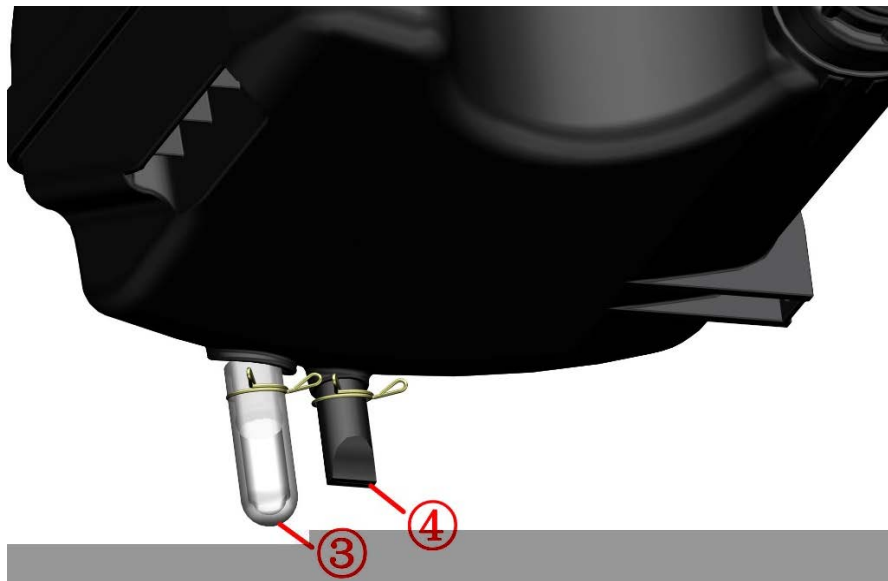
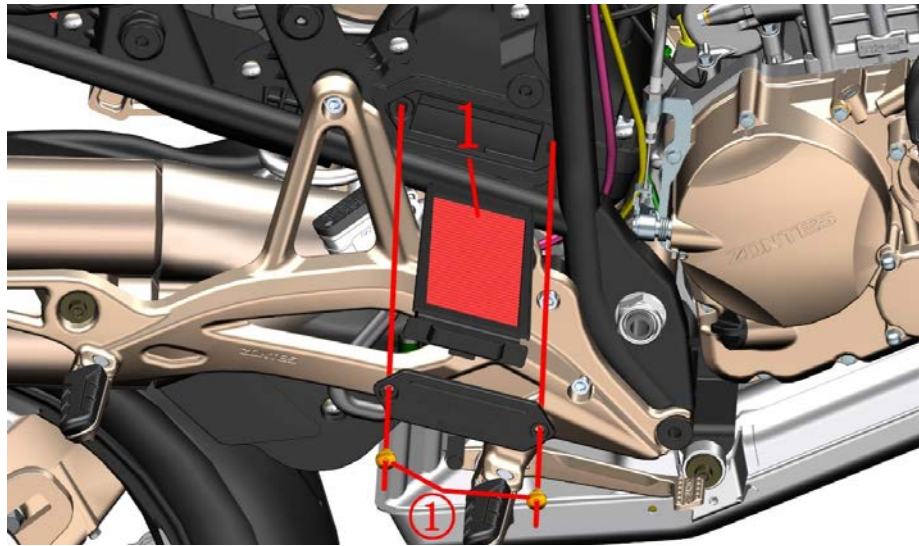


Fig.5 INDUCTION SYSTEM COMPONENT		Induction system component	CHK	CAUTION
NO.	PART NO.	PART NAME	ADJ	
1	1226400-174000	ZT310 Air filter sponge filter element	1	

PROCEDURE:

● Filter element

If you need to maintain the filter element of the air filter, remove the seat cushion, the right side cover. Take the two standard parts ① out of air filter with the tool, dismantle the box cover ②, then extract the filter element (1). Blow the dust off the filter core by blowing dust gun in the filter element. If the blowback causes the dust to be unable to clean up, the engine will be damaged or the induction resistance will become larger and affect the driving experience. If there is any damage, please log on the official website and purchase another parts.

● Oil pipe and water pipe

Avoid water into the air filter when washing the motorcycle. Can pulled out the oil pipe③ and water pipe④ to release if into small water. keep no water inside before staring the engine. Inspecte the oil pipe regularly if more oil is accumulated should be released in time.

CAUTION:

● Regularly check whether the filter element of the carbon tank and air filter is not ventilated, otherwise it may cause the oil supply to affect the driving experience.

● When blowing dust, pay attention to maintain a certain distance to avoid excessive damage to the filter element.

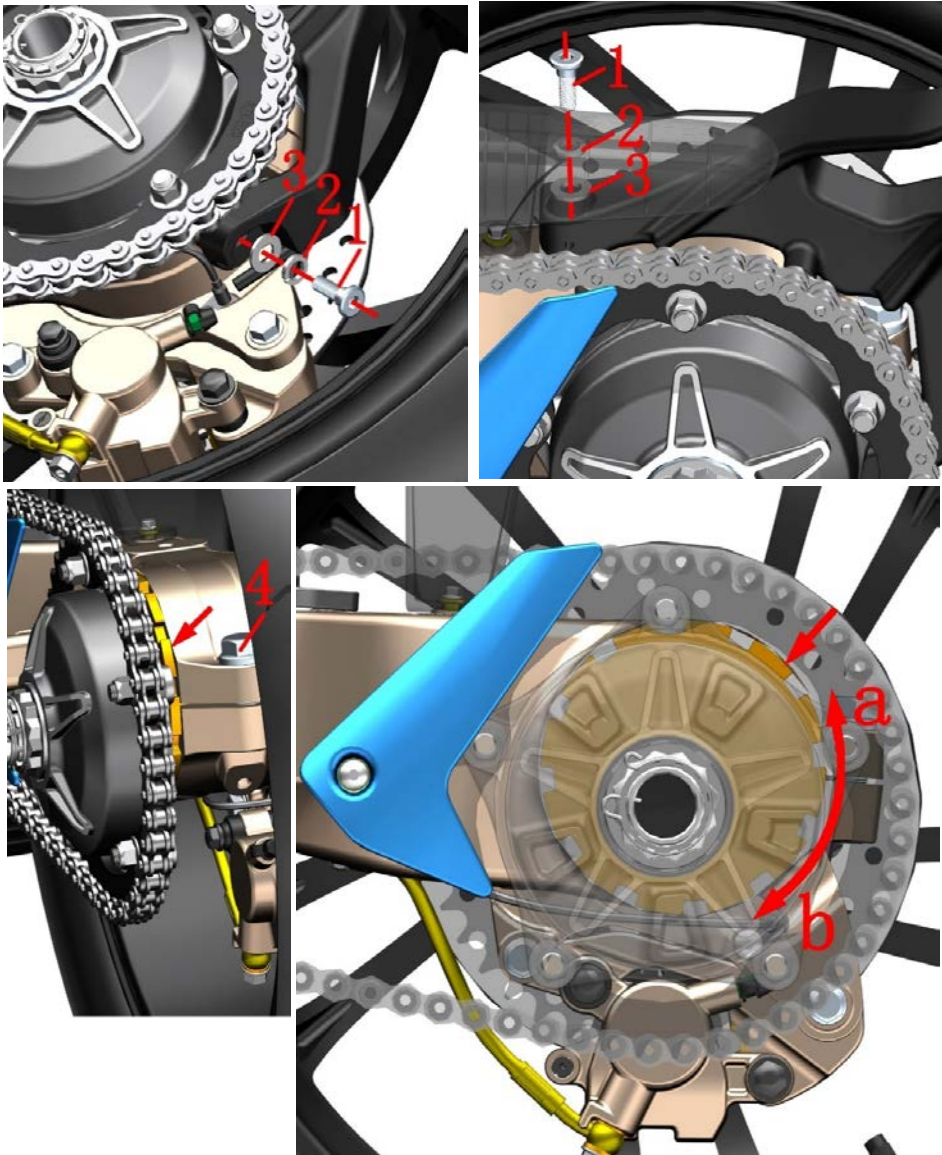



Fig.1 Rear wheel, swinging arm assembly		Adjustment chain	CHK	
			ADJ	
NO.	PART NO.	PART NAME	QTY	CAUTION
1	1251100-117093	Non standard hex socket bolt M8×25	2	
2	1250501-004091	GB93φ10 (white zinc)	2	
3	1250503-006091	GB97.1φ10 (white zinc)	2	
4	1251100-204000	Non-standard Bolt M16×1.5×50 (color zinc)	1	100N.m

PROCEDURE:

●Rear auxiliary mud plate assembly

Remove the bolt (1) at the bottom of the rear sub-slab assembly and remove the spring washer (2) and flat washer (3).

After holding the rear sub-mud assembly in one hand, remove the upper bolt (1) and remove the spring pad (2) and flat pad (3). Place the rear sub-mud assembly properly, taking care not to pull the cable.

●Sprocket assembly

Use a #21 sleeve to loosen the bolt (4).

Use a special hook wrench to turn the eccentric chain adjuster at the arrow indication. The counterclockwise direction is to tighten the chain, and the clockwise b direction is loose.

The chain sag is 18~25mm. If it is too large, it will cause the chain to be accidental or damage the engine. If it is too small, it will aggravate the wear of the chain and sprocket.

After adjusting the chain, restore it and pay attention to the torque of the bolt (4).

CAUTION:

- The upper bolt can only be removed after holding the rear mud plate assembly; Do not pull the cable
- The torque of the bolt (4) is 100N.m.
- The chain must be checked regularly for excessive wear; the chain should be cleaned and properly lubricated regularly.

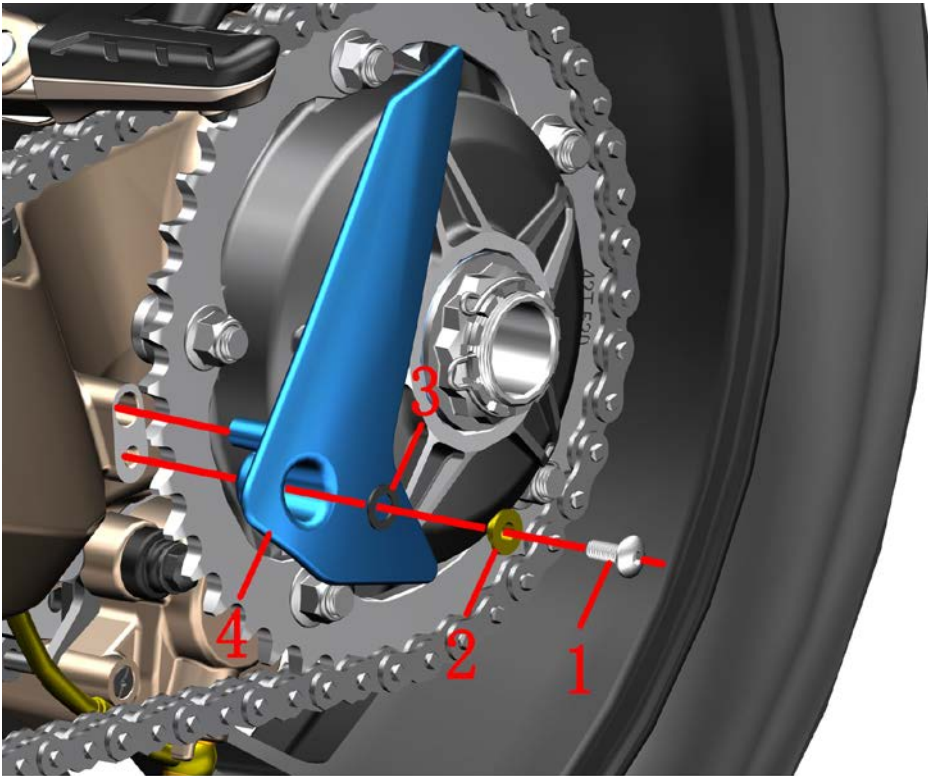


Fig.2 Rear wheel, swinging arm assembly		Sprocket baffle	CHK	
			ADJ	
NO.	PART NO.	PART NAME	QTY	CAUTION
1	1251100-101000	Non-standard Bolt M6×12 (304 stainless steel)	1	
2	1274100-057095	Bush φ6.2×φ8.4×3.5+φ14×1.5	1	
3	1244100-052000	Gum cushion, bush (φ8.5×φ14×1)	1	
4	4044201-263063	ZT310-R1 sprocket baffle (bright blue)	1	blue
	4044201-264021	ZT310-R1 sprocket baffle (bright black)		black
	4044201-265061	ZT310-R1 sprocket baffle (bright purple)		purple
	4044201-266041	ZT310-R1 sprocket baffle (bright green)		green
	4044201-263015	ZT310-R1 sprocket baffle (jewel red)		jewel red
	4044201-520031	ZT310-R1 sprocket baffle (bright yellow)		yellow

PROCEDURE:

● Sprocket baffle

Remove the bolt(1), remove the flange bushing (2), cushion rubber(3); finally remove the sprocket baffle(4).

CAUTION:

● When reassembling, pay attention to the limit boss on the sprocket baffle to be inserted into the limit hole of the rear fork.

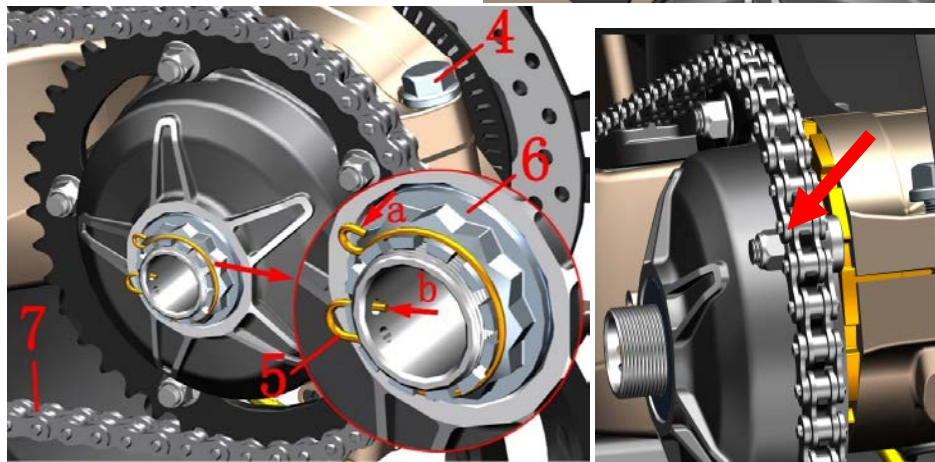
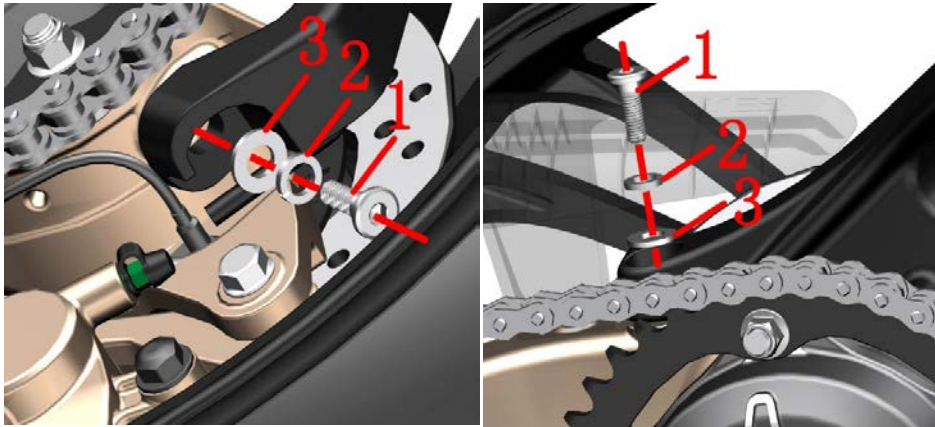



Fig.3 Rear wheel, swinging arm assembly		Sprocket assembly 1	CHK	
			ADJ	
NO.	PART NO.	PART NAME	QTY	CAUTION
1	1251100-117093	Non standard hex socket bolt M8×25	2	
2	1250501-004091	GB93φ10 (white zinc)	2	
3	1250503-006091	GB97.1φ10 (white zinc)	2	
4	1251100-204000	Non standard bolt M16×1.5×50(color zinc)	1	100N.m
5	1094100-062000	M35 nut locking spring	1	
6	1251300-070000	Non standard nut M35×1.5(environmental color zinc)	1	200N.m
7	1080200-055000	ZT250—R 114 chain (CHOHO520HX/Open type)	1	
8	1080200-073000	520HX middle perforated transition link	1	After sales

PROCEDURE:

●Rear auxiliary mud plate assembly

Remove the bolt (1) at the bottom of the rear sub-slab assembly and remove the spring washer(2) and flat washer (3).

After holding the rear sub-mud assembly in one hand, remove the upper bolt(1)and remove the spring washer(2) and flat washer(3). Place the rear sub-mud assembly properly, taking care not to pull the cable.

●Sprocket assembly

Use the No. 21 sleeve to loosen the bolt(4) without removing it.

Pull the locking spring (5)a radially out of the groove on the nut(6)and pull it out in the axial direction; remove the locking spring(5) in the direction indicated by the arrow b.

One person stepped on the brake pedal to prevent the rear wheel from rotating. One person removed the nut(6) with a 42mm 12-angle sleeve + 280N.m torque wrench.

Use a special hook wrench to turn the eccentric chain adjuster at the arrow direction clockwise to remove the chain from the sprocket.

Remove the sprocket assembly.

●Chain

Rotate the chain on the left to find the clasp. Grind off the angle grinder to remove the chain(7).

Punch links(8) can be purchased on the official website or other online shopping platforms. A dedicated chain installation tool is required and the tool must be purchased by yourself. The card for the transition link must be on the outside.

CAUTION:

●The upper bolt sits only after the rear mud plate assembly needs to be dragged down; you can't pull the cable.



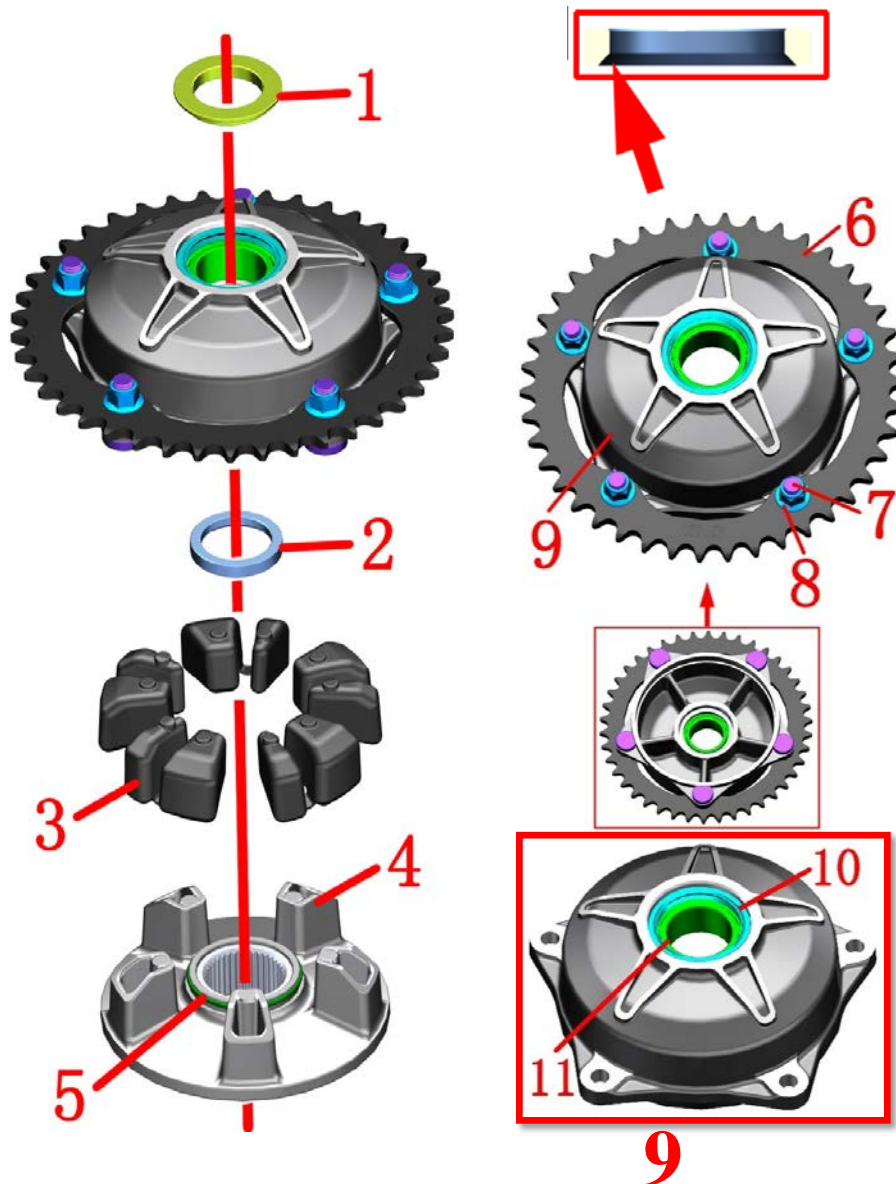



Fig.4 Rear wheel, swinging arm component		Sprocket assembly 2	CHK	
			ADJ	
NO.	PART NO.	PART NAME	QTY	REMARKS
1	1274100-108000	Bushing Φ45×Φ35×5.5+Φ54×Φ35×2	1	
2	1274100-105000	Bushing Φ46×Φ35×7.3	1	
3	1244100-087000	ZT310-R1 single rear fork sprocket buffer rubber	5	
4	1094200-013000	ZT310 single rear fork sprocket seat inner shell	1	
5	1244200-088000	O-ring (Φ52.4×2.6)	1	
6	1274200-120000	ZT310 single rear fork arm 520-42T sprocket	1	
7	1251100-190000	Non standard bolt M10×1.5×30 (color zinc)	5	
8	1251300-057093	Non standard nut M10×1.5 (DACROMET)	5	
9	4024200-047000	ZT310 single rear fork sprocket seat shell assembly (including bearing / oil seal)	1	
	4024200-086051	ZT310 dark gray single rear fork sprocket seat shell assembly (including bearing / oil seal)		
10	1244200-045000	ZT310 single rear fork arm Φ45×Φ55×5 oil seal	1	after-sale
11	1250601-095000	DA355520-2RS angular contact bearing	1	

PROCEDURE:

● Sprocket assembly

Remove the bushing(1) to separate the inside and outside of the sprocket seat.

Remove the bushing(2). When reassembling, pay attention to the bushing(2). The larger chamfered end faces the inner shell of the sprocket seat.

Remove 5 pieces of sprocket cushion rubber (3) from the outer casing assembly(9).

Remove the O-ring(5) from the inner casing (4).

The outer casing assembly(9) already contains an oil seal(10) and a bearing(11) which are attached to the outer casing for interference, and it is not recommended to disassemble the assembly if necessary.

● Sprocket

Remove the 5 nuts(8), remove the 5 bolts(7), and remove the sprocket(6). When reassembling, pay attention to the sprocket with the word one facing outward.

CAUTION:

● The notch position of the bolt (7) is facing inward.

● The sprocket seat housing assembly(9) already contains an oil seal and bearings. The distance from the upper end surface of the bearing to the upper end surface of the outer casing is 7.9 to 8.0 mm.

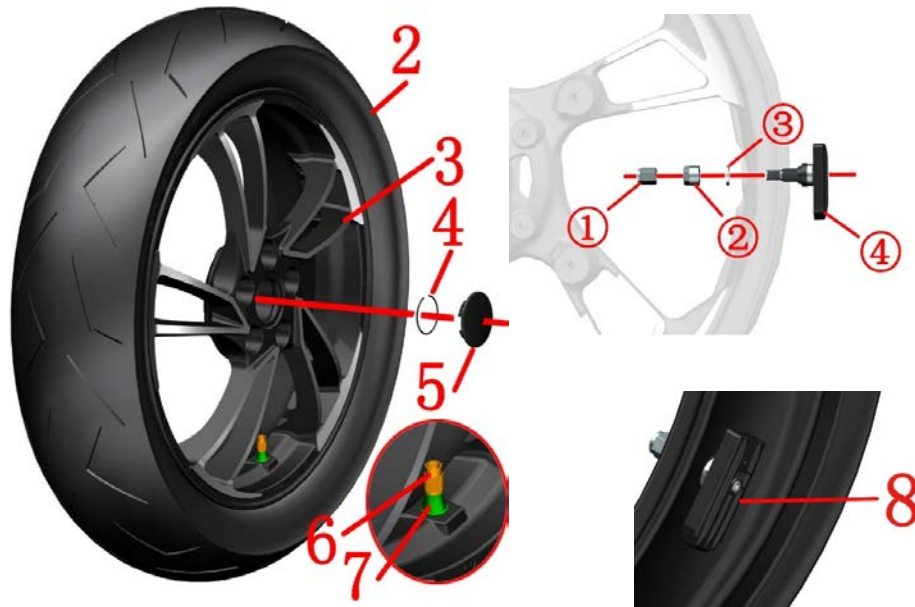



Fig.5 Rear wheel, swinging arm component		Rear wheel component	CHK	
			ADJ	
NO.	PART NO.	PART NAME	QTY	REMARKS
1	1251300-071000	Non standard nut M12×1.5 (chromed)	5	110N.m
2	1230100-480000	160/ 60R17 (CM638R) environmentally friendly vacuum rear tire	1	
3	1094200-012000	ZT310-R1 single side black rear wheel black (4.5×17)	1	
	1094200-030000	ZT310-R1 single rocker arm pearl bright blue (4.5×17)		
	1094200-032000	ZT310-X1 single rocker arm bright yellow rear wheel (4.5×17)		
	1094200-031000	ZT310-R1 single rocker arm jewel red rear wheel (4.5×17)		
4	1260100-238000	ZT310-R1 rear wheel sign spring	1	
5	1210142-000100	ZT310-R1 single rocker black rim sign	1	
	4044201-277063	ZT310-X1 single rocker wheel rim sign (bright blue)		
	4044201-279031	X1 single rocker wheel rim sign (bright yellow)		
	4044201-278015	ZT310-R1 single rocker wheel rim sign (jewel red)		
6	1230200-006000	HJ100—D tire valve cap	1	Delphi EFI
7	1230100-047000	HJ125—3A environmental tubeless tire valve	1	
8		ZT310 tire pressure sensor	1	Bosch EFI

PROCEDURE:

●Rear wheel assembly

Remove the 5 nuts with a 200N torque wrench and a 19 gauge sleeve.

Support the vehicle horizontally and let the rear wheels leave the ground.

Remove the rear wheel assembly.

Extend the tool from the left to remove the rim sign (5) from the rim and remove the plaque spring (4) from the placard(5).

●Tire and rim assembly

Delphi EFI: Disassemble tire valve cap(6) . Deflate the tire with tools. Then disassemble the rear tire(1) with professional tire changing machine. Disassemble the tire valve(7) with suitable tool.

Bosch EFI: Unscrew the nut ① to release the air, unscrew the nut ②, and take out the flat gasket ③. Then use a professional tire puller to remove the rear tire (1). Finally, take out the sensor ④.

●Maintenance

Tire: Check regularly the tire on cracks and air pressure.If the tire is ware to the marker, change the tire with same specification. See details in user manual. Ingradient of tire include semi hot melt rubber. Area with too high temperature is not suitable. If temparature of outdoor is too low, storing the motorcycle in warm place or indoor is suggested in order to avoid frost crack. Normal temperaturestandard 250kPa.

Rim: Check if the rim has deformation or crack. Support the rim horizontally and check if it can rotate smoothly.

Disc brake plate: Thickness can not be less than 4mm. If not, change it.

CAUTION:

●Only bike with Bosch EFI are equipned with standard (8) tire pressure sensors

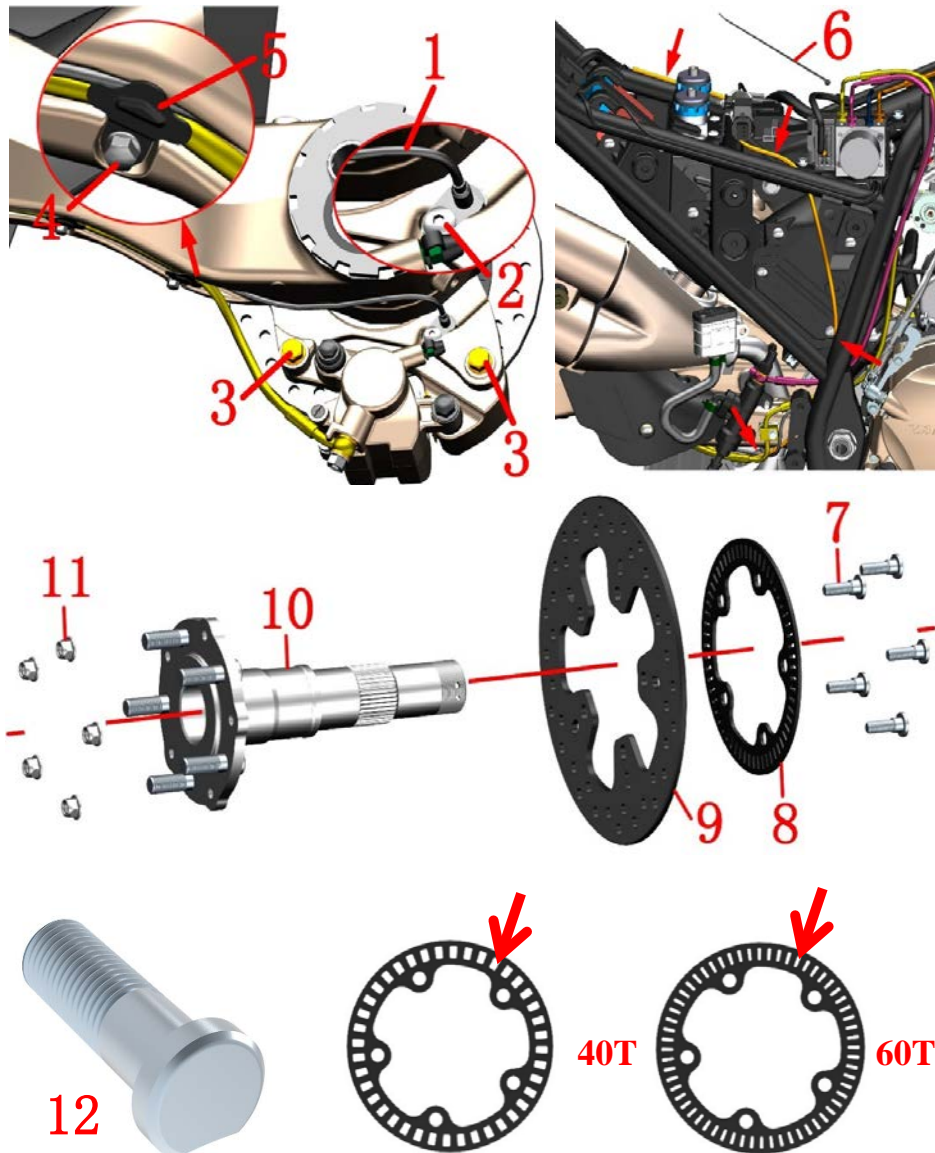



Fig.6 Rear wheel, swinging arm component		Rear axle assembly	CHK	
			ADJ	
NO.	PART NO.	PART NAME	QTY	REMARKS
1		Wheel speed sensor	1	
2	1251100-102000	Non-standard bolt M6×16 (304 stainless steel)	1	
3	1251100-123093	Non standard M8×25(color zinc)	2	
4	1250104-006097	GB16674M6×12 (chromed/HH)	4	
5	1274200-119000	Single rocker rear flat fork tubing bracket	4	
6	1224100-037000	0 grade flame retardant cable tie (black 3.6×295)	4	
7	1251100-117093	Non standard hex socket bolt M8×25	5	
8	1274200-058000	ABS gear ring(60T)	1	
	1274200-168021	ABS gear ring(40T)		
9	1100100-419000	ZT310—R1 rear disc brake plate (230×4.5)	1	
10	4024200-048000	ZT310 single rocker rear axle assem (with bolts)	1	
11	1250305-002091	GB6187.1M8 (white zinc)	5	
12	1251100-191000	Non standard bolt M12×1.5×38 (color zinc)	5	after-sale

PROCEDURE:

●Rear axle outer assembly

To remove only the rear axle assembly, simply remove the 2 bolts (3) and remove the caliper from the mounting plate. Remove the rear axle assembly.

To replace the rear fork, you need to continue with the following steps:

Remove the bolt (2) and remove the wheel speed sensor (1) from the rear disc brake caliper mounting plate.

Remove the 4 bolts (4) and remove the tubing bracket (5).

Cut the 4 straps (6) at the arrow indications, and find the inside of the left rear skirt and remove the joint of the rear slab adapter cable. Locate the wheel speed sensor connector near the right air filter and remove it, and remove the wheel speed sensor (1).

●Rear axle assembly

Fix the bolt (7) with a hexagon socket and then remove the nut (11) with a sleeve.

Remove the induction ring gear (8) and the disc brake disc (9) from the rear axle assembly (10).

The rear axle assembly (10) already includes the rear axle and 5 bolts (12). The bolts (12) and the single rocker rear axles have an interference fit. If the bolts are removed and replaced separately, the connection must be firm and reliable, otherwise it may loosen and cause accidents. The bolt heads of the early production models are round and can be replaced directly with the trimmed state of the later production.

CAUTION:

●The replacement of the bolts (12) separately must be secure and reliable.

●Some of the early production of the vehicle's induction ring gear is 40 teeth, which is clearly distinguishable from the 60-tooth.

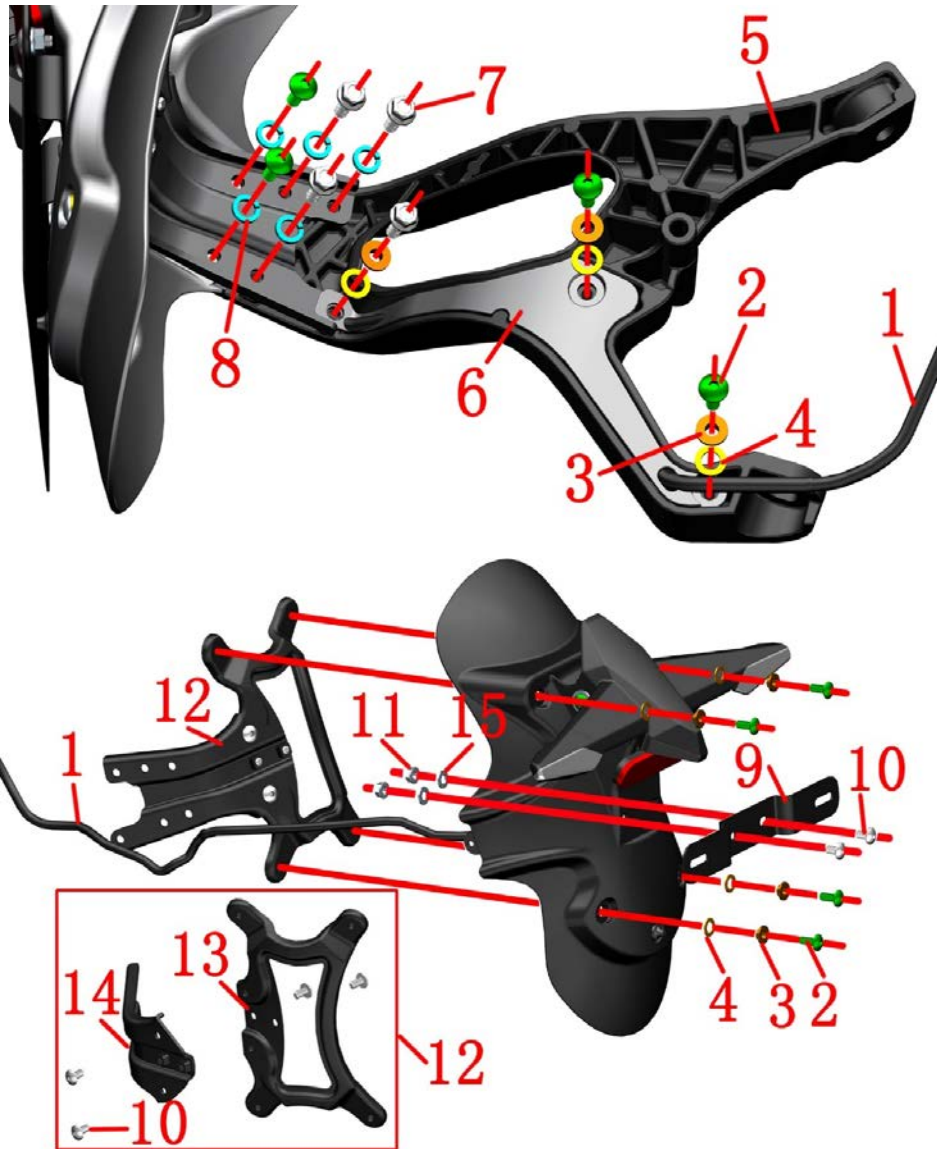


Fig.7 Rear wheel, swinging arm assembly		Rear sub-mud assembly 1		CHK	CAUTION
				ADJ	
NO.	PART NO.	PART NAME		QTY	
1	1184200-030000	ZT310—R vice fender extension cable(L=2000)		1	
2	1251100-102000	Non-standard bolt M6×16 (304 stainless steel)		8	
3	1274100-057095	Flanging bushing φ6.2×φ8.4×3.5+φ14×1.5		7	
4	1244100-052000	Cuff bushing cushioning rubber (φ8.5×φ14×1)		7	
5	4024200-119022	ZT310-R1 rear sub-mud aluminum alloy bracket (dump black)		1	
6	1224200-106000	ZT310-R1 rear auxiliary mud board retaining plate		1	
7	1250105-137093	GB5789M6×16 (environmental color)		4	
8	1250501-007093	GB93φ8 (environmental color)		5	
9	1270300-039000	HJ125—6 Rear license bracket		1	
10	1251100-101000	Non-standard bolt M6×12 (304 stainless steel)		6	
11	1250303-010093	GB6177.1M6 (environmental color)		2	
12	4024200-102000	ZT310-R rear sub-plate iron bracket (Improvement)		1	
13	4024200-036000	ZT310-V rear auxiliary fender iron support rear section		1	after-sale
14	4024200-101000	ZT310 rear auxiliary fender iron support front section		1	
15	1250503-021093	GB97.1φ8 (environmental color)		2	

PROCEDURE:

●Retaining plate

Remove the bolts(2)and (7), remove the flange bushing (3) the rubber pad(4), and finally remove the retaining plate(6).

●Aluminum alloy bracket

Remove the 2 pcs of bolt(7) and 3 pcs of (2) , then remove 5 pcs of spring washer(8).

●Back license plate bracket assembly

Remove the bolt(10) and nut(11) at the license bracket(9) and remove the license bracket(9).

●Rear auxiliary mud plate iron bracket

Hold the rear turn signal assembly, remove the bolt(2), and remove the flange bushing(3) and rubber pad(4).

Remove the rear sub-mud iron bracket(12)and rear turn signal assembly.

The old one-piece iron bracket has been discontinued, and the integrated iron bracket assembly (12) needs to be replaced. The assembly already contains the front section (14), the rear section (13) and 4 bolts (10).

CAUTION:

●Do not pull the cable hard when removing the vice fender connecting cable.

●When reassembling, first check if there is any pressure on the wire to prevent short circuit when tightening the bolt.

●2 pcs GB97.1φ8 have been added to motorcycle manufactured by July 2021.Early production can add by yourself.

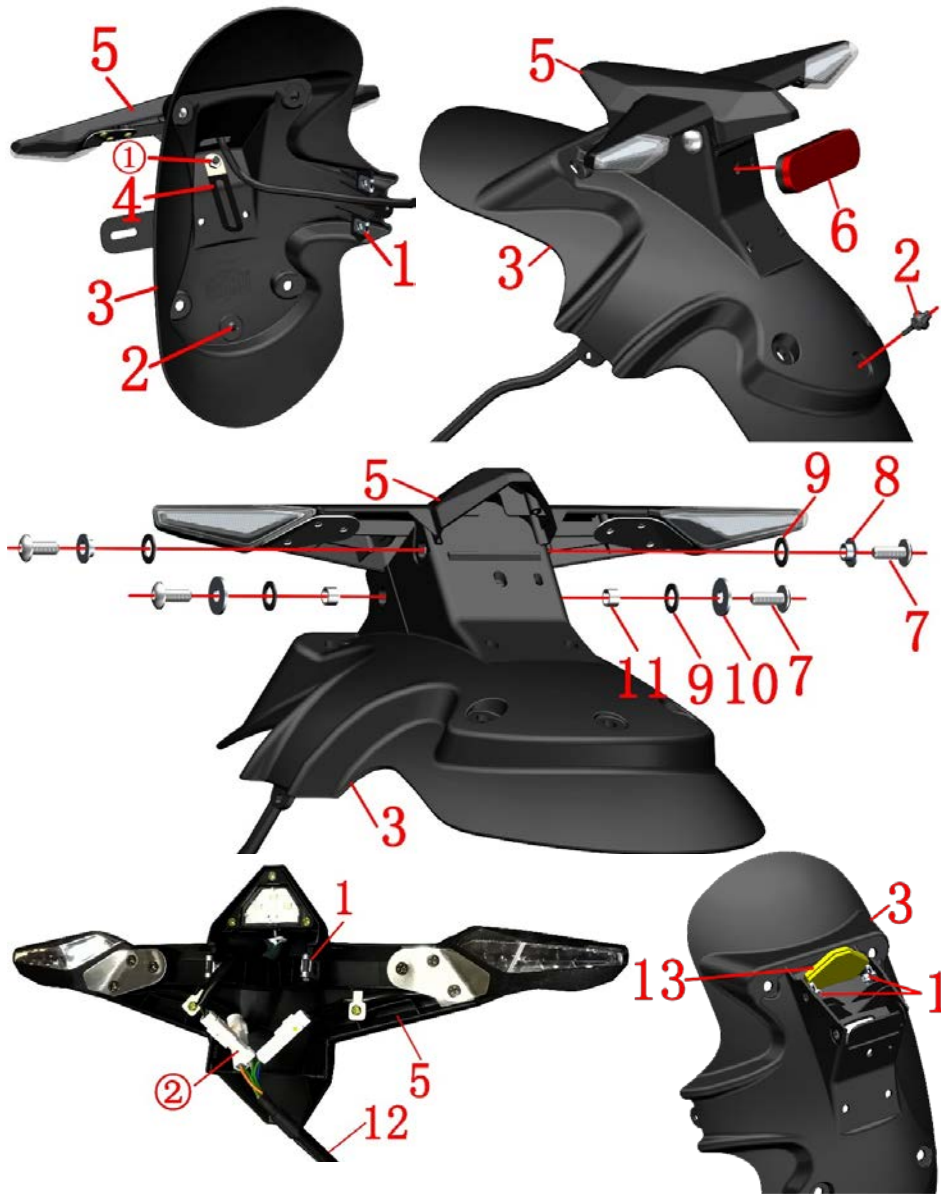


Fig.8 Rear wheel, swinging arm component		New rear sub-mud component 3		CHK	CAUTION
				ADJ	
NO.	PART NO.	PART NAME		QTY	
1	1251300-063093	Plywood M6×11×15 (environment color)		6	
2	1244100-006000	ZT250—SRear license plate buffer rubber		1	
3	1224200-091000	ZT310—RRear auxiliary mudguard fender (250R、310R/X/T)		1	
4	1270300-273000	φ8 Clip (L=73)		1	
5	1174200-035000	ZT310Rear turn signal (including license plate light)		1	
6	1174100-002000	ZT250—S Back reflector		1	
7	1251100-102000	Non-standard boltM6×16 (304stainless steel)		4	
8	1274100-057095	Flanging bushingφ6.2×φ8.4×3.5+φ14×1.5		2	
9	1244100-052000	Flange bushing cushion rubber (φ8.5×φ14×1)		4	
10	1250502-010093	GB96.1φ6 (environment color)		2	
11	1274100-018000	ZT250—S Muffler anti-scalding bushing		2	
12	1184200-030000	ZT310—R Rear vice fender extension cable(L=2000)		1	
13	1244200-082000	ZT310 Rear auxiliary mud board retaining rubber plug		1	

PROCEDURE:

●Back reflector, license plate cushion rubber

Flip to the back, remove the nut① that comes with the rear reflector⑥, remove the clamp④ and the back reflector. Remove the plate cushion rubber② and remove the 2 plywood nuts① on the back of the rear mudguard fender③.

●Steering lights, fender sub-assemblies

Remove the bolts⑦ on the left and right sides, and remove the flange bushing ⑧, cushion rubber⑨, anti-scalding bushing ⑪ and gasket⑩. Disassemble the turn signal and fender subassembly. Note that the sub-mud switch cable⑫ cannot be forcibly pulled.

●Fender sub-assembly

Remove the 2 plywood nuts① and retaining rubber plug⑬ from the fender subassembly③.

●Turn signal subassembly

Remove the 2 plywood nuts① from the turn signal⑤. Remove the 3 joints of② and remove the sub-mud switch cable⑫.

CAUTION:

●Do not pull the cable hard when removing the sub-mud switch.

●When reassembling, check if there is any pressure on the wire to prevent it from tightening. Short circuit caused by bolts. Pay attention to the lamp connector, do not insert the wrong, turn left Green + orange; right turn signal is green + blue; license plate light is green + pink.





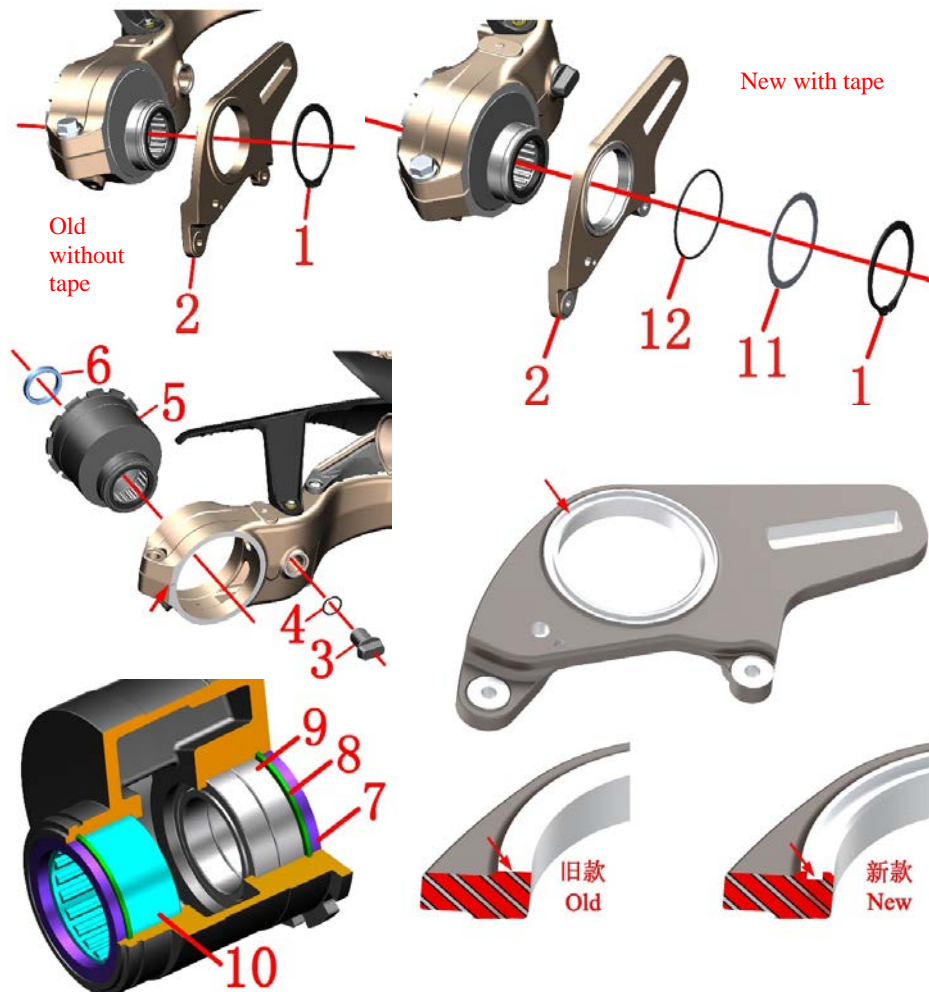
Fig.9 Rear wheel, swinging arm component		Rear turning light parts for after sales service		CHK	
				ADJ	
NO.	PART NO.	PART NAME		QTY	CAUTION
1	1174200-020000	ZT310-X Rear right turning light		1	
2	1251200-056095	Non-standard cross self-tapping screw ST3.8×10 (military green)		6	
3	1274200-331000	ZT310-X rear right turn signal fixing bracket		1	
4	1274200-332000	ZT310 rear turn signal fixing wire clip		2	
5	1251200-057093	Non-standard cross self-tapping screw ST3.0×7 (color zinc)		5	
6	1224200-120000	ZT310 rear turn signal bracket		1	
7	1174200-021000	ZT310-X Liensed lights		1	
8	1274200-330000	ZT310-X rear left turn signal fixing bracket		1	
9	1174200-019000	ZT310-X Rear left turning light		1	

PROCEDURE:

- Rear turning light （license lamp included）
Grip the rear turning light holder (6) then disassemble bolts(5) on the license lamp(7).
Disassemble 3pcs bolts(2) on the diagram left side, and then dismantle left fixing bracket(8) ;disassembly the screw(5) and then reomove the clip(4),take off the left turning light(9).Follow the steps above dismantle right fixing bracket(3), clip(4) and right turning light(1).

CAUTION:

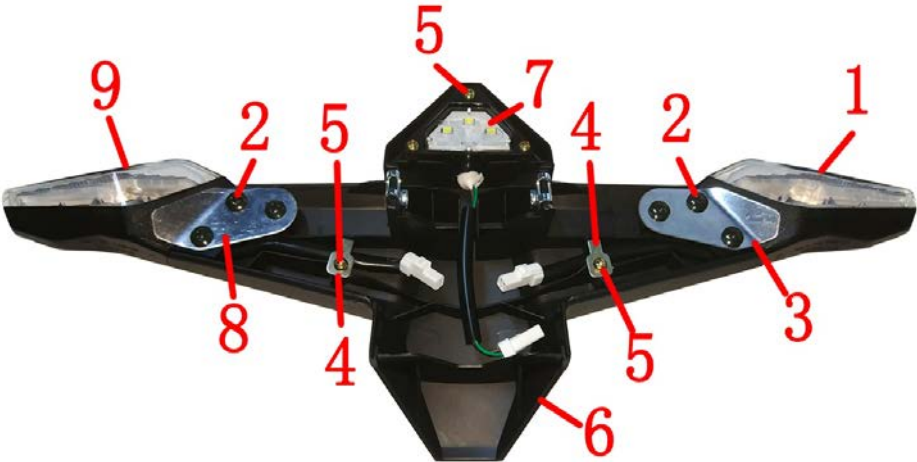- Avoid fasterning the bolt on the cable while reassembling in case of shrt circuit.

**CAUTION:**

● If you need to replace the chain adjuster, please first determine whether your motorcycle is new or old version. The new disc brake mounting plate has one more groove than the old disc brake mounting plate. If the old model replaces the chain adjuster, then you also need to buy the new disc brake mounting plate (2), washer (11), O-ring (12). Otherwise it will cause abnormal noise. If it is a new replacement chain adjuster, just buy the chain adjuster. The new and old disc brake mounting plates are same.

Fig.10 Rear wheel, swinging arm component		Chain adjuster assembly	CHK	
			ADJ	
NO.	PART NO.	PART NAME	QTY	CAUTION
1	1250700-009000	Shaft type A circlip $\phi 75 \times 2.5$	1	
2	1032142-070000	Single rocker rear disc brake mounting plate	1	
	4024200-070051	Single rocker rear disc brake mounting plate (matte dark gray)		
3	1274200-095000	Single rocker rear disc brake mounting plate limit block	1	
	1100100-732051	Single rocker rear disc brake mounting plate limit block (matte dark gray)		
4	1244200-066000	O-ring seal ($\phi 22.2 \times 2.4$)	1	
5	4024200-046000	Single rocker eccentric chain adjuster assembly	1	
6	1274100-104000	Bushing $\Phi 50 \times \Phi 40 \times 7.5$	1	
7	1244200-044000	ZT310 single rocker arm $\Phi 50 \times \Phi 62 \times 5$ oil seal	2	Eccentric chain adjuster assembly after sale
8	1250700-008000	Hole type A circlip $\phi 62 \times 2$	2	
9	1250601-094000	GBT 276-61908-2RS/P6 deep groove ball bearing	2	
10	1250602-034000	NK50/25 needle roller bearing	1	
11	1251500-096000	$\phi 90 \times \phi 76 \times 1$ washer	1	
12	1244200-105000	O-ring $\phi 80 \times 2.65$ (inner diameter \times wire diameter)	1	

PROCEDURE:

● Disc brake mounting plate

The old shaft used circlip plier to remove the retaining ring (1); remove the disc brake mounting plate (2). For the new model, first remove the retaining ring (1) with a shaft and a circlip plier; then remove the washer (11) and O-ring (12); and finally remove the disc brake mounting plate (2).

Take the lower limit block (3) and remove the seal ring (4).

● Chain adjuster assembly

After removing the bushing (6) remove the chain adjuster assembly (5) from the rear fork. If you have difficulty removing it, you can use a flat-blade screwdriver to insert the slot at the arrow indication, and you can open it with a little force.

After removing the bushing (6), remove the chain adjuster assembly (5) from the rear fork. If you have difficulty removing it, you can use a flat-blade screwdriver to insert the slot at the arrow indication, and you can open it with a little force.

● Chain adjuster assembly bearing maintenance

It is recommended to inspect, maintain and clean the bearings every 6,000 km. After removing the chain adjuster assembly according to the previous steps, clean the bearings inside with gasoline or diesel. Carefully check the bearings for damage, smooth rotation, and noise. After confirming the pass, wipe it with a clean, lint-free cloth and re-apply the grease evenly on the bearing.

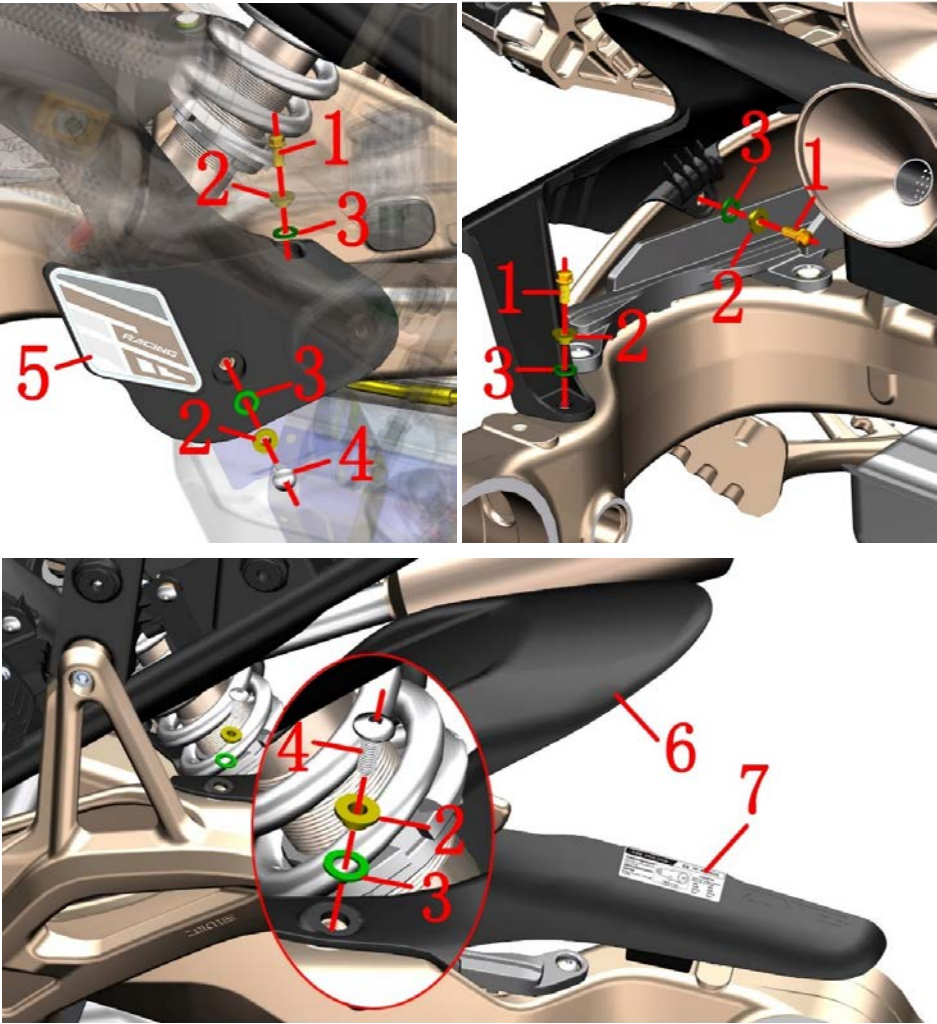


Fig.10 Rear wheel, swinging arm component		Rear mud board	CHK	
			ADJ	
NO.	PART NO.	PART NAME	QTY	CAUTION
1	1250104-006097	GB16674M6×12 (chromed/HH)	3	
2	1274100-057095	Flanging bushing φ6.2×φ8.4×3.5+φ14×1.5	5	
3	1244100-052000	Cuff bushing cushioning rubber (φ8.5×φ14×1)	5	
4	1251100-102000	Non-standard bolt M6×16 (304 stainless steel)	2	
5	1210342-424000	ZT310 rear mud board decal (RACING)	1	
6	1224200-103000	ZT310-R1 rear mud board	1	
7	1210342-449000	ZT310-X1 chain decal	1	

PROCEDURE:

●Rear mud board

Remove the bolt (1) from the gap above the front right side of the rear mud plate and remove the bushing (2) and the cushion rubber (3).

Remove the bolt (4) on the right side and remove the bushing (2) and cushion rubber (3).

Remove the bolt (1) on the inside of the left inner side and remove the bushing (2) and the cushion rubber (3).

Remove the bolt (1) at the rear left side and remove the bushing (2) and cushion rubber (3).

Hold the inner mud plate (6), remove the bolt (4) above the front left side, and remove the bushing (2) and the cushion rubber (3).

The applique (5) and the chain decal (7) can be heated back and forth by a hot air gun, and the applique is torn off from the inner mud plate after the heat viscosity is lowered.

CAUTION:

●When heating and tearing the applique, be careful not to align the same part for a long time to prevent damage to the inner mud board.

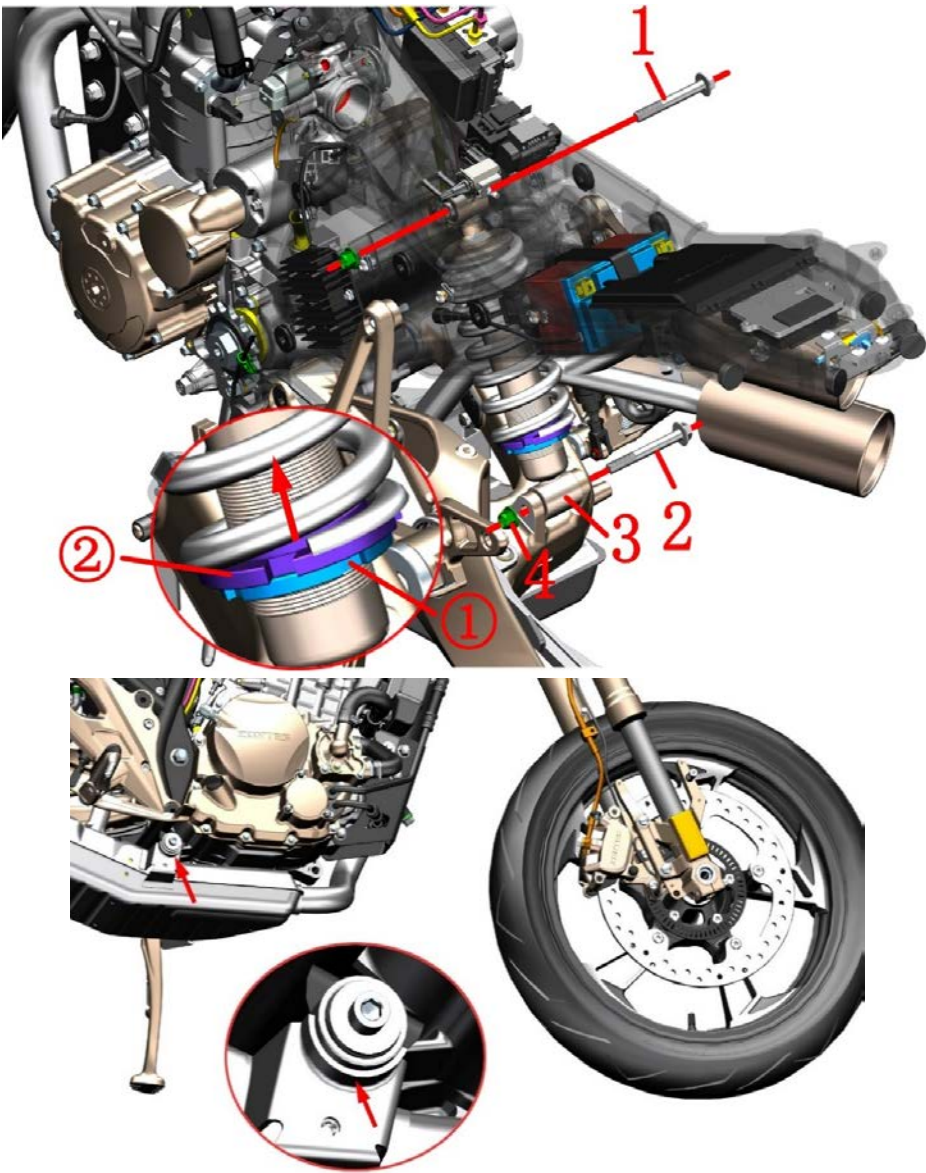


Fig.12 Rear wheel, swinging arm component		Rear shock absorber		CHK	
				ADJ	
NO.	PART NO.	PART NAME		QTY	CAUTION
1	1251100-085093	Non-standard bolt M10×1.5×75 (Dacro)		1	
2	1251100-132003	Non-standard bolt M10×1.5×80 (Dacro)		1	
3	1114200-033000	ZT310—R Rear shock absorber		1	
4	1251300-057093	Non-standard bolt M10×1.5 (Dacro)		2	

PROCEDURE:

●Rear shock absorber

After the side bracket is lowered, one person's left hand will kill the direction to the left while the right hand grips and the foot pedals to tilt the vehicle to the left; the other person uses a wooden bench to press the muffler installation point on the right side of the vehicle (as shown in the lower left figure) to support the vehicle. The wheel is slightly off the ground. After the vehicle is supported, one person uses the sleeve to hold the heads of the bolts (1)and (2) respectively, and one person removes the nut (4) with a sleeve.

Person 1 shakes the rear wheel up and down slightly . Person 2 drags out bolt(2).

Person 1 holds the motorcyclefirmly . Person 2 lifts the rear shock absorber(3) towards the arrow direction and drag out bolt(1). Take off the rear absorber at last.

●Adjust the rear absorber

Use hook wrench to loosen adjustable nut① and rotate adjustable nut②. If the nut is rotated towards the arrow direction, the spring becomes harder. Conversely, the absorber is softer. Tighten the adjustive nut① until the absorber is under suitable status. Please adjust in a reasonable range, riding experience would be influenced by either the absorber is too soft or too hard.

CAUTION:

- Disassemble cushion,side cover,right side cover, bolts on front parts of rear skirt and rear inner fender.
- Use suitable tool to support the motorcycle. Avoid accidents caused by falling down. Single person operate it is prohibited.
- All the standard parts need to reach standard torque while reassembling.

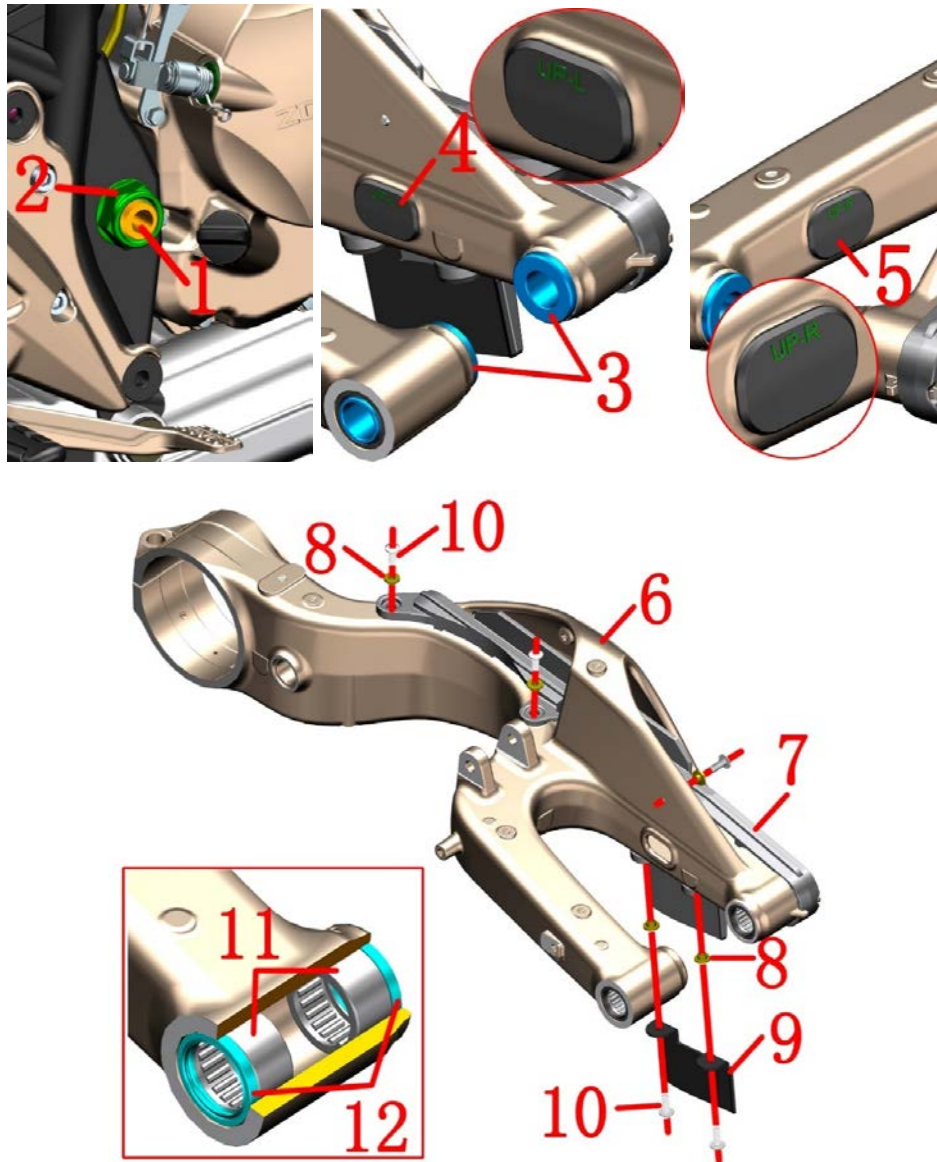


Fig.13 Rear wheel, swinging arm component		Rear wheel assembly		CHK	CAUTION
				ADJ	
NO.	PART NO.	PART NAME	QTY		
1	1252200-040000	ZT310-R1 rear flat fork hollow shaft	1		
2	1251300-067000	ZT250—R rear wheel axle nut	1		110±5N.m
3	1274100-102000	Single rocker rear fork bushing	2		
4	1244200-086000	ZT310 single rocker arm aluminum alloy flat fork left dustproof rubber plug	1		
5	1244200-085000	ZT310 single rocker arm aluminum alloy flat fork right dustproof rubber plug	1		
6	4024200-045000	ZT310 single rocker arm aluminum alloy rear fork assembly (including bearing / oil seal)	1		
	4074200-003051	ZT310 Dark gray single rocker arm aluminum alloy rear fork assembly (including bearing / oil seal)			
7	1244200-055000	ZT310 single arm rear fork wear block	1		
8	1274100-057095	Bush φ6.2×φ8.4×3.5+φ14×1.5	5		
9	1274200-127000	Single arm rear fork anti-wear block fixing bracket	1		
10	1251100-102000	Non-standard Bolt M6×16 (SS)	5		
11	1250602-035000	HK2516 needle roller bearing	4		Rear fork assembly after sale
12	1244200-079000	ZT310 single rocker arm Φ25×Φ32×4 oil seal	4		

PROCEDURE:

●Rear swinging arm assembly

Person 1 hold the head of rear swinging arm axle(1) with socket sleeve. Person 2 disassemble nut(2) with socket sleeve. Person 1 hold the rear swinging arm assembly. Person 2 take off rear swinging arm after disassembling rear swinging arm axle(1) with suitable tool.

Remove the bushing(3), the left dust-proof rubber plug(4), and the dust-proof rubber plug(5) from the rear fork assembly.

●Abrasionproof block of rear swinging arm

Remove the five bolts (10)and the flange bushing(8)with the hexagon socket tool and remove the fixing bracket (9)and the wear-resistant block (7)from the rear fork assembly(6).

●Rear fork after sale

The oil seal(12) and the needle bearing (11) are used for interference compression. Please ensure that they have the ability to disassemble and disassemble.

CAUTION:

●Use suitable tool to support the motorcycle. Avoid accidents caused by falling motorcycle. Single person manipulation is prohibited.All the standard parts need to reach standard torque while reassembling.

●Using iron hammer to punch rear wheel axle, disc brake clamp assembly is prohibitd.

●The left dust-proof rubber plug is stamped with "UP-L", and the right dust-proof rubber plug has "UP-R"; pay attention to the installation direction.

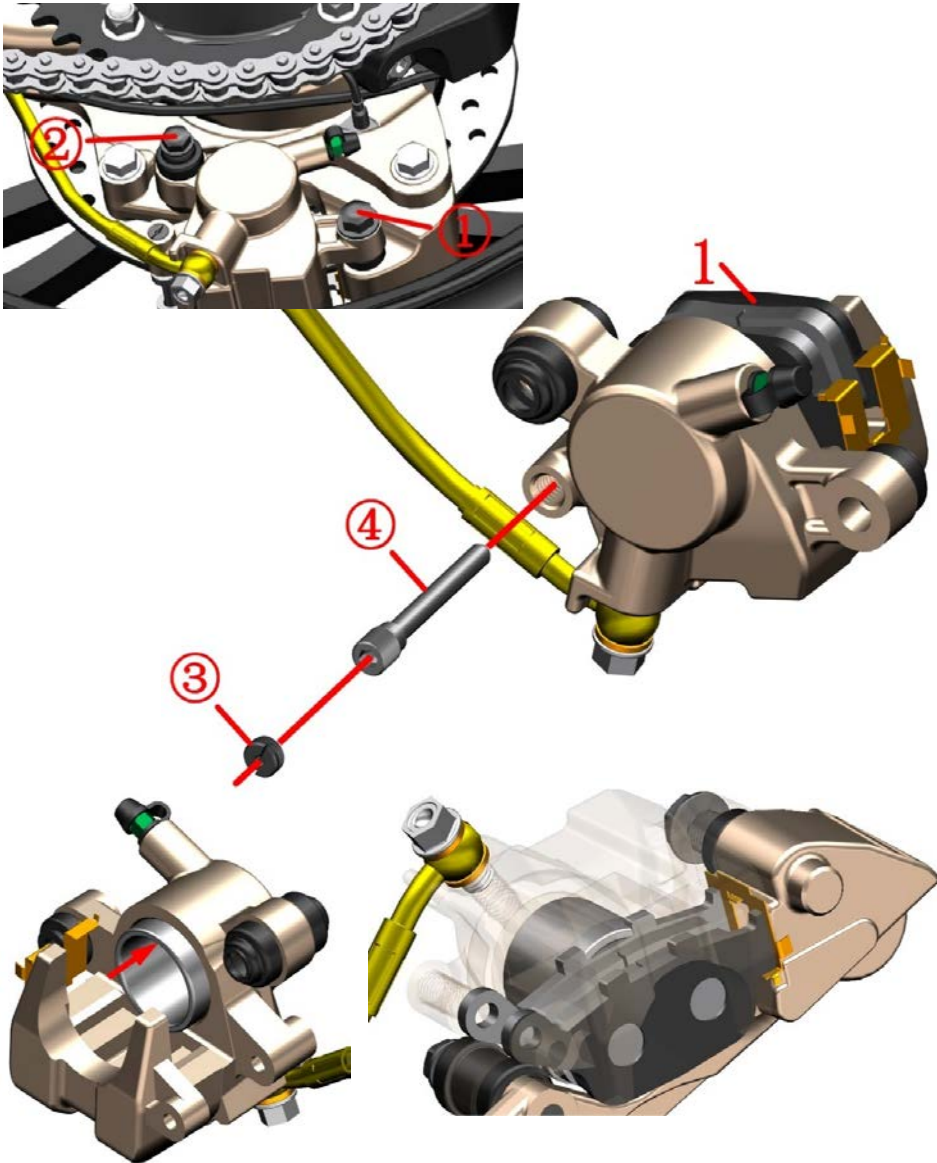



Fig.14 Rear wheel, swinging arm assembly		Change rear brake arresters	CHK	
			ADJ	
NO.	PART NO.	PART NAME	QTY	CAUTION
1	1100100-092000	ZT250—S rear disc brake arrester(HS10)	1	

PROCEDURE:

●Disassemble disc brake arrester

Loosen the upper slide shaft① with a 14 mm sleeve.
Loosen the lower slide shaft② with a 12mm wrench.
Remove the slide shaft and remove the rear brake caliper.
Use strait screwdriver to disassemble nut③.
Tighten the pin axle④ with 5mm hex socket tool.
Take off rear disc brake arrester①.

●Change rear disc brake arrester

Put the piston of clamp towards the direction of arrow to the end. See photo left below. To reduce resistance, you can disassemble the cross bolt on rear disc brake main pump oil cup. Take off the top cover and sealing gasket. Remember to rebound the pister afterwards.
The new arrester must fit tightly the slot. See photo right below.
Tighten the pin axle④ with 5mm hex socket tool.
Tighten nut③ with strait screwdriver.
Tighten the pin axle① with 14mm hex socket tool.Torque is 34N.m.
Use a 12mm wrench to lock the lower slide shaft ②.
Step on braking pedal several times until braking force is recovered.

CAUTION:

- Check regularly the arrester and disc brake plate status.
- To change arresters in qualified mainenance spot are suggested.
- After changing the arrester, adjust the height of braking pedal according to "Foot pedal, gear shift rod assembly" if necessary.
- It needs running-in for about 300km after changing new arresters. During this period, leave enough braking distance while riging.

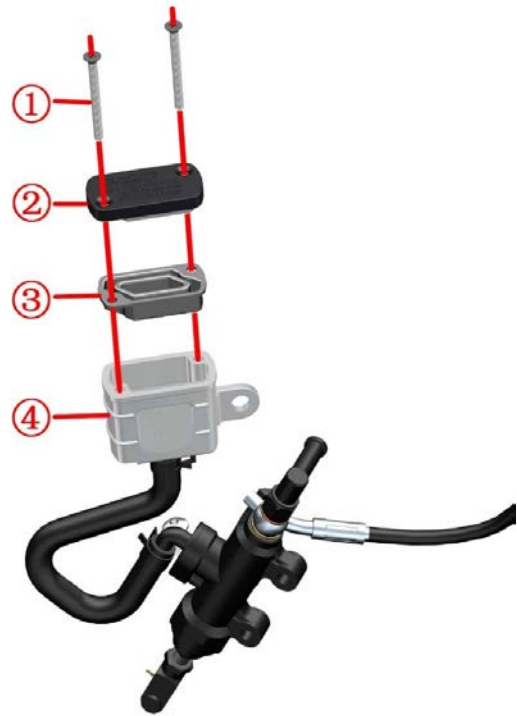
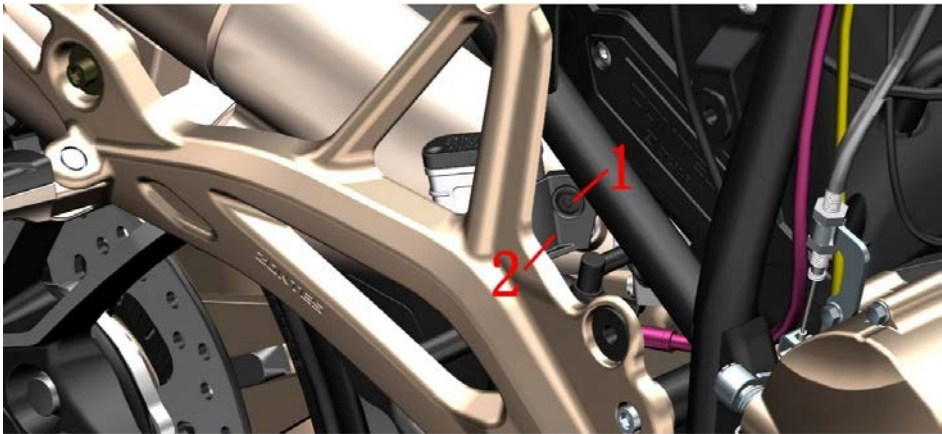


Fig.15 Rear wheel, swinging arm assembly		Rear disc brake main pump adding braking liquid	CHK	
			ADJ	
NO.	PART NO.	PART NAME	QTY	CAUTION
1	1224100-010000	ZT250—S swell nail	1	
2	1224200-055000	ZT310—R rear disc brake oil cup holder	1	

PROCEDURE:

- Add disc brake liquid
Press down the middle part of expanding bolt(1) with a small cross screwdriver. Take off the expanding bolt.
Pull out the oil cup(4); Should always remain above the oil tube interface, parallel to the ground. Avoid braking failure caused by air getting into the oil circulation. Disassemble bolt(1) with cross screwdriver.
Take off oil cup cap(2), sealing gasket(3).
Keep the top of oil cup(4) parallel to the ground. Add DOT4 braking liquid. Ensure the liquid level is between "UPPER" and "LOWER".
While reassemble, pay attention install sealing gasket(3) in correct position and direction.
Step gently on the pedal constantly. Do not ride the motorcycle until the braking force is recovered.

CAUTION:

- Support the motorcycle well on flat ground before checking.
- Check regularly if the braking liquid surface is between "UPPER" and "LOWER".
- If liquid surface is below "LOWER", check the arrester status and confirm if the braking system is leaking.
- If the braking liquid is accidentally swallowed, contact intoxication center or hospital immediately. If it gets into the eye, wash it away with clean water then see the doctor.
- Keep the braking liquid far away from children and pets.
- Flush the oil cup directly with high pressure water is prohibited.
- Mixing water, dust, impurity and liquid of silicic acid or petrol series into the braking liquid is prohibited. Otherwise, the braking system would be damaged.

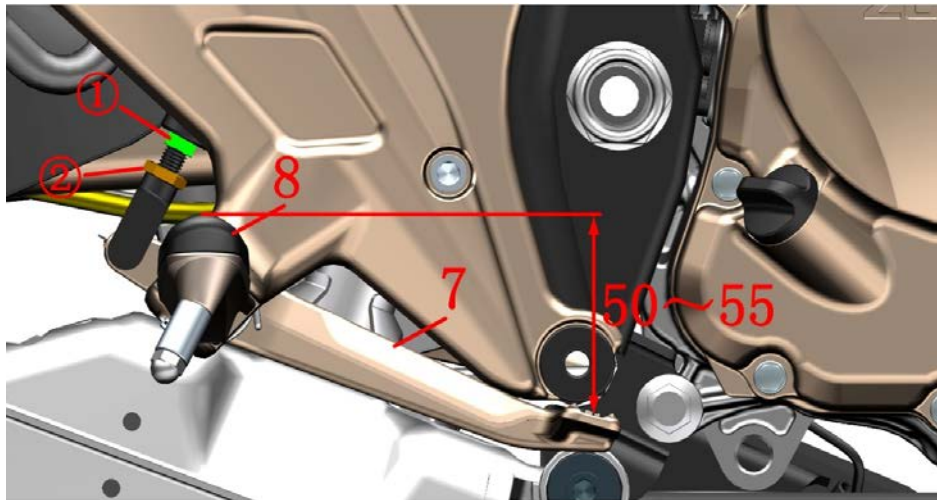
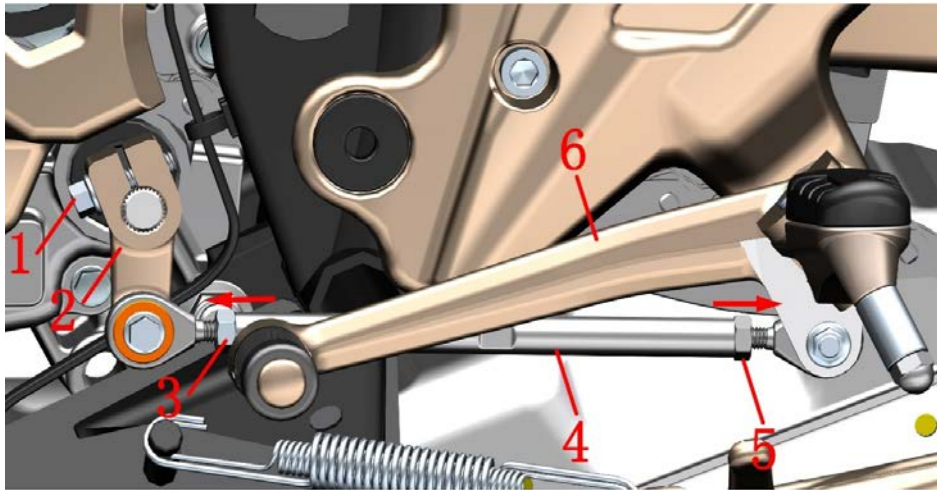



Fig.1 FOOT PEDAL COMPONENT		Adjust the hight of foot pedal		CHK	
				ADJ	
NO.	PART NO.	PART NAME		QTY	CAUTION
1	1251100-061093	M6×22 Hexagon flange bolt 8.8 degree		1	
2	1274100-039000	ZT250—S Gear swift rod spline of Rocker arm		1	
	1271200-163000	ZT250—S Gear swift rod spline of Rocker arm (dark gray)			
3	1250301-020093	GB6170M6（environmental color-zinc）		1	
4	1274200-003000	ZT310—R Gear shift rod adjustment bolt φ10×130		1	
5	1250301-018093	GB6170M6—LH（environmental color-zinc）		1	
6	1274200-160000	ZT310—T rocker arm, gear shift rod		1	
	1271200-162000	ZT310—T rocker arm, gear shift rod (dark gray)			
7	1274200-010000	ZT310—R brake pedal		1	
	1274200-300051	ZT310—R brake pedal (dark gray)			
8	1274200-185000	ZT310—X R, front pedal component (improved)		1	
	1271200-157000	ZT310—X R, front pedal component (dark gray)			

PROCEDURE:

● Adjust the height of gear shift rod

Follow the direction of arrow and loosen Nut(3), Nut(5) with an open spanner. Use 8# open spanner to adjust the gear shift rod adjustment bolt until the height becomes suitable. Then tighten the nuts. If the above-mentioned method can not adjust the gear shift rod to a satisfying position, take off bolt(1) and adjust gear shift rod spline of rocker arm(2) with a straight screwdriver by shoving a little bit the groove in the middle while dragging it out. Reassemble after the height is suitable. Pay attention to the aligning of the groove in the middle.

● Adjust the height of brake pedal

Follow the direction of arrow and loosen Nut(2). Spin the adjustment rod bolt(1) and adjust the brake pedal(7) to 50~55mm below the top part(8). Fix the adjustment rod bolt(1) and tighten Nut(2).

CAUTION:

- Ensure the motorcycle is well supported during manipulation. Avoid falling accident.
- The height of gear shift rod should be adjusted to a suitable range. Otherwise the riding experience would be influenced.
- The height of brake pedal should be adjusted to a suitable range. Otherwise the durance of braking shoe and plate would be influenced. In severe case, ineffective braking is possible.




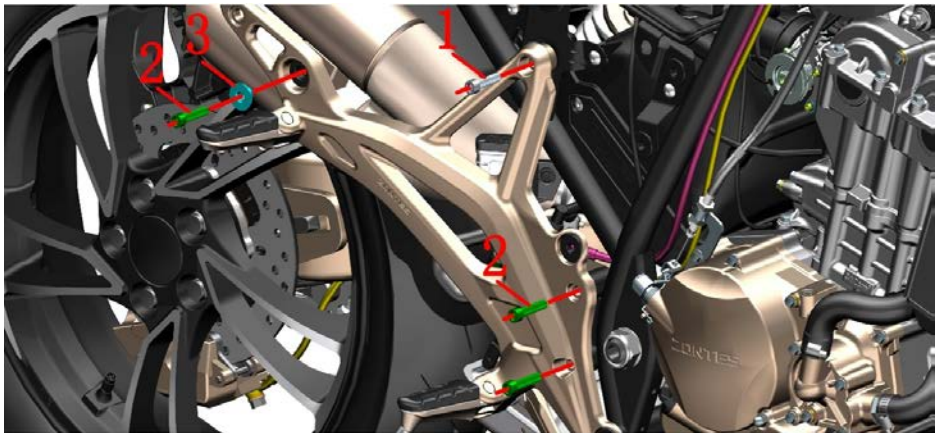


Fig.2 FOOT PEDAL COMPONENT		Right foot pedal holder assmebly-1		CHK	
				ADJ	
NO.	PART NO.	PART NAME		QTY	CAUTION
1	1250205-034093	GB70.1 Hex socket M8×30(environmental color-zinc)		1	
2	1250205-023000	GB70.1 Hex socket M8×35(environmental color-zinc)		3	
3	1274100-068095	ZT310 Muffler bush		2	
4	1224100-010000	ZT250—S swell nail		1	
5	1244100-064000	ZT310 Muffler gum cushion		1	

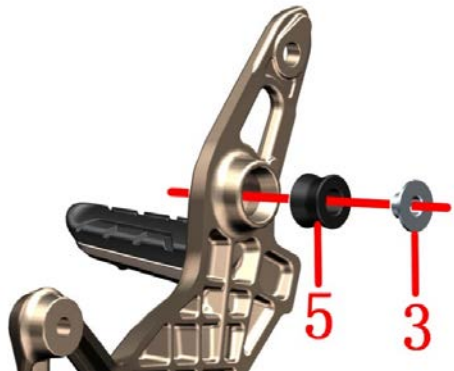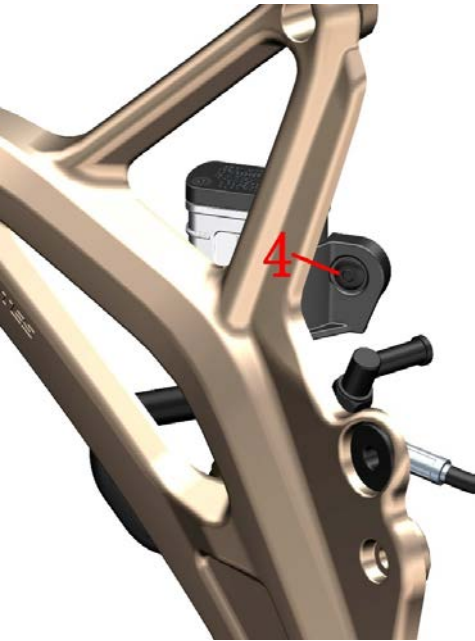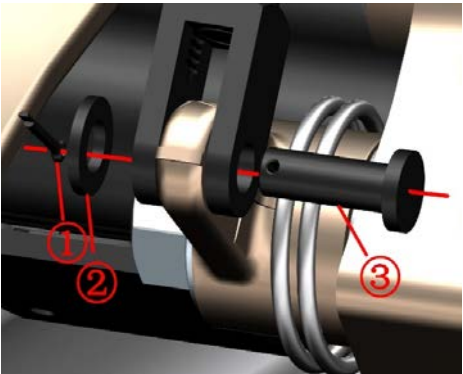

PROCEDURE:

- Right Foot pedal component
- Use a plier to disassemble the pin①. Then take off the washer② and pin③.
- Fix the position of rear part of muffler and disassemble the bolt② behind the foot pedal holder and take off the bush③.
- Take off the bolts① & ② in the front.
- Overturn and take off the bush③ and gum cushion⑤.
- Disassmble the expanding bolt④.

CAUTION:

- While overturning the foot pedal holder, keep the components nearby well protected in case they are scratched.
- Mind the disc brake oil tube while overturning the holder.
- Support the motorcycle properly while disassembling in case it falls down.
- Rear disc brake oil cup can not be lower than oil tube interface of main pump.

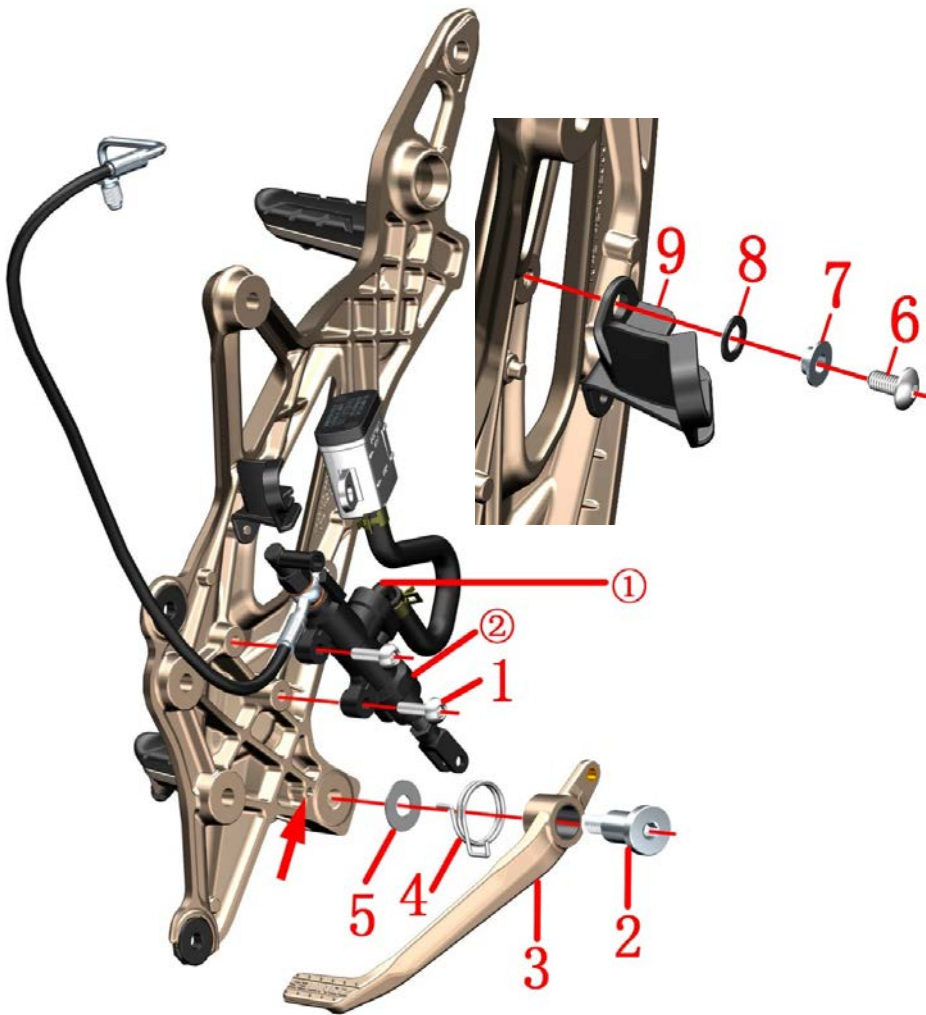


Fig.3 FOOT PEDAL COMPONENT		Right foot pedal holder assmeby-2	CHK	
			ADJ	
NO.	PART NO.	PART NAME	QTY	CAUTION
1	1251100-121093	Non standard bolt M6×25 (environmental color-zinc)	2	
2	1251100-131000	Non standard bolt M10×1.5×36	1	
3	1274200-010000	ZT310—R brake pedal	1	
	1274200-300051	ZT310—R brake pedal (dark gray)		
4	1260100-119093	ZT310—R brake pedal spring	1	
5	1251500-060095	Non standard washer φ10.5×φ26×1	1	
6	1251100-101000	Non-standard bolt M6×12 (304 stainless steel)	1	
7	1274100-057095	Bush φ6.2×φ8.4×3.5+φ14×1.5	1	
8	1244100-052000	Gum cushion, bush (φ8.5×φ14×1)	1	
9	1224200-055000	ZT310-R rear disc brake oil cup holder	1	

PROCEDURE:

- Rear disc brake pump assembly
Disassemble bolt(1); Rear disc brake oil cup can never be lower than oil tube interface① of main pump②.
- Brake pedal assembly
Disassemble bolt(2); pull out brake pedal(3); take off brake pedal spring(4) & washer(5).
- Rear disc brake oil cup holder
Disassemble bolt(6), take off bush(7)、 gum cushion,bush(8)、 oil cup holder(9).

CAUTION:

- Applying lubrication on inner surface of brake pedal bush can reduce resistance on brake pedal.
- While reassembling, remember to insert the spring into spacing hole of foot pedal holder.
- Support the motorcycle properly while disassembling in case it falls down.
- Place properly the disc brake oil cup and main pump. Avoid the air on top of oil cup getting into the tubes of disc brake.

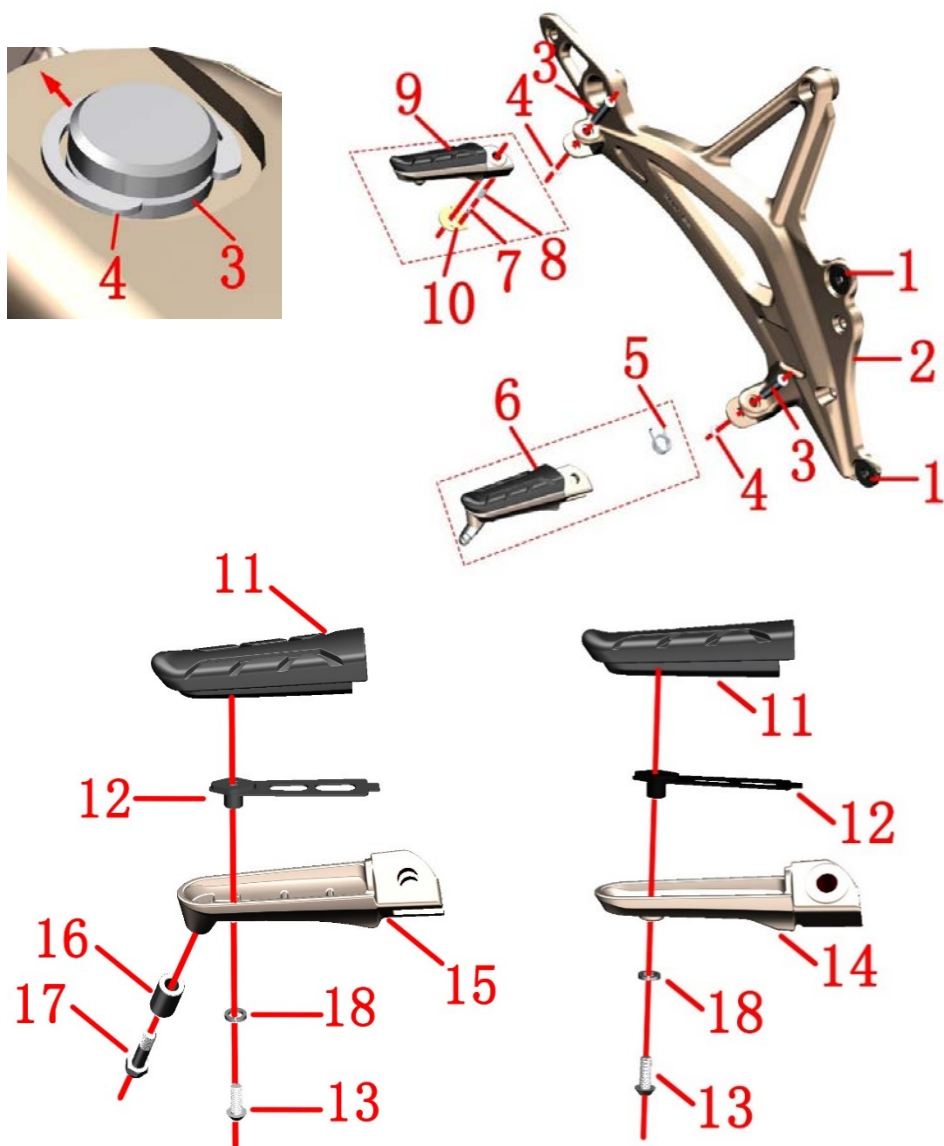


Fig.4 FOOT PEDAL COMPONENT		Right foot pedal holder assmebly-3		CHK	CAUTION
NO.		PART NO.		ADJ	
		PART NAME		QTY	
1	1244100-002000	ZT250—S side cover round gum cushion		2	
2		R, foot pedal holder		1	
3		Foot pedal pin axle		2	
4	1264100-006000	ZT250—S foot pedal spring		2	
5	1264100-004000	ZT250—S R, front pedal spring		1	
6		R, front pedal component		1	
7	1274100-010000	ZT250—S Rear pedal steel ball		1	
8	1264100-005000	ZT250—S Pedal steel ball spring		1	
9		R, rear pedal component		1	
10	1270300-272000	KD250—F Rear pedal positioning plate		1	
11	1244200-024000	ZT310—X Foot pedal rubber		2	After sales parts
12	1274200-051000	ZT310—X Foot pedal rubber positioning plate		2	
13	1250205-038000	GB70.2M5×12 (stainless steel)		2	
14		ZT310—X R, front pedal		1	
15		ZT310—X R, rear pedal		1	
16	1274200-254093	BushingΦ12×Φ6×19(environmental color)		1	
17	1251100-224000	Non standard ball head bolt M6×26		1	
18	1250501-010000	GB93φ6 spring washer		2	

PROCEDURE:

●R, front pedal

Disassemble circlip(4). Take off foot pedal pin axle(3). Then disassemble R, front pedal(6), foot pedal spring(5).

●R, rear pedal

Disassemble circlip(4). Take off foot pedal pin axle(3). Then pull out R, rear pedal(9). Take down positioning plate(10), steel ball(7), spring(8).

●Foot pedal holder

Disassemble side cover round gum cushion(1).

●After sales parts for new pedal with rubber

Hold tightly the R, front pedal(15). Disassemble bolt(17) take off the bushing(16). Disassemble bolt(13) take off spring washer(18), take off rubber(11), positioning plate(12). Foot pedal rubber(11), positioning plate(12), bolt(13), spring washer(18) are in common use. Each part use 1 piece for after sales purpose.

Hold tightly the R, rear pedal(14), disassemble bolt(13) take off spring washer(18), take off rubber(11), positioning plate(12).

Note: Since March 2020, the front and rear right pedals need to be added with a spring washer(18).


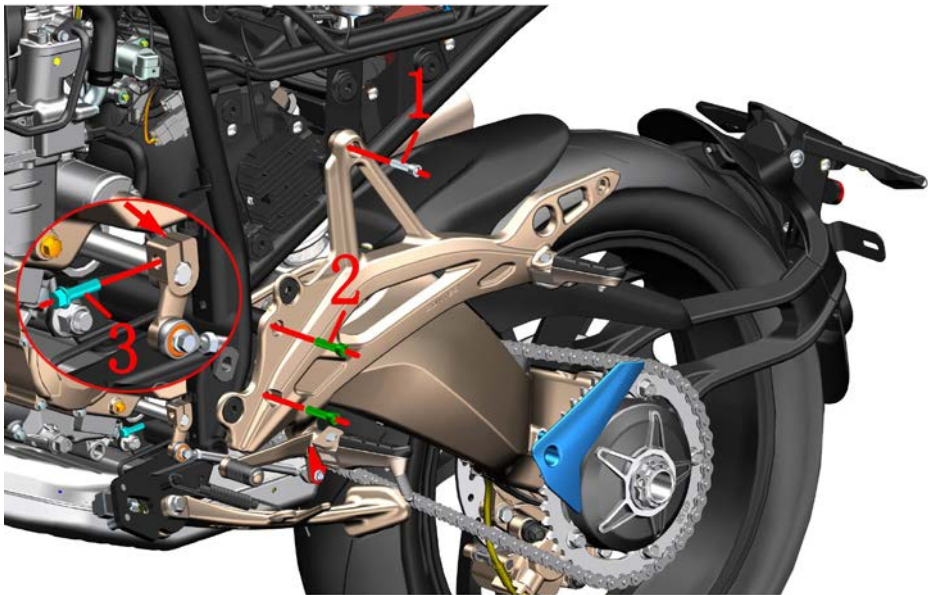


Fig.5 FOOT PEDAL COMPONENT		L, foot pedal holder component-1	CHK	
			ADJ	
NO.	PART NO.	PART NAME	QTY	CAUTION
1	1250205-034093	GB70.1 Hex socket M8×30(environmental color-zinc)	1	
2	1250205-023000	GB70.1 Hex socket M8×35(environmental color-zinc)	2	
3	1251100-061093	M6×22Hexagon flange bolt 8.8 degree	1	
4		Foot pedal holder washer	1	
5	1251100-123093	Non-standard bolt M8×25 (environmental color-zinc)	1	
	1250105-278093	GB5789 M10×1.25×25(10.9/environmental color-zinc)		


PROCEDURE:

- L, foot pedal holder assembly
Disassemble bolt(3) with ring spanner.Insert strait screwdriver into slot① and open a little bit the spline rocker arm while pulling it out from gear shift axle of engine.
Disassemble bolt(1), bolt(2)with hex socket tool. Take off left foot pedal holder assembly.
- Gear shift rod assembly
Disassemble bolt(5). Separate left foot pedal component and gear shift rod assembly from left foot pedal holder assembly. Take off foot pedal holder washer(4).

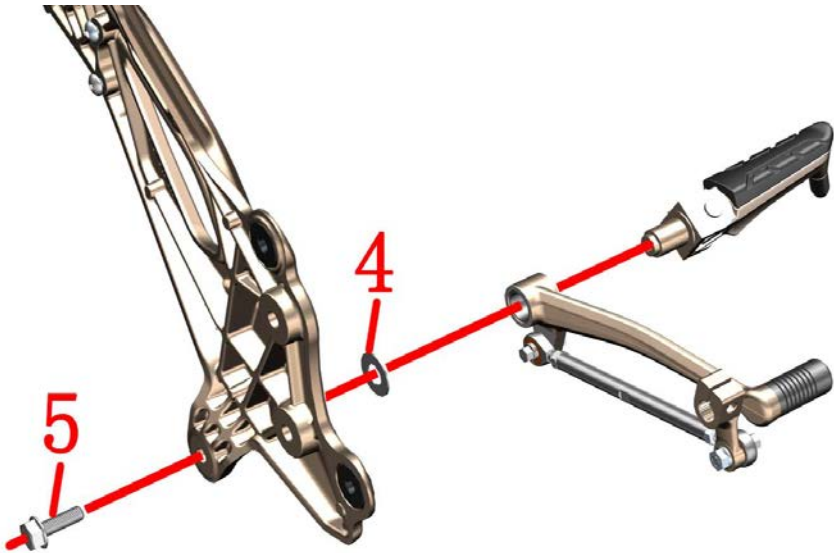

CAUTION:

- Support the motorcycle properly while disassembling in case it falls down.
- Pay attention to the alignment of foot pedal holder washer and the lug boss while reassembling.
- Applying lubrication to the surface of cylinder of foot pedal holder can reduce resistance on gear shift rod.

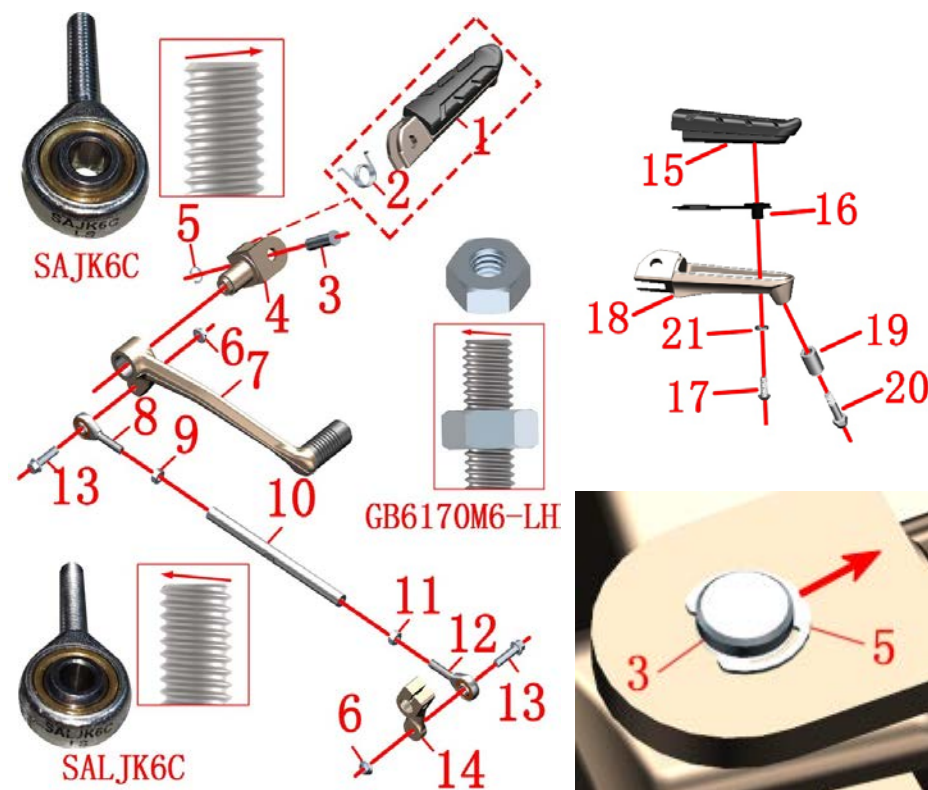

PROCEDURE:

● L, Foot pedal component

Disassemble circlip(5). Take off foot pedal pin axle(3). Take off L, foot pedal(1), foot pedal spring(2) from foot pedal holder(4).

● Gear shift rod assembly

Disassemble on both sides nut(6) and bolt(13) with ring spanner. Disassemble gear shift rod rocker arm(7), spline rocker arm(4). Loosen nut(9)&(11) with open spanner. Take off adjusting rod(10). Separate bearing (8)&(12).

● Foot pedal with rubber for after sales service

Hold the L, front pedal(18) tightly. Disassemble bolt(20) then take off bushing(19). Then take off bolt(17) take off spring washer(21). Take off rubber(15), positioning plate(16).

Note: Since March 2020, the L, front pedal needs to be added with a spring washer (21).

Fig.6 FOOT PEDAL COMPONENT		L, foot pedal holder component-2		CHK	CAUTION
				ADJ	
NO.	PART NO.	PART NAME		QTY	
1		L, front pedal component		1	
2	1264100-003000	ZT250—S L, front pedal spring		1	
3	1274100-012000	ZT250—S Foot pedal pin axle		1	
4		Foot pedal holder		1	
5	1264100-006000	ZT250—S Foot pedal circlip		1	
6	1250303-010093	GB6177.1M6 (environmental color-zinc)		2	
7		ZT310—T Gear swift rod rocker arm		1	
8	1274100-043000	Knuckle Bearing SALJK6C		1	
9	1250301-018093	GB6170M6—LH (environmental color-zinc)		1	
10	1274200-003000	ZT310—R Gear shift rod adjusting bolt $\phi 10 \times 130$		1	
11	1250301-020093	GB6170M6 (environmental color-zinc)		1	
12	1274100-042000	Knuckle Bearing SAJK6C		1	
13	1251100-061093	M6×22 Hexagone flange bolt 8.8 degree		2	
14		ZT250—S Gear shift rod spline rocker arm		1	
15	1244200-024000	ZT310—X Foot pedal rubber		1	After sales parts
16	1274200-051000	ZT310—X Foot pedal rubber positioning plate		1	
17	1250205-038000	GB70.2M5×12 (Stainless steel)		1	
18		ZT310—X L, front pedal		1	
19	1274200-254093	Bushing $\Phi 12 \times \Phi 6 \times 19$ (environmental color)		1	
20	1251100-224000	Non standard ball head bolt M6×26		1	
21	1250501-010000	GB93 $\phi 6$ spring washer		1	

CAUTION:

- Applying lubrication to the surface of cylinder of foot pedal holder can reduce resistance on gear shift rod.

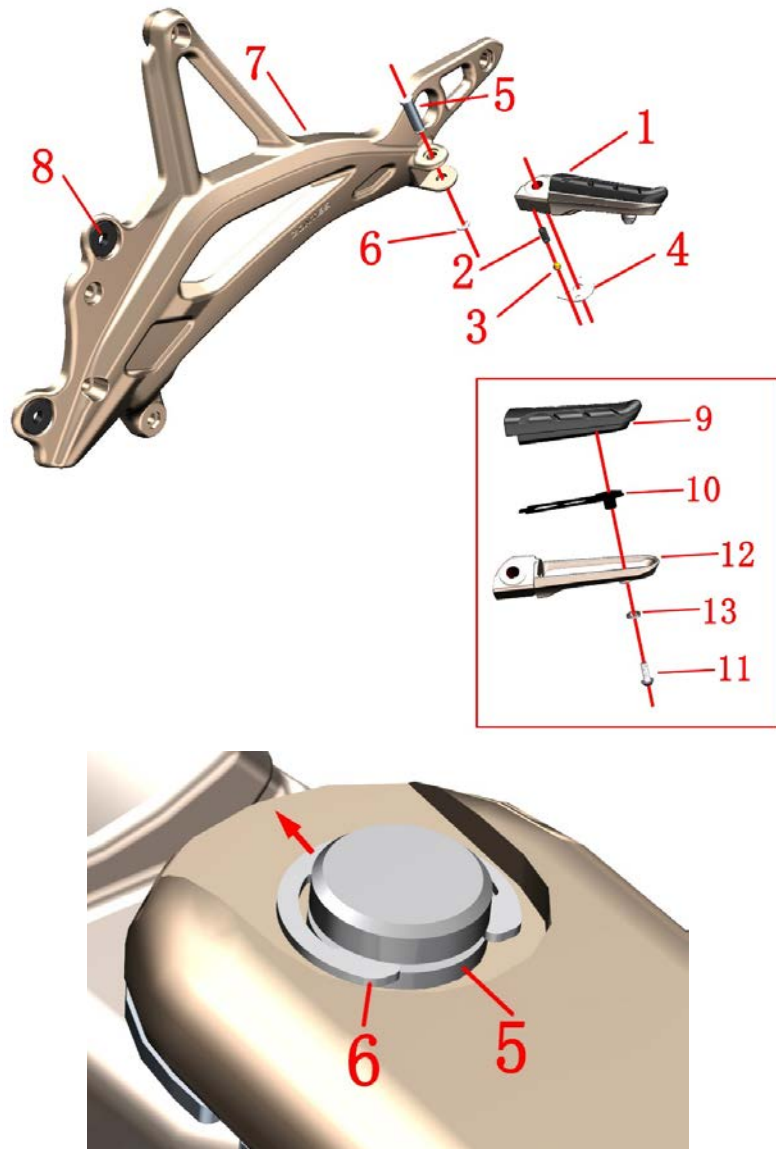


Fig.7 FOOT PEDAL COMPONENT		L, foot pedal holder component-3	CHK	CAUTION
			ADJ	
NO.	PART NO.	PART NAME	QTY	
1		L, rear foot pedal component	1	
2	1264100-005000	ZT250—S foot pedal steel ball spring	1	
3	1274100-010000	ZT250—S rear foot pedal steel ball	1	
4	1270300-272000	KD250—F rear foot pedal positioning plate	1	
5		Foot pedal pin axle	1	
6	1264100-006000	ZT250—S Foot pedal circlip	1	
7		L, foot pedal holder	1	
8	1244100-002000	ZT250—S side cover round gum cushion	2	
9	1244200-024000	ZT310—X Foot pedal rubber	1	After sales parts
10	1274200-051000	ZT310—X Foot pedal rubber positioning plate	1	
11	1250205-038000	GB70.2M5×12 (stainless steel)	1	
12		ZT310—X L, rear foot pedal	1	
13	1250501-010000	GB93φ6 spring washer	1	

PROCEDURE:

●L, rear foot pedal

Disassemble circlip(6) with a tool. Take off foot pedal pin axle(5). Then pull out L, rear foot pedal(1). Take off positioning plate(4), steel ball(3), spring(2).

●Foot pedal holder

Disassemble side cover gum cushion(8).

●After sales parts of foot pedal with rubber

Hold the L, rear foot pedal(12) tightly, use hex socket tool to disassemble bolt(11), Take off spring washer (13).

Take off rubber(9) and positioning plate(10).

Note: Since March 2020, the L, rear foot pedal needs to be added with a spring washer (13).

CAUTION:

●Old type full aluminum foot pedal are for after sales service of products manufactured in early batches. To use new type foot pedal with rubber is suggested because it can absorb more vibration.

●Ensure correct installation when exchanging after sales components of the pedal with rubber.

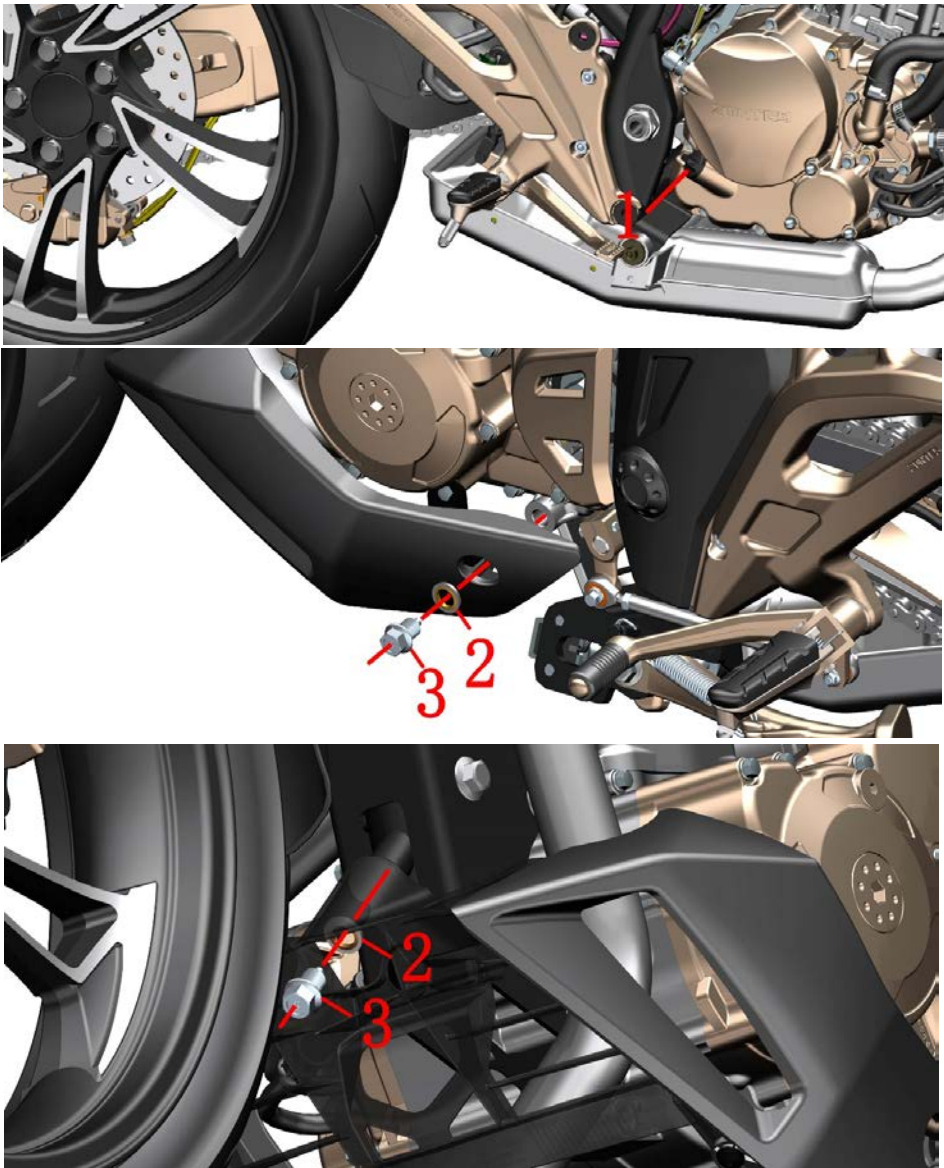


Fig.1 COOLING SYSTEM COMPONENT		Change engine oil	CHK	
			ADJ	
NO.	PART NO.	PART NAME	QTY	CAUTION
1	1050854-002000	ZT180MN Engine oil level gauge	1	
2	1244100-033000	Sealing gasket 12×φ20×2	2	
3	1251100-066093	M12×1.5×15 Oil draining bolt	2	24±4N.m

PROCEDURE:

- Drain off the engine oil
Park the motorcycle with side stand on flat ground.
Rotate the engine oil level gauge(1) anticlockwise and take it out.
Disassemble the engine air guider before draining the engine oil is suggested. Otherwise, use a tool to guide the oil in case it contaminate the plastic covers.
Place holders to collect engine oil under draining bolt on the chassis (see left bottom photo) and draining bolt on the engine (see left middle photo).
Disassemble draining bolts(3) on the chassis and the engine. Take off sealing gasket(2). Drain thoroughly the engine oil.
Wipe off the dirty oil with clean nonwovens. Be sure that the surface of oil draining bolt and sealing gasket are not scratched and has no impurity before reassembling. Torque on bolt is 24±4N.m. Too strong will damage the thread. Too weak will cause leakage of oil.
Add from opening on right crankcase of engine 1.6L (1.7L if oil filter is changed) new engine oil of SAE 10W-50/10W-40 with API SM degree or higher. Then reassemble the engine oil gauge.
Start the engine and test it under different rotation speed for 2 minuts. Check if the engine oil leaks.
Run the engine at idling speed for 5 minuts than shut down the engine for 3 minuts. Check the engine oil level gauge. If oil level is lower than minimum mark, add more engine oil until liquid surface reaches maximum mark. Follow the steps above-mentioned and check again if engine oil leaks.

CAUTION:

- Disassembling the cooling system while the motorcycle is hot is prohibited. Wait until the engine and muffler cool down thoroughly for the manipulation.
- Wasted engine oil should be collected and hand over to qualified facilities for further treatment. Do not pour the oil anywhere and avoid pollution of environment and water source.
- Changing the draining bolt and sealing gasket every time when changing the engine oil is suggested.
- As the crankshaft connection rot has bearing bush, whild changing the engine oil, make sure the engine has at least 1L before starting the engine. If not, the bearing bush can be damaged or the crankshaft can be seized.

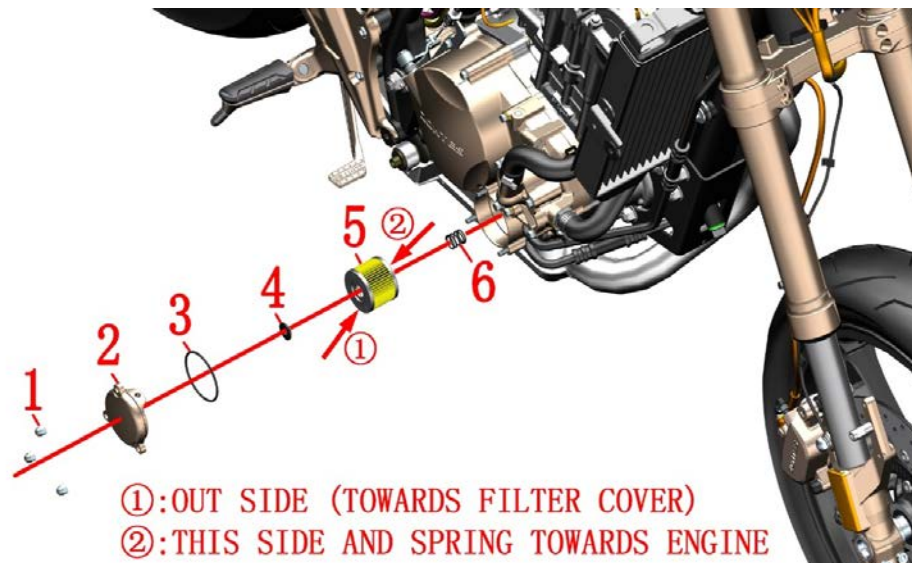



Fig.2 COOLING SYSTEM COMPONENT		Change engine oil filter	CHK	
			ADJ	
NO.	PART NO.	PART NAME	QTY	CAUTION
1	1251300-096000	Non-standard cover type 9 degree nut M6×13	3	【1】
2	4050954-001000	ZT180MN fine filter cover A (titanium)	1	
	4050454-014051	ZT180MN fine filter cover A (dark gray)		
3	1051454-004000	55×2.5 O-ring	1	after-sale
4	1051454-005000	ZT180MN Engine oil refined filter seal ring	1	
5	4134200-003000	ZT180 refined filter seal component	1	【2】
6	1050853-009000	Φ16.4×17×1.6 Spring for filter	1	

PROCEDURE:

● Change engine oil filter

Disassemble the engine air guider before draining the engine oil is suggested. Otherwise, use a tool to guide the oil in case it contaminate the plastic covers.

Place holder to collect wasted engine oil under right crankcase cover.

Disassemble nut(1) with tool. Rotate slightly engine oil refined filter cover(2) and take it off when it is loosen.

Take off seal ring(4). Change engine oil filter(5).

Check if seal ring(3) is broken. Change the seal ring(3) along with engine oil filter is suggested.

When reassembling, please check carefully if the spring(6), seal ring(4) are well installed. Engine oil filter can not be turned over when assembling.

Torque of cover type nut(1) is 12±1.5N.m.

CAUTION:

● Ensure every component is well assembled.

● To change engine oil filter and seal ring(3) at the same time is suggested.

● Engine oil filter can not be turned over when assembling.

● 【1】 Due to status change, if this nut needs to be replaced, 3 pieces shall be replaced at the same time.

● 【2】 The ZT180 refined filter seal component already included oil filter、55×2.5 O-ring(3) and ZT180MN Engine oil refined filter seal ring(4).

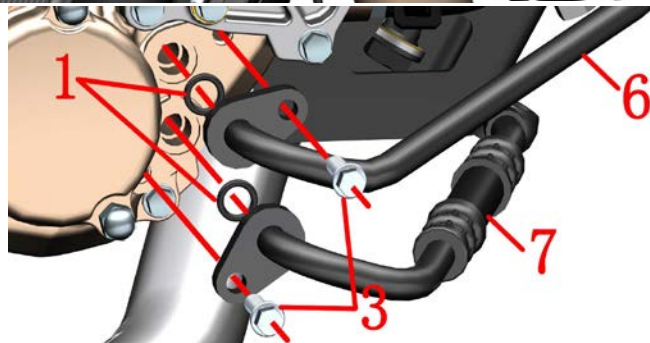
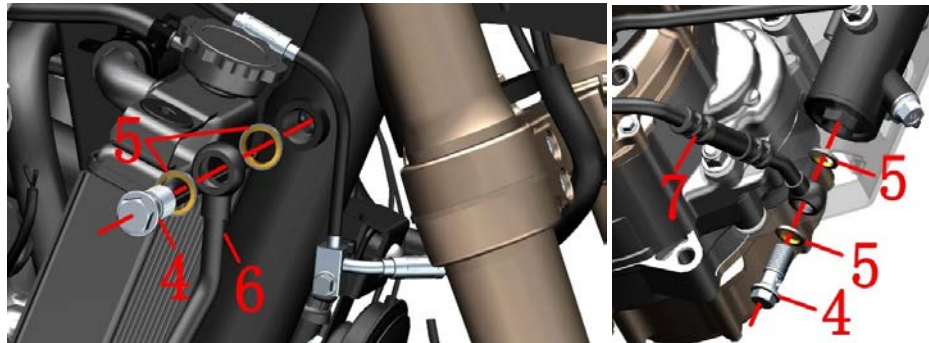
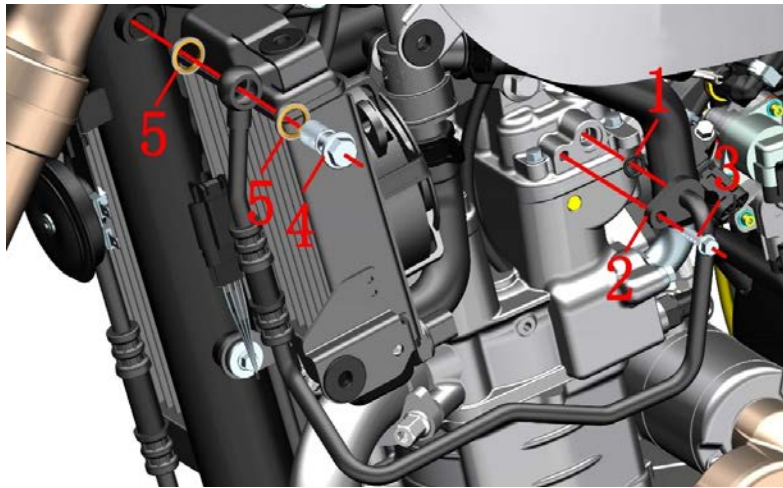



Fig.3 COOLING SYSTEM COMPONENT		Change engine oil	CHK	
			ADJ	
NO.	PART NO.	PART NAME	QTY	CAUTION
1	1051454-014000	9.8×2.5 O-ring	3	
2	1244200-016000	ZT310—R Chassis connected oil tube	1	
3	1251100-061093	M6×22 Hex flange bolt (8.8 degree/environmental color zinc)	3	
4	1251100-089094	Oil passing bolt M14×1.50×32 (environmental color zinc)	3	
5	1244100-034000	Seal gasketφ14×φ20×2	6	
6	1244200-014000	ZT310—R Engine oil outlet tube	1	
7	1244200-015000	ZT310—R Engine oil intake tube	1	

PROCEDURE:

- Chassis connected oil tube
Disassemble oil passing bolt(4), seal gasket(5) with socket sleeve.
Disassemble bolt(3) close to engine with socket sleeve. Disassemble chassis connected oil tube. Take off O-ring (1). See photo upper left.
- Engine oil outlet tube
Disassemble oil passing bolt(4), seal gasket(5) with socket sleeve. See photo middle left.
- Engine oil intake tube
Disassemble oil passing bolt(4), seal gasket(5) with socket sleeve. See photo left lower .
Disassemble bolt(3) with socket sleeve. Take off engine oil outlet tube(6), engine oil intake tube(7); Take off O-ring(1). See photo right lower.

CAUTION:

- Disassembling the cooling system while the motorcycle is hot is prohibited. Wait until the engine and muffler cool down thoroughly for the manipulation.
- Wasted engine oil should be collected and hand over to qualified facilities for further treatment. Do not pour the oil anywhere and avoid pollution of environment and water source.
- Do not disassemble the oil tube violently in case of deformation of bush.
- To avoid leakage, changing seal gasket and O-ring every time together with engine oil is suggested.
- Be sure to wipe the connecting surface with clean nonwoven before reassembling.

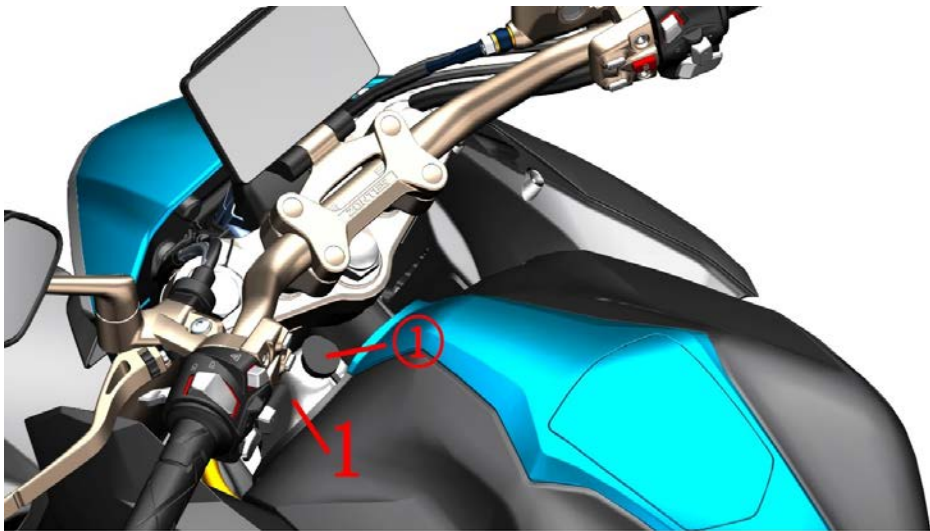



Fig.4 COOLING SYSTEM COMPONENT		Change engine oil	CHK	
			ADJ	
NO.	PART NO.	PART NAME	QTY	CAUTION
1	1224200-006000	ZT310—R sub cooling liquid tank	1	

PROCEDURE:

- Add coolant
When the engine is completely cooled, the vehicle can be straightened to accurately check the liquid level. If it is lower than the "L" line, the coolant should be replenished in time. If the auxiliary tank has no or only a small amount of coolant, check the cooling system first, and remove the leak before adding it.
Park the vehicle with the side brackets; turn the direction to the right and turn to the bottom.
Open the lid① of the sub tank(1) and add a small amount of coolant each time with a funnel. It is appropriate to reach the position of the F line when the liquid level of the coolant is used to support the vehicle.

CAUTION:

- Check regularly the cooling liquid surface. It should never be lower than "L" line.
- Change cooling liquid every two years is suggested.
- Swallowing or inhaling cooling liquid would harm human body. Clean thoroughly the hands, face or exposing skin every time after adding cooling liquid. If cooling liquid is swalled by accident, please contact toxication center or hosipital. If it's inhaled, please move to open air. If it's spilt to the eye, clean it with big quantity of clean water and see doctor in time. Be sure the cooling liquid is far away from children or pets.
- Engine cooling liquid must be suitable for aluminum radiator. The basic should be glycol. Cooling liquid should be mixture of distilled water and concentrated cooling liquid under certain proportion. Be sure to choose cooling liquid which is suitable for your local extreamly low temperature. The freezing point should be lower than the local lowest temperature. Distilled water is the only kind of water acceptable. Other kind of water might cause corrosion to engine cooling system or other more severe problems.
- Total volume of cooling liquid is 1440ml.
- Cooling liquid might damage the coating of motorcycle. Be careful while adding. If it is spilt in small quantity, please clean it immediately with soft cloth.

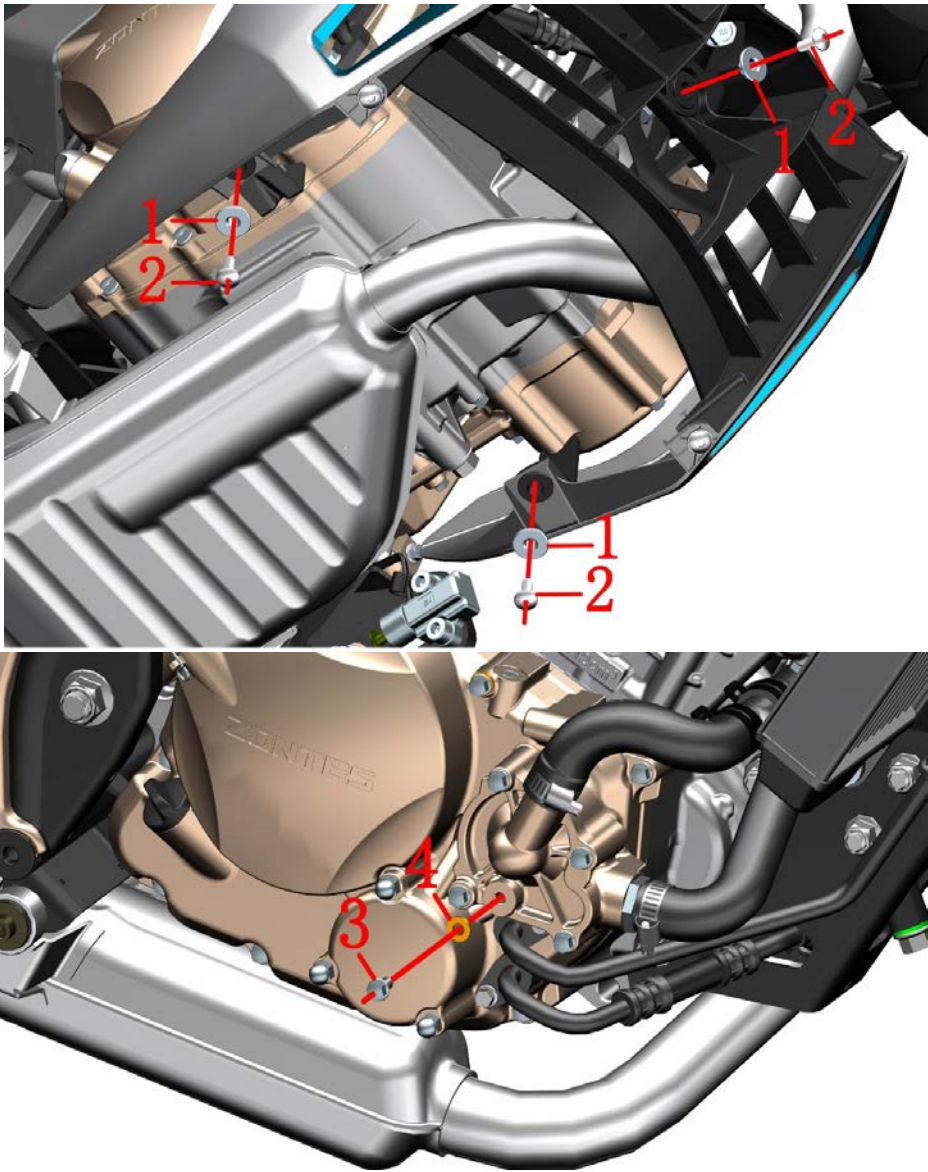


Fig.5 COOLING SYSTEM COMPONENT		Draining cooling liquid	CHK	
			ADJ	
NO.	PART NO.	PART NAME	QTY	CAUTION
1	1274100-007000	ZT250-S flanging sleeve (φ6.4×φ9×6+φ20×2)	3	
2	1251100-102000	Non standard bolt M6×16 (304 stainless steel)	3	
3	1251112-001093	M6×16 Hex flange bolt (environmental color zinc)	1	
4	1051654-002000	Seal gasket φ 6×13×1.8	1	

PROCEDURE:

●Engine fairing assembly

Lift the motorcycle with platform. Hold the engine fairing assembly with one hand and disassemble 3 bolts(2) with the other hand by using hex socket tool. Then take off bush(1). Place properly the engine fairing assembly after taking it off.


●Drain the cooling liquid

Open the sub cooling liquid tank cover. Put a holder under it. Wear waterproof gloves and disassemble bolt(3) with socket sleeve. Take off seal gasket(4). Cooling liquid starts draining. When the cooling liquid in sub cooling liquid tank is all out, open the right cooling liquid tank cover to accelerate the draining of cooling liquid in the cooling system.


Wipe out all of the cooling liquid on surface every component with a clean cloth.

CAUTION:


- Motorcycle should be well supported.
- Manipulation should start after the engine is completely cooled down.
- Cooling liquid is toxic. Avoid strictly eye or skin contact. For more details, see "Attention" of previous page.

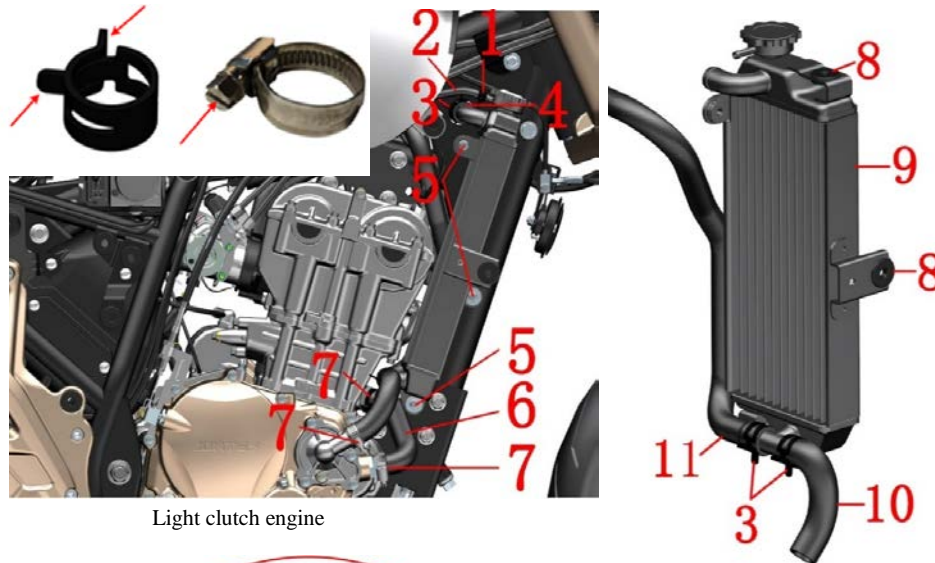

Light clutch engine

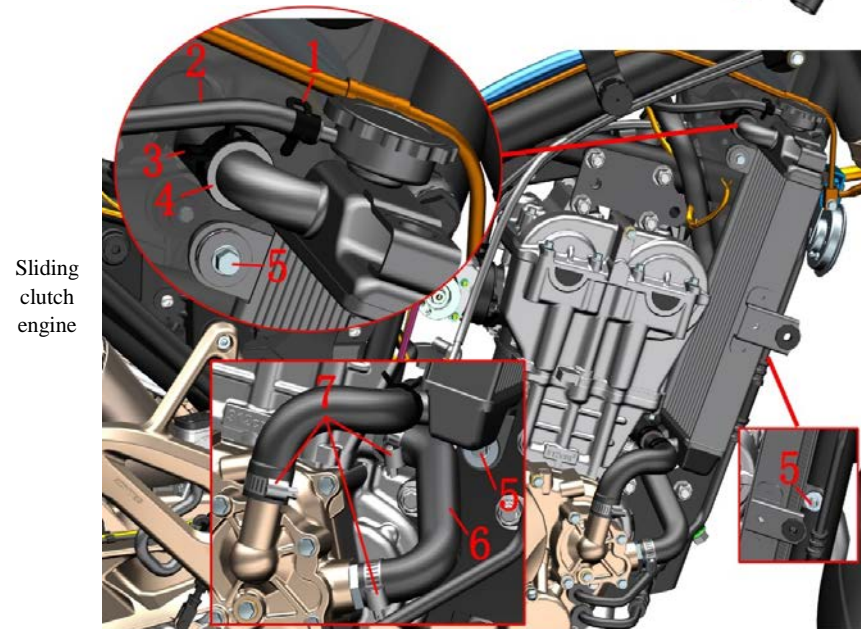

Sliding clutch engine

Fig.6 COOLING SYSTEM COMPONENT		Right cooling liquid tank component	CHK	
			ADJ	
NO.	PART NO.	PART NAME	QTY	CAUTION
1	1274200-079000	ZT310 Hoop of cooling liquid tube (φ9)	1	
2	1244200-013000	ZT310—R Connecting tube of sub cooling liquid tank	1	
3	1274200-090000	ZT310 Hoop of cooling liquid tube (φ26)	1	
4	1244200-011000	ZT310—R Connecting tube of L & R cooling liquid tank	1	
5	1251100-061093	M6×22 Hex flange bolt	3	
6	1244200-012000	ZT310—R Engine cooling liquid passing tube	1	
7	1274200-041000	ZT310 Cooling liquid tube clamp (φ26)	3	
8	1244100-002000	ZT250—S Side cover round gum cushion	2	
9	1274200-005000	ZT310—R R, cooling liquid tank	1	
10	1244200-098000	ZT310—R Engine cooling liquid intake tube(sliding clutch)	1	【1】
	1244200-003000	ZT310—R Engine cooling liquid intake tube		【2】
11	1244200-021000	ZT310 small circulation cooling liquid tube	1	

PROCEDURE:

● Sub cooling liquid connecting tube

Use a plier to clamp the hoop of cooling liquid tube(1) and move towards right cooling liquid tank. After it is off from the connecting tube of sub cooling liquid tank, pull off the tube(2).

● Cooling liquid tube

Pull off cooling liquid passing tube(6) from the engine after moving the two hoops(7) on both sides out of the anti-fall off holder. Drag out the anti-fall off holder from the engine. Take off hoop(7).

Use straight screwdriver to loosen the bolt of clamp(7) and then move it out the interface. Pull out the tube(10) from right tank cover tube interface.

The models on production use clamp(7) for the moment. After the stock of tank cover is finished, will use hoop (3). As the construction is different, be attention while buying after sales components. If original motorcycle uses clamp, buy a clamp. If original motorcycle uses hoop, buy a hoop.

● L & R cooling liquid tank connecting tube

Move hoop(3) towards cooling liquid tank to the interface of tube.

● Right cooling liquid tank assembly


Hold the right cooling liquid tank assembly with one hand, disassemble 3 pcs of bolts(5) with socket sleeve with the other hand. Separate the connecting tube(4) with right cooling liquid tank assembly.

Pull out the right cooling liquid tank. Move hoop(3) to the T-type interface under the cooling liquid tank. Then separate the small circulation cooling liquid tube(11) with T-type interface. Take off the engine cooling liquid intake tube(10) with same method. Separate side cover round gum cushion(8) with right cooling liquid tank(9).

CAUTION:


● Motorcycle should be well supported. Manipulation should start after the engine is completely cooled down.

● 【1】 used for Sliding clutch engine. 【2】 used for Light clutch engine.

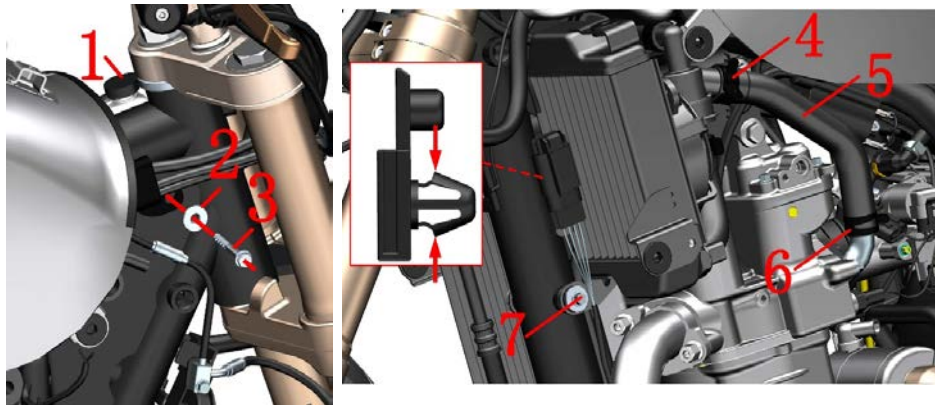

A

B

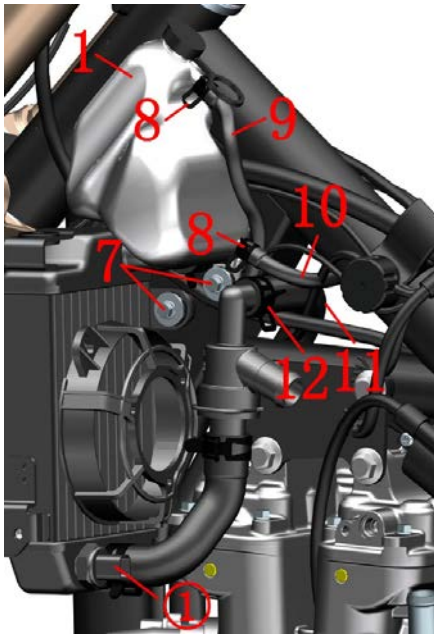

C

D

Fig.7 COOLING SYSTEM COMPONENT		Left cooling liquid tank component		CHK	CAUTION
NO.	PART NO.	PART NAME	QTY	ADJ	
1	1224200-006000	ZT310—R sub cooling liquid tank	1		
2	1274100-007000	ZT250-S flanging sleeve (φ6.4×φ9×6+φ20×2)	1		
3	1250105-236093	GB5789M6×55 (environmental color zinc)	1		
4	1274200-091000	ZT310 Hoop of cooling liquid tube (φ27)	2		
5	1244200-001000	ZT310—R Engine cooling liquid outlet tube	1		
6	1274200-090000	ZT310 Hoop of cooling liquid tube (φ26)	3		
7	1251100-061093	M6×22 Hex flange bolt (8.8 degree/environmental cold)	3		
8	1274200-088000	ZT310 Hoop of cooling liquid tube (φ10.5)	2		
9	1244200-025000	ZT310—R Sub cooling liquid tank leaking tube	1		
10	1244200-013000	ZT310—R Sub cooling liquid tank connecting tube	1		
11	1244200-021000	ZT310 small circulation cooling liquid tube	1		
12	1274200-089000	ZT310 Hoop of cooling liquid tube (φ22)	1		
13	1244200-011000	ZT310—R Connecting tube of L & R cooling liquid tank	1		
14	1274200-019000	ZT310—R Thermostat	1		
15	1244200-010000	ZT310—R L, cooling liquid tank intake tube	1		
16	1244100-002000	ZT250—S Side cover gum cushion	2		
17		L, cooling liquid tank	1		

PROCEDURE:

●Sub cooling liquid assembly

Hold well the sub cooling liquid tank assembly. Disassemble bolt(3) on the right side. Take off bush(2). See Fig A, move away clamp(8). Disassemble cooling liquid leaking tube(9) and connecting tube(10). Then disassemble bolt(7) under sub cooling liquid tank. Take off sub cooling liquid tank(1). See Fig C.

●Left cooling liquid tank assembly

See Fig B. Use a plier to grip as the arrow shows on the cable clip and pull it out of left cooling liquid tank holder. Move hoop(4) and (6) to interface of tube and pull out engine cooling liquid outlet tube(5). Take off hoop (4) and (6). Pull off the cable interface at position ①. Move hoop(12) to joint elbow of thermostat(14). Hold tightly the thermostat and pull out the small circulation cooling liquid tube(11). Take off hoop(12). Pull off interface of fan cable. Take off bolt(7) as shown in Fig B and Fig C. Then take off sub cooling liquid tank assembly. Move the hoop(6) from top of cooling liquid tank to corner joint of cooling liquid tank. Then pull out connecting tube(13). See Fig D. Move away hoop(6) and (4) under the cooling liquid tank. Then take off the thermostat(14) and left cooling liquid tank intake tube(15). Take off hoop(6) and (4). See Fig D. Separate side cover gum cushion(16) and left cooling liquid tank(17).

CAUTION:

- Cooling liquid is toxic. Avoid strictly eye or skin contact. For more details, see "Attention" of previous page.
- Do not disassemble the hoop with too strong force. If not, it will cause permanent deformation and lose elasticity, which will lead to leakage of cooling liquid.

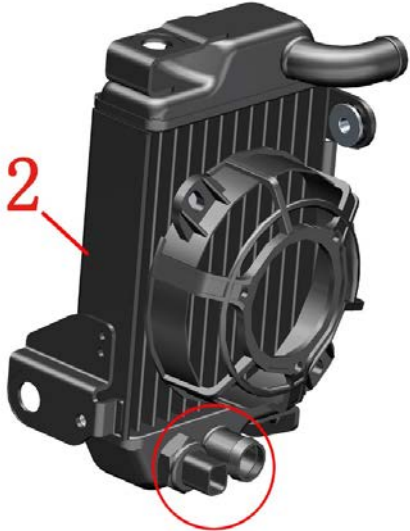
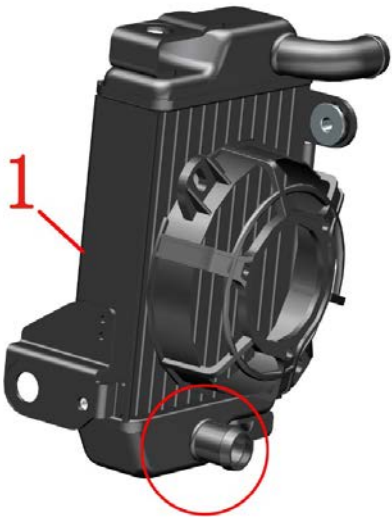



Fig.8 COOLING SYSTEM COMPONENT		Left cooling liquid tank component	CHK	
			ADJ	
NO.	PART NO.	PART NAME	QTY	CAUTION
1	1274200-277000	ZT310-R L, cooling liquid tank (without temperature control switch/ a single connector)	1	
2	1274200-004000	ZT310-R L, cooling liquid tank	1	

CAUTION:

- The left water tank of the Bosch EFI version only has a temperature control switch less than that of the Delphi EFI, as shown in the figure above. The installation method and other components are the same

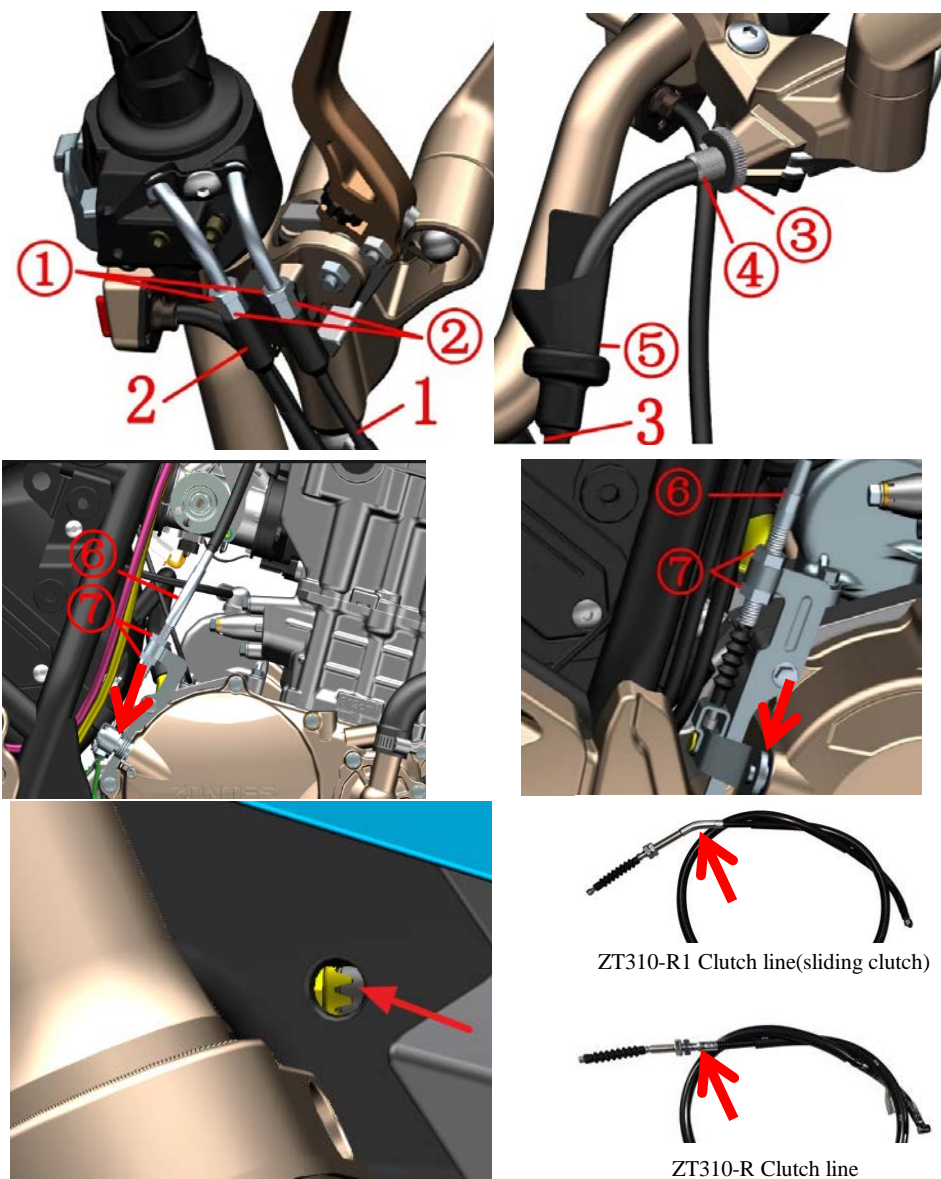


Fig.1 FRONT FORK COMPONENT		Throttle/clutch cable clearance adjustment, light height adjustment	CHK	
			ADJ	
NO.	PART NO.	PART NAME	QTY	CAUTION
1		Throttle refueling line	1	
2		Throttle return line	1	
3	1154200-011000	ZT310-R1 Clutch line (sliding clutch)	1	sliding clutch
	1154200-001000	ZT310-R Clutch line		light clutch

PROCEDURE:

●Throttle line

Use an open-end wrench to loosen the lock nut ① on the throttle refueling line (1) or the return line (2), and turn the adjustment screw ② to adjust the clearance to 2 to 4 mm. After the adjustment, lock the nut ① again.

●Clutch line

Fine adjustment:

Lift the protective rubber sleeve ⑤ on the clutch rocker arm to the elbow of the clutch cable (3), loosen the nut ③ with pliers, rotate the adjustment screw ④, finally lock the nut ③, and then reset the dust jacket. After adjusting, pay attention to the nut ③, the adjustment screw ④ and the groove of the rocker seat should be staggered to prevent the cable from coming out.

Big adjustment:

If fine adjustment cannot be achieved, loosen the nuts⑦ with an open-end wrench, rotate the adjustment screw ⑥, and finally tighten the nuts ⑦.

●Light height adjustment

The driver rides the motorcycle and the motorcycle is upright. The other person inserts a PH2 type Phillips screwdriver (6mm in diameter) into the hole in the right side of the storage box, aligns the gear shape of the adjusting bolt, turns clockwise to increase the height, and rotates counterclockwise. Low beam height.

CAUTION:

●The motorcycle support should be fixed during disassembly to prevent accidents caused by incline.

●Throttle line adjustment should be noted as follows:

After adjustment, ensure that the throttle can be reset automatically. It is forbidden to increase the idle speed of the engine due to adjustment of the cable.

The engine idle speed rise cannot occur in the direction of rotation.

Checking the engine idle speed should be performed under the condition of a heat engine and should be at 1500 to 1700 rpm.

●The clutch adjustment should be noted as follows:



Excessive free travel can cause wear and malfunction of the clutch and gearshift mechanism.

After adjustment, be sure to stagger the nut, adjusting screw, and slot on the rocker arm to a certain position to prevent the cable from coming out of the slot.

●Light height adjustment should be noted as follows:

Too high or too low light levels can affect safe driving. The height of the lights should be properly adjusted according to whether there are changes in the weight of the occupants and the driver.

It is forbidden to adjust the light height during riding. It is advisable to adjust the road with a smooth road surface and a straight line distance of about 150 meters without affecting traffic safety at night.

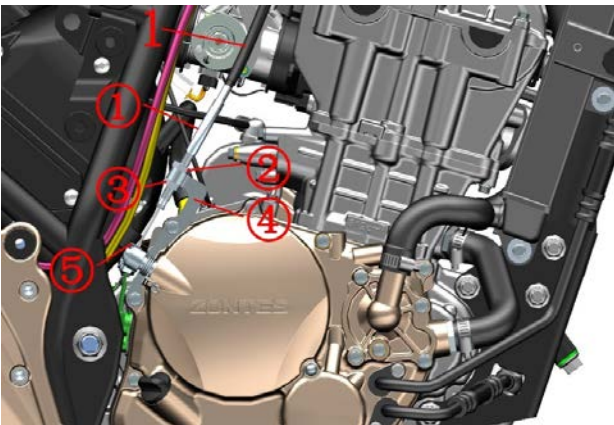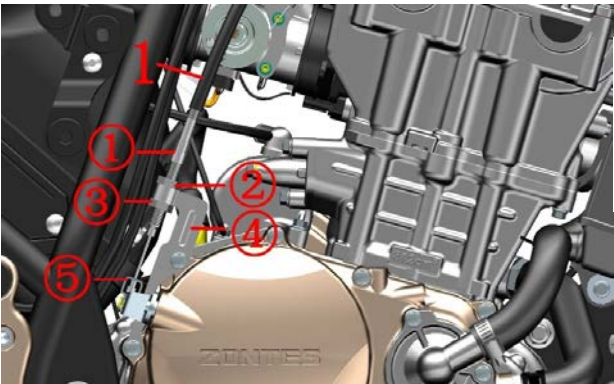

light clutch



sliding clutch

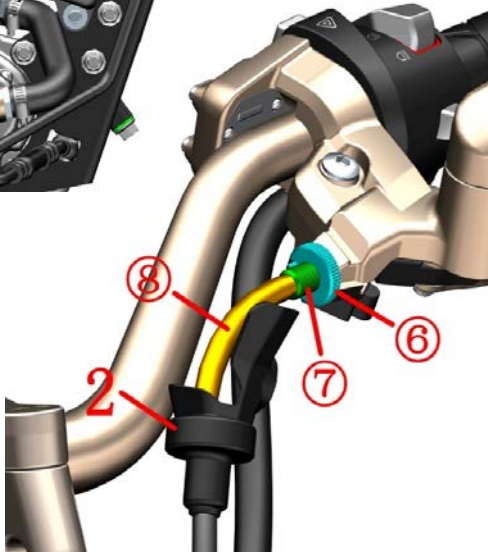



Fig.2 FRONT FORK COMPONENT		Change clutch line		CHK	
				ADJ	
NO.	PART NO.	PART NAME		QTY	CAUTION
1	1154200-011000	ZT310-R1 Clutch line(sliding clutch)		1	sliding clutch
	1154200-001000	ZT310-R Clutch line			light clutch
2	1244200-046000	ZT310—V protective rubber sleeve		1	

PROCEDURE:

● Remove the clutch line

Use an open-end wrench to loosen the nuts ② and ③; fix the adjusting screw ①, rotate the nut ② up to the top of the thread of the adjusting screw, and screw the nut ③ to the bottom to completely separate from the thread. Separate the clutch wire core connector from the bracket ⑤, close the nut ③ to the black sheath with one hand, and remove the adjustment screw ① from the bracket ④ with one hand.

First, the protective rubber sleeve (2) is retracted to the elbow ⑧ and the nut ⑥ is loosened with the pliers; the nut ⑥ and the adjusting screw ⑦ are rotated to the same position as the groove on the rocker arm, and remove the cable from the rocker arm seat.

Remove the clutch line.

Remove the protective sleeve (2) from the clutch cable(1).

● Install the clutch line

Put protective rubber sleeve (2) into clutch elbow.

After inserting the clutch cable joint into the rocker arm, screw the nut ⑥ and the adjusting screw ⑦ to the groove on the rocker arm.

Assemble the clutch cable into place according to the original alignment.

Rotate the nut ② up to the top of the thread of the adjusting screw, and screw the nut ③ to the bottom to completely separate from the thread.

Take the nut ③ close to the black sheath with one hand and insert the adjustment screw ① into the bracket ④ with one hand.

Insert the clutch core connector into the hole of the bracket ⑤.


Initially position the nut ② first, adjust the free stroke adjustment in the clutch cable adjustment, and then lock the nut ③.

Finally, reset the protective rubber sleeve (2).

CAUTION:

- The motorcycle support should be fixed during disassembly to prevent accidents caused by incline.
- Before replacing the clutch line, it is necessary to disassemble the seat cushion, fuel tank, liner, side cover, etc.

Delphi EFI

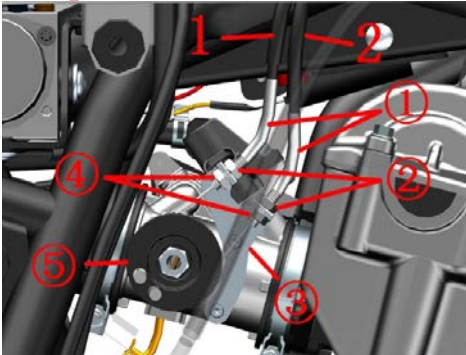

Bosch EFI

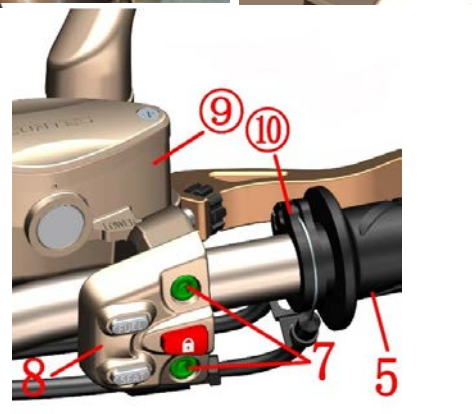
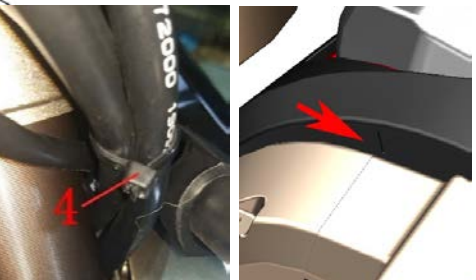
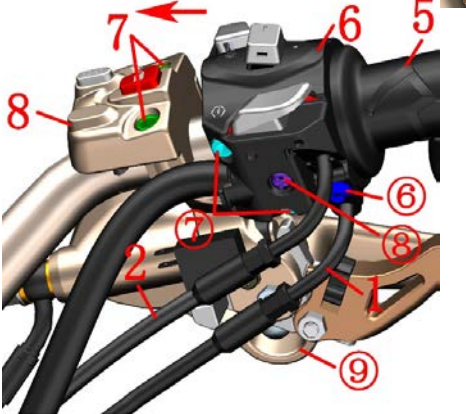
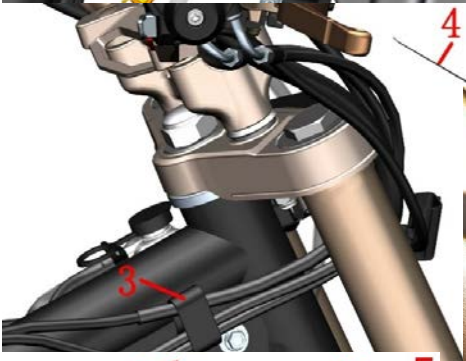
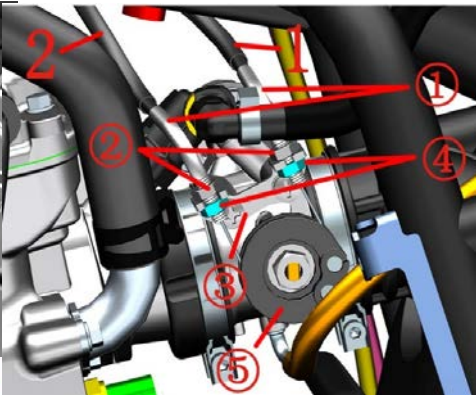


Fig.3 FRONT FORK COMPONENT		Replace the throttle line		CHK	
				ADJ	
NO.	PART NO.	PART NAME	QTY	CAUTION	
1		Throttle refueling line	1		
2		Throttle return line	1		
3	1224200-016000	ZT310-R Line clamp	1		
4	1224100-051000	0 Flame retardant tie (black 2.5×100)	1		
5	1244100-042000	ZT250-R Right handlebar rubber sleeve	1		
6	1184200-185000	ZT310-V1 Right handlebar switch	1		
7	1250205-031091	GB70.1M6×30 (stainless steel)	2		
8		Right handlebar auxiliary switch	1		

PROCEDURE:

●Disassemble the throttle line

Use an open-end wrench to turn the nut ② of the throttle refueling line ① or the oil return line ② upside down, turn the nut ④ downwards out of the adjusting pipe ①; rotate the turntable on the throttle valve clockwise, and turn the cylindrical joint of the fuel line from the turntable Remove; then move the adjustment tube upwards over the bracket ③ on the throttle valve and pull outwards to separate the core from the bracket. Similarly, remove the oil return line.

Open the card of the line clamp ③ slightly, remove the throttle cable from the slot, and cut off the cable tie ④.

Loosen the bolts ⑦ with the Allen tool; remove the sub switch ⑧ and the right brake rocker arm assembly ⑨ in the direction of the arrow and lock the bolt ⑦. Always keep disc brake main pump ⑨ high to prevent air from entering the oil circuit.

Hold the right hand switch ⑥ with your hand and remove the bolts ⑦ and ⑧ before removing the bolt ⑥. Switch the upper and lower parts of the switch.

Remove the throttle cable from the right hand and remove the rubber sleeve ⑤ from the core turntable ⑩, and then remove it from the cable hole in the lower part of the switch.

●Install the throttle line

First pass the throttle cable into the cable hole in the lower part of the switch. Fit the cylindrical connector of the throttle cable into the turntable ⑩ on the right hand gripper ⑤. Return the oil return line card to the limit slot provided on the fuel line. Use a hexagon socket tool to lock the bolt ⑦ to a torque of ⑧ to 10 Nm. The switch mounting hole is slightly twisted a few times for the rear bolt ⑧ and the bolt ⑥ is locked after observing the positioning hole and the direction of the lower part of the switch ⑥. Finally, tighten the bolt ⑧ and tie the tie ④. Cut off the excess. Reset the sub switch and rocker assembly and note the symbol on the alignment switch. Install the throttle cable into the slot of the hub clamp ③. Use an open hand to turn the nut ② of the throttle refueling line ① or the return line ② up to the end, and turn the nut ④ downwards to the adjustment pipe ①. Put the oil return line into the bracket ③, and fit the connector into the turntable ⑤. Put the oil line into the bracket ③, then turn the turntable ⑤ to a certain angle, and then insert the connector. Refer to the method of adjusting the gap to adjust the throttle line clearance; after adjusting the left and right direction of rotation, there should be no change in idle speed and flexible reset. Lock nuts ② and ④.

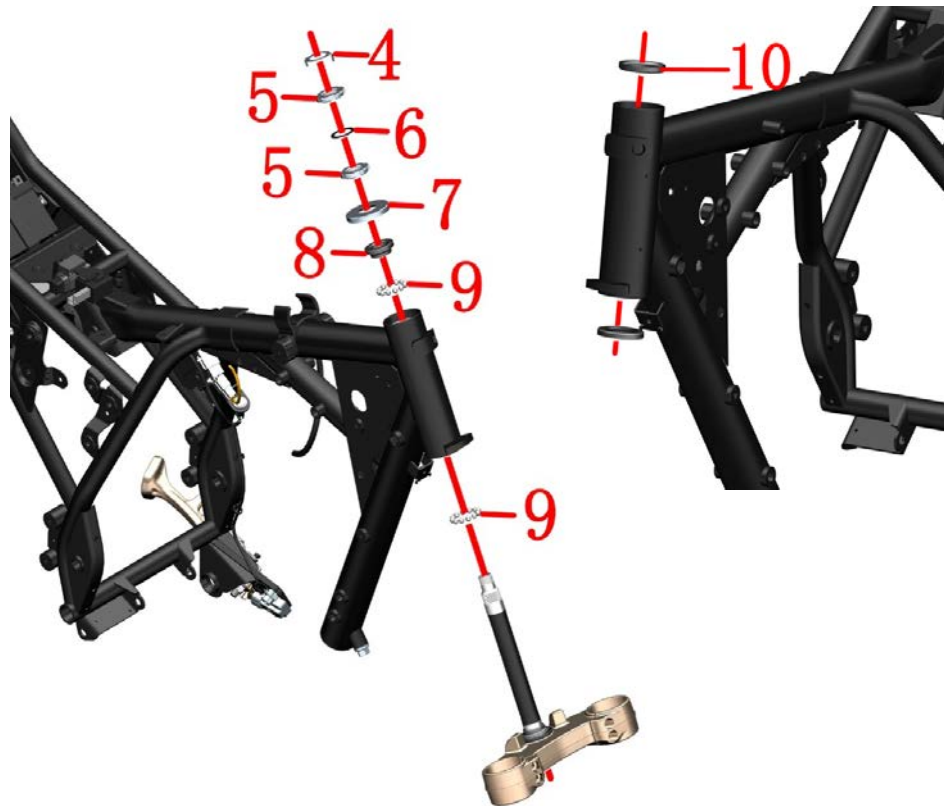
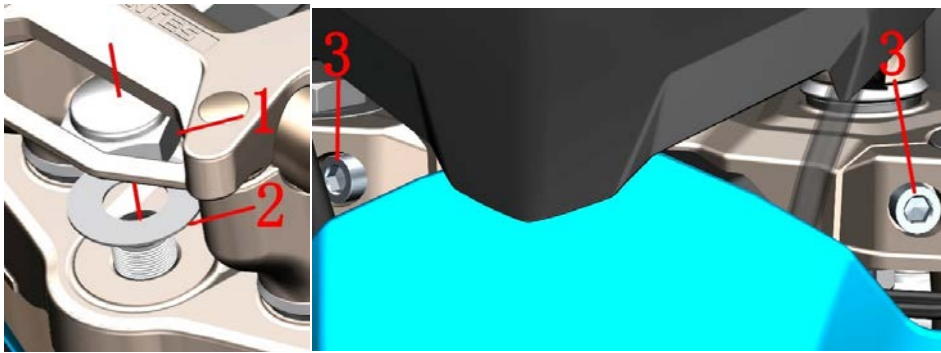


Fig.4 FRONT FORK COMPONENT		Steering adjustment	CHK	
			ADJ	
NO.	PART NO.	PART NAME	QTY	CAUTION
1	1251300-045000	ZT250-S Upper connection plate decorative nut	1	100N·m
2	1251500-050000	ZT250-S Upper connection plate gasket $\phi 18.5 \times \phi 39 \times 1$	1	
3	1250205-034093	GB70.1 Hexagon M8×30 (color zinc)	2	
4	1134100-007000	ZT250-S Adjusting nut lock washer	1	
5	1251300-046093	ZT250-S Direction column adjusting nut M24X1	2	
6	1244100-015000	ZT250-S Adjusting nut pad	1	
7	1244300-014000	ZT350-R upper dust cover	1	
8	1130900-024000	ZT250-S Shaft ring	1	
9	1130900-022000	ZT250-S Conjoined steel ball	2	
10	1130900-026000	ZT250-S Seat ring	2	

PROCEDURE:

- When the front fork is slightly swaying or when the direction handle is swung

Check if the pressure of the front tire is the recommended air pressure at room temperature: 250 kPa.

If it is lower than the recommended air pressure, the front tire pressure should be inflated to 350 kPa first, and then deflated to 250kPa. If it is otherwise set the front wheel and turn to inspect the tire tread, if it is worn or deformed, the front tire needs to be replaced. If no, continue to operate.

- Check steering device

Set up the front wheel and shake the lower part of the fork by hand to check if the steering shaft is loose or if the left and right rotations are not flexible.

Adjust the adjustment nut:

Remove the trim nut (1) with a spanner, remove the spacer (2), and remove the bolt (3) with the Allen tool. The direction of the upper board assembly wrapped with a clean cloth and then placed to prevent scratches. Remove the lock washer (4); remove the upper adjustment nut (5) with a special four-jaw shank or hook wrench and remove the pad (6).

If the steering resistance is too large, turn the lower adjustment nut (5) counterclockwise. If the brake is slightly swaying or swings, rotate clockwise. The torque is about 14N.m. It is appropriate.

When reassembling, the top adjusting nut only needs to be screwed to align with the bottom nut groove, so as not to over-tighten to avoid excessive deformation of the pad (6); the torque requirement of the decorative nut (1) is 100 Nm.

- Steering bearing

If the above operation still can not rule out excessive steering resistance or stuck as follows:

Remove the adjusting nut (5), remove the upper dust cover (7), shaft ring (8), and connecting ball (9), remove the directional column & front shock absorber & front wheel assembly, and check the shaft ring and the connecting steel ball for abnormal wear or rust. At the same time, inspect the seat ring (10) in the standpipe in front of the frame for abnormal wear or rust. The newly replaced conjoined steel ball should be evenly greased, pay attention to the amount of grease.

CAUTION:

- If the steering is adjusted too tightly, the steering force will be greater. If the steering is too loose, the front of the motorcycle will be slightly shaken during braking, and adjustments must be made according to the actual needs of the driver.

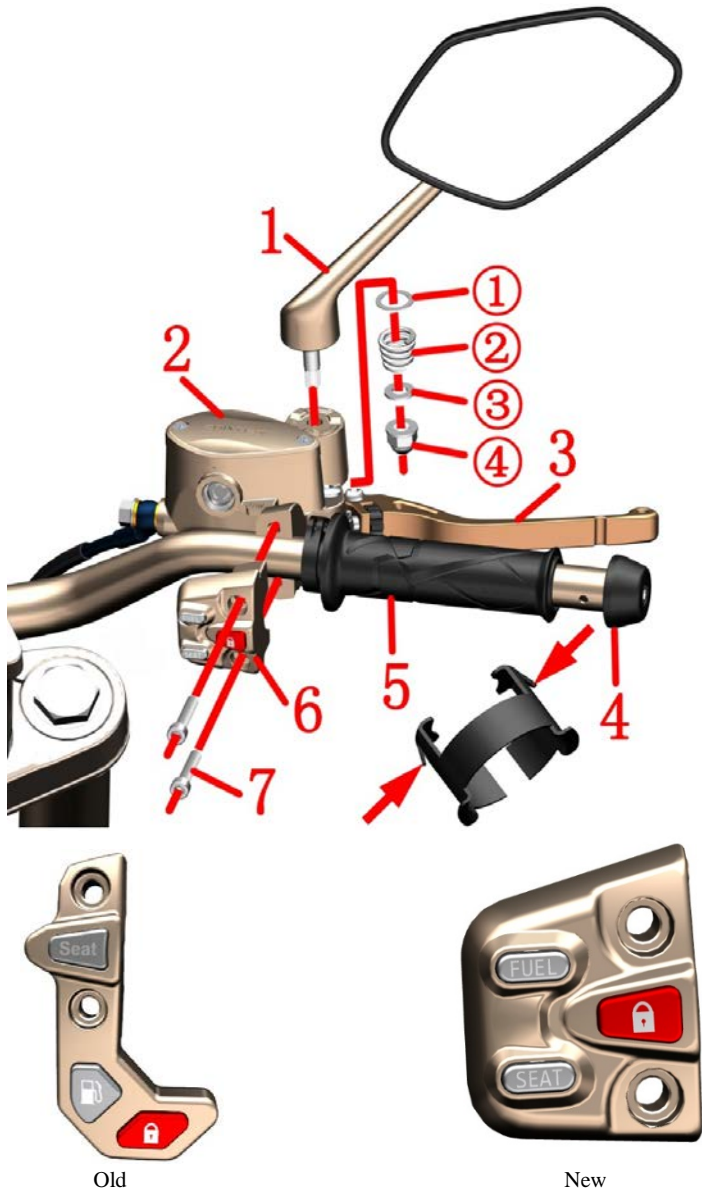


Fig.5 FRONT FORK COMPONENT		Right handlebar component	CHK	
			ADJ	
NO.	PART NO.	PART NAME	QTY	CAUTION
1	1194100-002000	ZT250-S Right rearview mirror	1	
2	1100300-044000	ZT125T Front disc brake main pump component (without handle)	1	
3	1134100-032000	ZT250-R Right Hand Rocker (Machine)	1	
4	1134200-023000	ZT250-R balance block	1	
5	1244100-042000	ZT250-R Right hand rubber sleeve	1	
6	1184200-084000	ZT310-R Right handleabar switch(TFT)	1	Stop selling
	1184200-147000	Second Generation Right Handlebar Switch (TFT)		New
7	1250205-031091	GB70.1M6×30 (stainless steel)	2	

PROCEDURE:

●Rearview mirror

Hold the mirror stem in one hand, remove the nut ④ with a sleeve, and remove the small pad ③, the spring ② and the large pad ①. Remove the mirror from the front brake master pump.

●Right handlebar to put rubber sleeve, balance block


Push the rubber sleeve (5) with the right handlebar to push forward to expose the upper balance block fixing hole; use the tool to press the convex parts at both ends of the elastic block on the balance block and pull out the balance block assembly (4), and then put the right handle Remove the rubber sleeve (5).

●Right handlebar half cover

Hold the front disc brake main pump (2) with one hand, and remove the bolt (7) with the hexagon socket tool. Remove the wire plug connector of the sub switch (6) and pull it out.

CAUTION:

- The motorcycle should be fixed after horizontal support.
- Periodically check that the fluid level of the brake fluid is between 3/4 of the observation window.
- Do not flush the cup directly with high pressure water.
- When assembling the balance block, align the protruding parts at both ends of the shrapnel with the fixing holes on the handle and then insert the direction into the holes.
- The small spacer of the rear view mirror anti-rotation limit slot needs to be aligned with the slot on the mirror bar bolt.
- The right handlebar refers to the switch to replace the throttle line.
- The joint between the front disc brake main pump and the half cover should be aligned with the right hand to match the triangle on the switch.

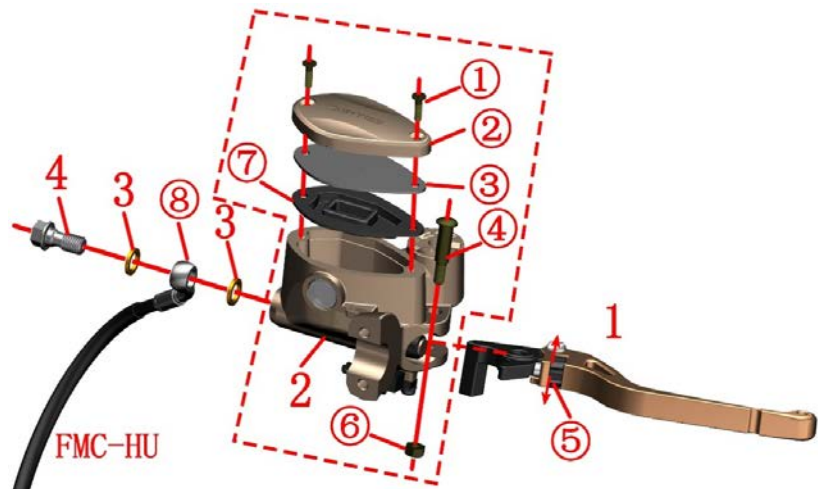

PROCEDURE:

● Front disc brake main pump

Fix the front disc brake main pump, remove the bolt (4) and copper pad (3) with the sleeve, and do not disassemble if it does not need to be replaced. Always replace the tubing connector (8) at a high level to prevent air from entering the tubing and cause brake failure. Also clean oil should be removed to prevent dripping onto parts such as covers or mufflers. After replacement, be sure to continuously hold the swing arm(1) and tap the disc brake main pump (2) to remove a small amount of gas entering the brake oil circuit, and confirm that the brake is returned to normal.

●Rocker

Rotating the adjusting nut (5) can adjust the distance between the rocker arm and the handle rubber sleeve to adapt to different driver's feel.
If you need to replace the rocker arm, use a hexagon socket tool to fix the bolt (4). Then use a socket or box wrench to remove the nut (6). Remove the bolt(4) and remove the rocker arm (1).

●Add brake fluid

Before driving the motorcycle, check whether the brake fluid level is above the “LOWER” marking. If not, check the brake disc or brake disc for wear and whether there is any oil leakage or oil leakage in the brake system. Abnormal needs to add brake fluid.
The brake fluid can only be added after the motorcycle is fixed horizontally.
Remove the bolt (1) with a Phillips screwdriver and remove the upper cover(2), the cover plate(3), and the seal gasket (7).
Add DOT4 brake fluid to 3/4 of the transparent observation window of the front disc brake master pump.
Be sure to clean the foreign body before reassembling it.

Fig.6 FRONT FORK COMPONENT		Add brake fluid, rocker adjustment		CHK	
				ADJ	
NO.	PART NO.	PART NAME		QTY	CAUTION
1	1134100-032000	ZT250-R Right Hand Rocker (Machine)		1	
2	1100300-044000	Front brake main pump component (without handle)		1	
3	1251513-013000	Disc brake copper washer φ15×φ10.2×1.5		2	
4	1251100-112000	Disc brake oil pipe bolt M10×1-22		1	

CAUTION:

- The motorcycle should be fixed after horizontal support and check.
- Periodically check that the fluid level of the brake fluid is at 3/4 of the observation window.
- If the liquid level is under "LOWER", check the brake disc wear and brake system for leaks.
- If you swallow the brake fluid, contact poison control center or hospital immediately; if you get into your eyes, seek medical attention immediately after flushing with clean water.
- Keep brake fluid away from children and pets.
- Do not flush the cup directly with high-pressure water.
- Do not mix water, dust, impurities, and silicic acid or petroleum-based liquids, as this may cause serious damage to the brake system.

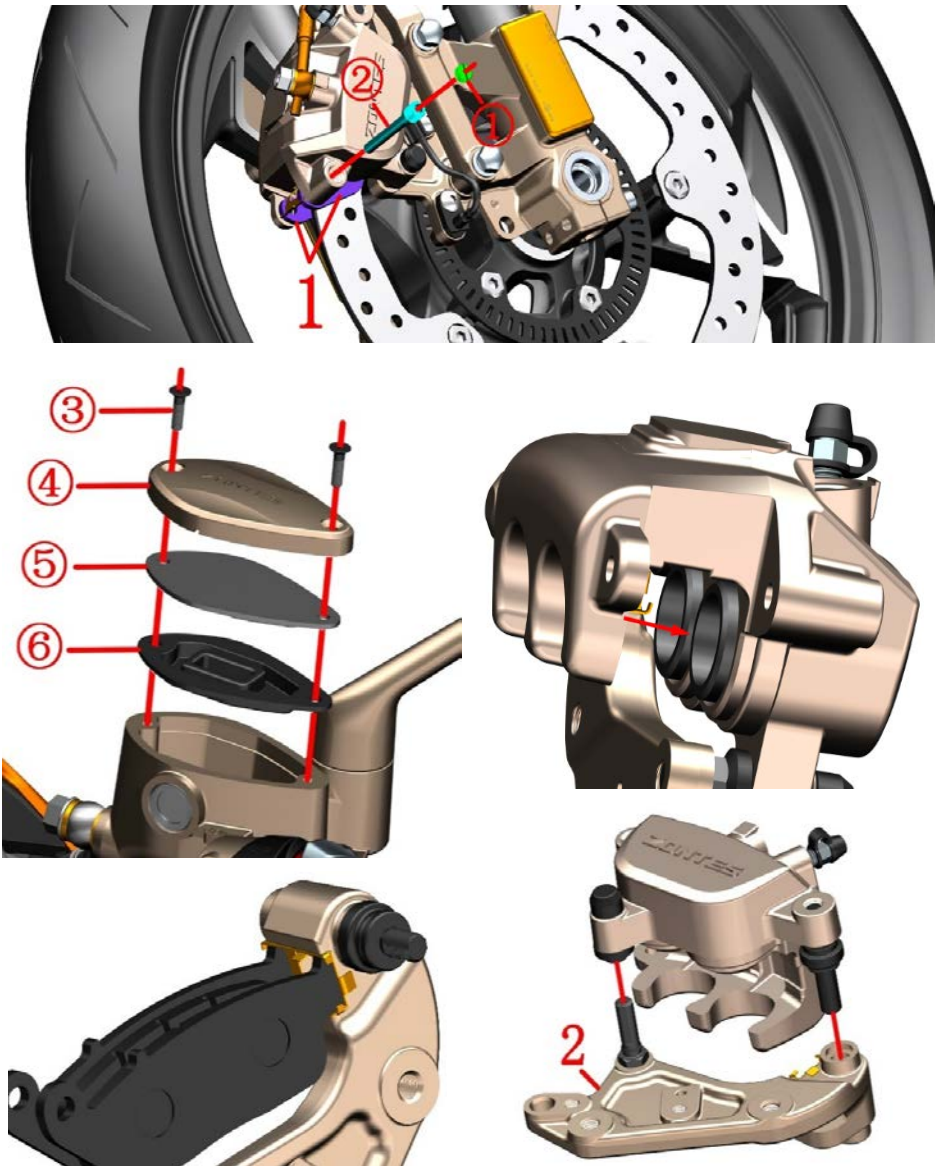



Fig. 7 FRONT FORK COMPONENT		Replace the front brake pads		CHK	
				ADJ	
NO.	PART NO.	PART NAME		QTY	CAUTION
1	1100100-091000	ZT250-S front disc brake pads (H10)		1	After-sales
2	1100100-570000	ZT310-T front brake caliper mounting plate		1	

PROCEDURE:

- Replace the front brake pads
Use a flat-blade screwdriver to remove the nut ①.
Remove the pin ② with a hexagon socket tool.
Remove the brake pads (1).
Clean up foreign objects such as dust on the outer edge of the piston.
Use a Phillips screwdriver to remove the bolts ③ on the front disc brake main pump assembly, and remove the upper cover ④, cover plate ⑤, and sealing gasket ⑥.
Push the piston to the end in the direction of the arrow.
Restore the front disc brake main pump assembly and make sure it is properly assembled.
When inserting a new brake pad, be sure to place the brake pad in the card slot of the card as shown in the lower left figure.
Lock the pin ② with a hexagon socket tool.
Use a flat-blade screwdriver to tighten the nut ①.
Hold the brake handle repeatedly until the braking force is restored.
- Front brake caliper mounting plate
Remove the mounting plate (2) from the caliper. Be careful not to lose the shrapnel of the front brake caliper.

CAUTION:

- The vehicle support should be fixed before operation.
- The wear of the brake pads and brake discs should be checked regularly. Check whether the brake fluid in the main disc observation window of the front disc brakes is at 3/4.
- When replacing the brake pads, it is strictly forbidden to remove the oil pipe bolts and the vent bolts to prevent the air from entering the pipeline and causing the brake to fail.
- After disassembling the front disc brake main oil cup cover, the front end should not be shaken to prevent the brake fluid from overflowing.
- After the replacement of the brake pads, it should be carried out for about 300 kilometers to fully achieve the best braking effect. Care should be taken to ensure adequate braking distance during running-in.
- It is recommended to replace the brake pads in pairs with qualified maintenance units.

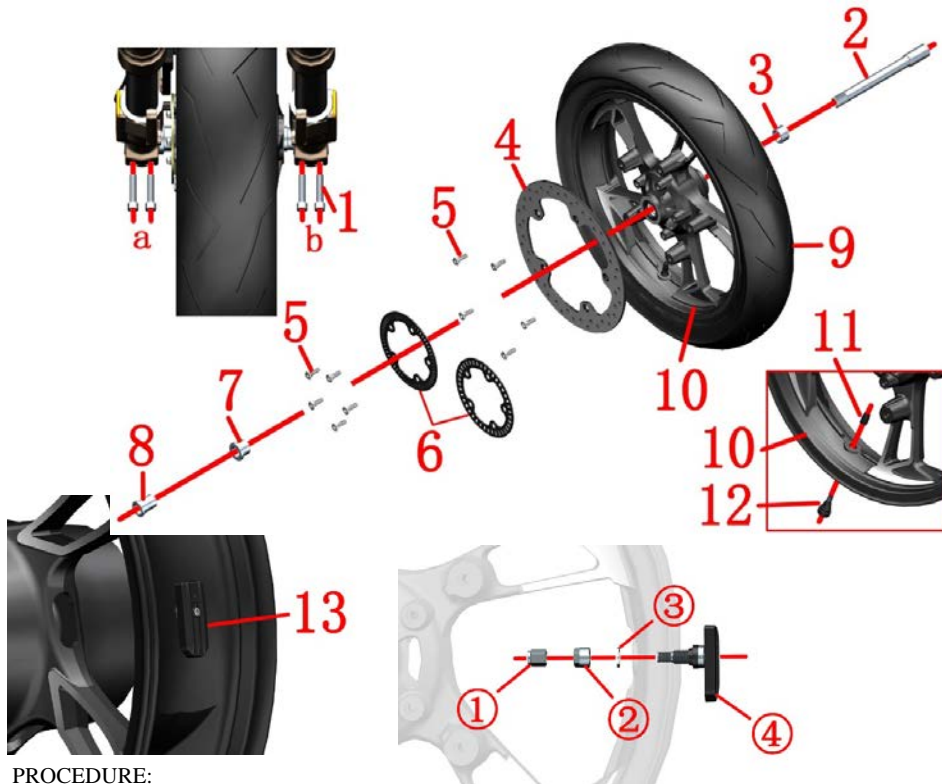

PROCEDURE:

●Tire and wheel assembly

Remove the 2 bolts (1) on the left front shock absorber bottom b with the Allen tool. Hold the front wheel first and then remove the hollow shaft (2) with the internal hexagon tool, remove the left sleeve (3), and move the front wheel assembly downward to remove the right sleeve (7) and front wheel assembly. Finally, remove the right fixing sleeve (8) and use the hexagonal tool to remove the 2 bolts (1) of the right front shock absorber.

●Brake disc, ABS ring gear

Remove the bolt (5) and then remove the ABS ring gear (6) and the brake disc (4).

●Tire and rim assembly

Delphi EFI: Unscrew the valve cap (11) and use the tool to release the air. Remove the tire (9) with a professional tire extractor. Finally remove the valve (12) with a suitable tool. Bosch EFI: Unscrew the nut (1) to release the air, unscrew the nut (2), and take out the flat gasket (3). Then use a professional tire puller to remove the rear tire (1). Finally, take out the sensor (4).

Fig.8 FRONT FORK COMPONENT		Front wheel component		CHK	CAUTION
NO.	PART NO.	PART NAME	QTY	ADJ	
1	1250205-023000	GB70.1 Hexagon M8×35 (color zinc)	4		20N.m
2	1094100-033000	ZT250-R Front wheel hollow shaft	1		
3	1094100-008000	ZT250-R Front wheel left sleeve	1		
4	1100100-418000	ZT310-R1 Front brake disc (300×4.5)	1		
5	1251100-117093	Non-standard internal hexagon bolt M8×25	10		
6	1274200-168021	ABS gear ring(40T)	1		
	1274200-058000	ABS gear ring(60T)			
7	1094100-036000	ZT250-R Front right axle sleeve	1		
8	1094100-037000	ZT250-R Front wheel right fixed bushing	1		
9	1230100-479000	110/70R17(CM638R) environmentally friendly vacuum front tire	1		
10	1094200-041063	ZT310-R Blue front rim (3.0×17)	1		【1】
	1094200-026000	ZT310-R Black front rim (3.0×17)			【2】
11	1230200-006000	HJ100-D Tire valve cap	1		Delphi EFI
12	1230100-047000	HJ125-3A Environmental vacuum tire valve (TR-412)	1		
13		ZT310 tire pressure sensor	1		Bosch EFI

CAUTION:

- Use a suitable tool to support the motorcycle to prevent accidents caused by dumping during disassembly.
- 【1】 The blue rim on the upper table is assembled on the blue motorcycle; 【2】 The black rim is assembled on the other color motorcycle.
- Take care when disassembling tires and rims to prevent damage to the material.
- After replacing the tire, check for leaks and balance.
- Only bike with Bosch EFI are equipped with standard (13) tire pressure sensors
- Maintenance items

Tires: The tires should be regularly inspected for cracks, cracks, air pressure, etc. If the tread wear indicator has been worn out, the tire of the same specification type must be replaced. Refer to the relevant content of the manual for details.

Rim: Check the rim for any deformation, cracks, etc. Rotate the rim horizontally to check for stuck, oscillating, etc. Rim seal $\phi 42 \times \phi 28 \times 7$; bearing model: 6004-2RS.

Axle: Use a dial indicator to check for deformation and bending.

Brake disc: After replacing the brake disc, the new brake disc should be operated for about 300 kilometers to fully run in order to achieve the best braking effect. Be careful to leave enough braking distance during running-in.

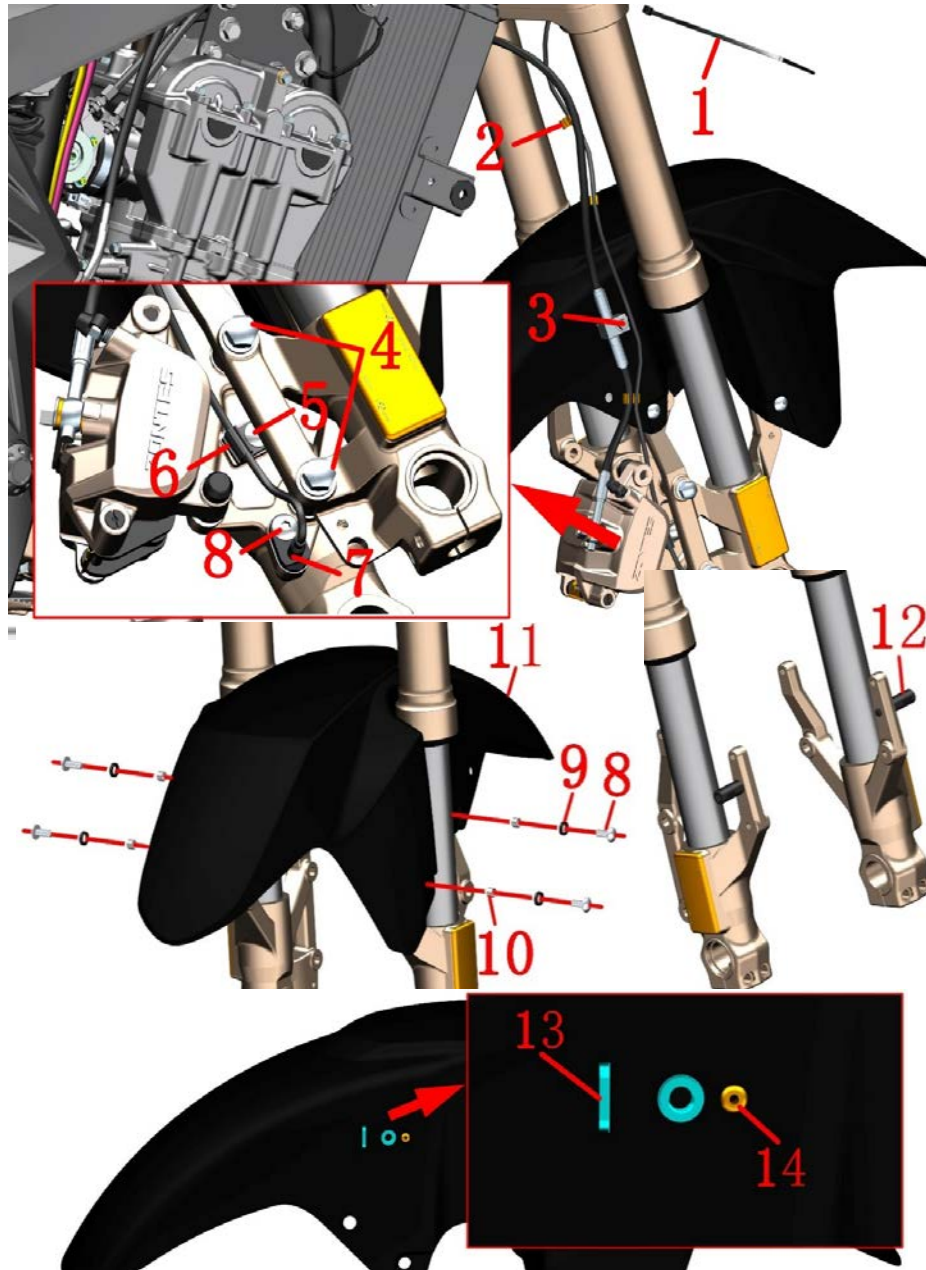


Fig.9 FRONT FORK COMPONENT		Front mudguard & wheel speed sensor component	CHK	CAUTION
NO.	PART NO.	PART NAME	QTY	
1	1224100-037000	0 grade flame retardant cable tie (black 3.6×295)	1	
2	1224100-044000	Wheel speed sensor clamp	3	
3	1251100-061093	M6×22 Hex flange face full thread bolt	1	
4	1251100-080094	Non-standard bolt M8×37 (color zinc)	2	
5	1251100-101000	Non-standard bolt M6×12 (304 stainless steel)	1	
6	1224200-127000	ZT310—T front wheel WSS clamp	1	
7		Wheel speed sensor	1	
8	1251100-102000	Non-standard bolt M6×16 (304 stainless steel)	5	
9	1244100-037000	Φ12×φ8.5×2.5 Circular buffer rubber	4	
10	1274100-018000	ZT250-S Muffler anti-hot plate bushing	4	
11		Front mudguard component	1	
12	1274200-035194	ZT310 Front mudguard liner(black zine)	2	
13	1274200-038000	ZT310-X Front mudguard front oil pipe fixing seat	1	
14	1250402-001091	GB12615φ3×10	1	

PROCEDURE:

●Wheel speed sensor

Pull out the plug of the wheel speed sensor(7); then remove the clamp(2). Cut the tie (1); pull out the wheel speed sensor from the wheel WSS clamp(6),then remove the bolt(3) and bolt(5) and bolt (8) then remove the sensor(7).

●Front disc brake caliper

Remove the bolts(3) and (4) so that the caliper will hang down naturally. It is forbidden to invert the caliper to prevent the air from entering and causing the brake to fail. Remove the bolt(5),then take off the clamp(6).

●Front mudguard

Hold the front mud plate(11) with your hand and then remove the 4 bolts(8) with the hexagonal tool and remove the bushing (10) and cushion rubber(9).

Remove the front mudguard(11).

The inside of the front mudguard can be protected with reticle or double-sided tape around the rivet(14), then the rivet is ground off with a small sander, and then the rivet(14) and the fixing seat(13) are removed.


●Front mudguard liner

Remove the bushing(12) with a 10mm open end wrench.

CAUTION:


●Pay attention to the strength when disassembling the front mud plate to prevent scratching the paint surface.

●The mudguard component has been included Front mudguard front oil pipe fixing seat(13) and Rivet(14). Rivets need to be assembled with professional tool.

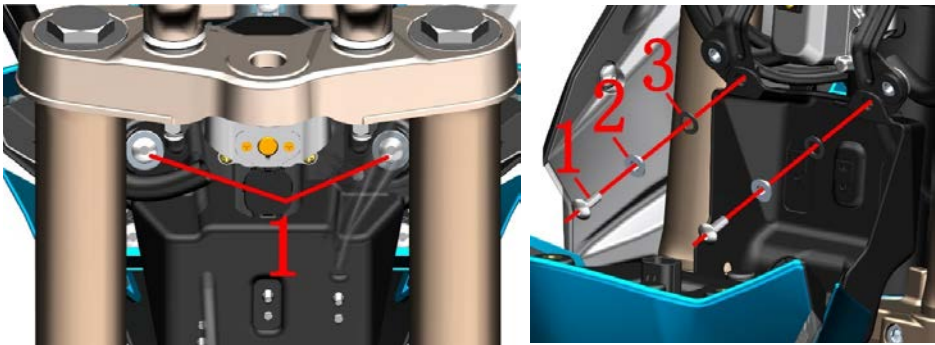

A


B

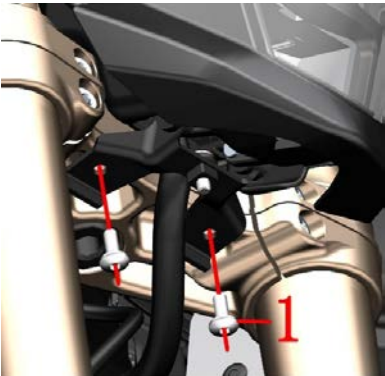

C



E

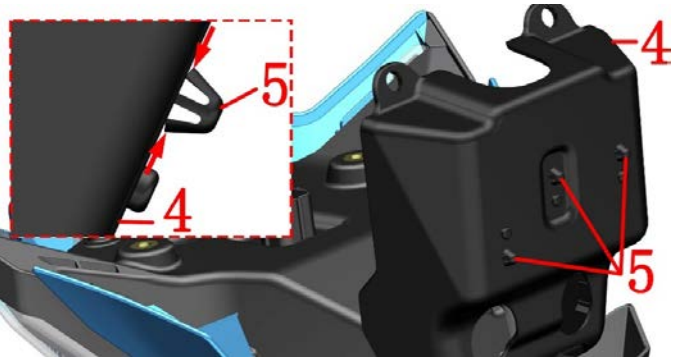

D

Fig.10 FRONT FORK COMPONENT		Head component	CHK	
			ADJ	
NO.	PART NO.	PART NAME	QTY	CAUTION
1	1251100-102000	Non-standard bolt M6×16 (304 stainless steel)	7	
2	1274100-057095	Flanging bushing φ6.2×φ8.4×3.5+φ14×1.5	2	
3	1244100-052000	Cuff bushing cushioning rubber (φ8.5×φ14×1)	2	
4	1224200-007000	ZT310-R storage box	1	
5	1224200-008000	ZT310-R line card nail	3	

PROCEDURE:

●Head assembly

After holding the head assembly, turn the left and right directions to the bottom respectively. Remove the bolts and remove the bolts (1), as shown in Figure A.

After holding the head unit, tilt it forward and remove all the cable connectors. Remove the bolt(1), bushing(2), and cushion rubber (3) as shown in Figure B.

Hold the head assembly and remove the bolt (1). As shown in Figure C, remove the head assembly.

As shown in Figure D, use a pair of pliers to clamp in the direction of the arrow with a little force and then push the threaded clip (5) out of the storage box.

Remove the wire box(4) from the head assembly after removing the bolt(1), as shown in Figure E.

CAUTION:

●Pay attention to the force when removing the cable and unplugging the plug and the cable to avoid damage.

●The head unit should be supported during the disassembly process and protective measures should be taken to prevent scratching the lamp cover or paint surface.

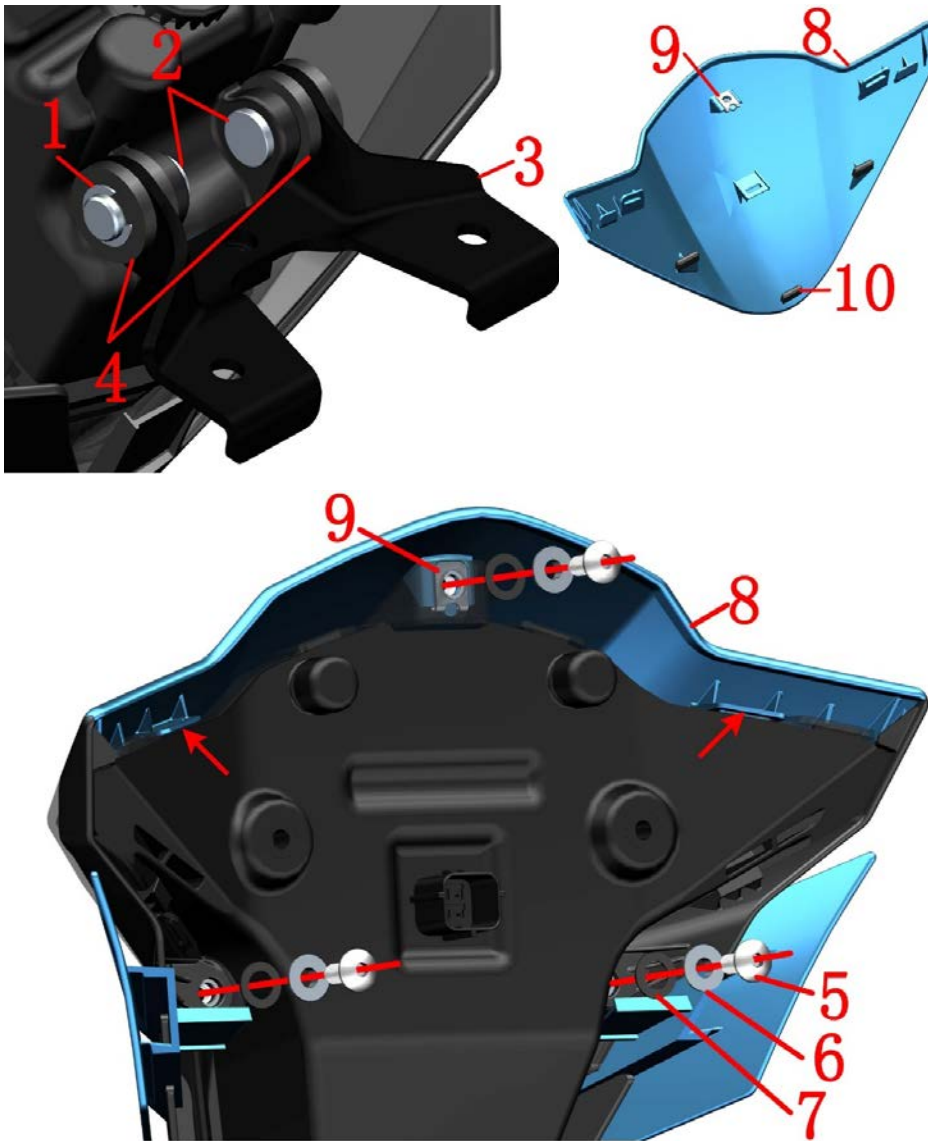



Fig.11 FRONT FORK COMPONENT		Headgear headlight component 1	CHK	
			ADJ	
NO.	PART NO.	PART NAME	QTY	CAUTION
1	1264100-006000	ZT250-S pedal circlip	2	
2	1274200-024000	ZT310-R headlight rotating pin	2	
3	1274200-007000	ZT310-R headlight lower bracket	1	
4	1240400-007000	HJ125-3 battery bracket cushion rubber ring	2	
5	1251100-102000	Non-standard bolt M6×16 (304 stainless steel)	3	
6	1274100-057095	Flanging bushing φ6.2×φ8.4×3.5+φ14×1.5	3	
7	1244100-052000	Cuff bushing cushioning rubber (φ8.5×φ14×1)	3	
8	4044201-013064	ZT310-R headlights on the decorative cover (bright blue)	1	blue
	4044201-013041	ZT310-R headlights on the decorative cover (bright green)		green
	4044201-013061	ZT310-R headlights on the decorative cover (bright purple)		purple
	4044201-013021	ZT310-R headlights on the decorative cover (bright black)		black
	4044201-013011	ZT310-R headlights on the decorative cover (bright red)		red
	4044201-509031	ZT310-R headlights on the decorative cover (bright yellow)		yellow
9	1251300-063093	Splint M6×11×15 (environmental color)	1	
10	1244200-005000	ZT310-R hood cushion rubber	3	

PROCEDURE:

● Headlight bracket

Locate the notch of the circlip(1), push the circlip from the pin(2) with a tool, and then remove the circlip and pin.

After the headlight lower bracket assembly is removed, the cushion rubber ring(4) is separated from the headlight lower bracket(3).

● Headlight cover

Place the headlamp headlight assembly. It is recommended to place a soft cloth or sponge underneath to prevent scratching the headlight cover.

Remove the bolt(5); remove the bushing(6) and the cushion rubber(7).

Use a small flat-blade screwdriver to insert the trim cover and the headlight gap (as indicated by the arrow in the lower left figure), open the decorative cover limit buckle, hold the headlight cover in one hand and fix it, push the top of the decorative cover with one hand and push forward. Separate the trim cove(8) from the headlight assembly.

Remove the splint nut(9) and the hood cushion rubber(10) from the trim cover(8).

CAUTION:

● Protect protective measures to prevent scratching the lampshade or paint finish.

● Pay attention to the force when opening the buckle to prevent the buckle from breaking due to excessive force.

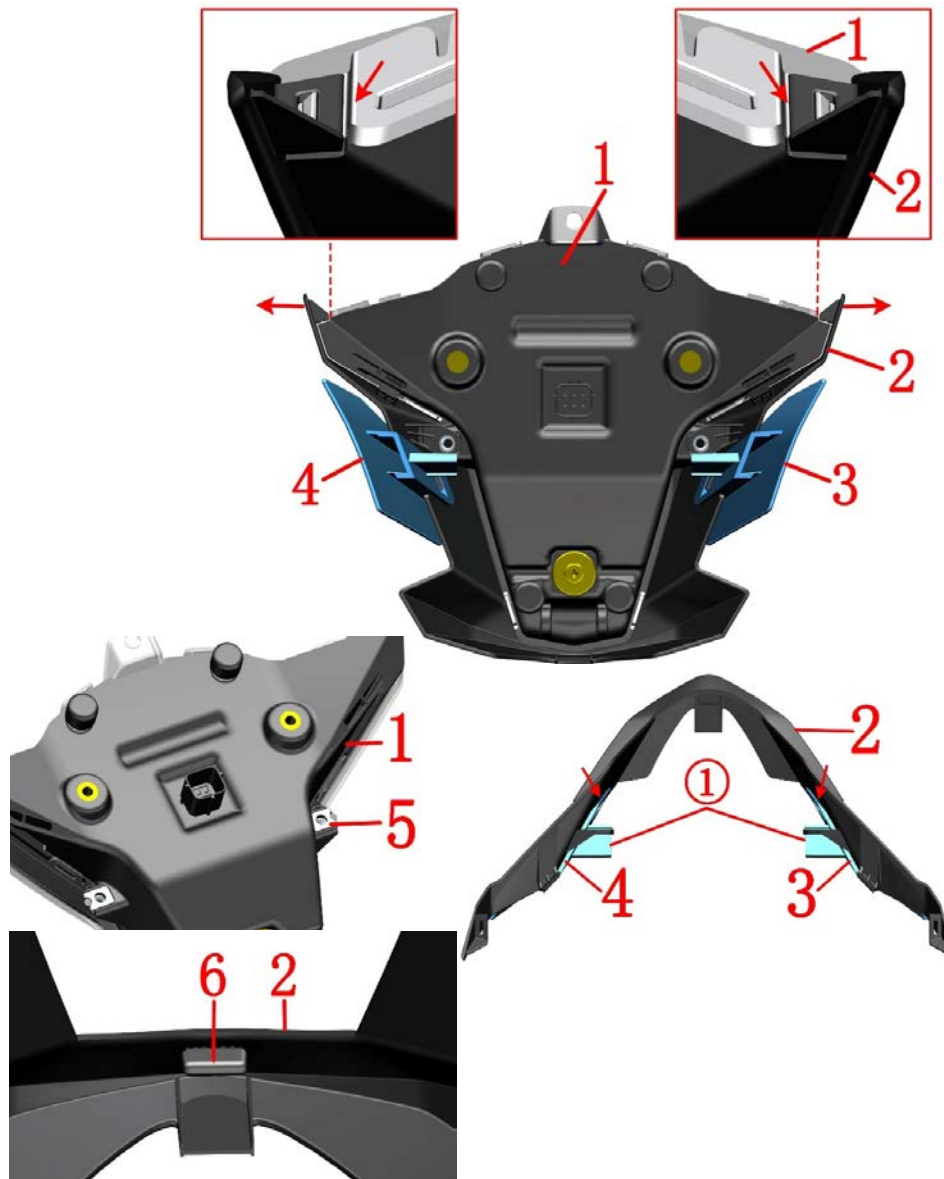


Fig.12 FRONT FORK COMPONENT		Headgear headlight component 2		CHK	CAUTION
NO.	PART NO.	PART NAME	QTY	ADJ	
1	1174300-001000	ZT310-R front combination headlights	1		
2	4044201-023052	ZT310-R hood (iron grey)	1		【1】
	4044201-023051	ZT310-R hood (dark gray)			【2】
	4044201-023021	ZT310-R hood (bright black)			【3】
3	4044201-015064	ZT310-R hood right decorative cover (bright blue)	1		blue
	4044201-015041	ZT310-R hood right decorative cover (bright green)			green
	4044201-015061	ZT310-R hood right decorative cover (bright purple)			purple
	4044201-015021	ZT310-R hood right decorative cover (bright black)			black
	4044201-015011	ZT310-R hood right decorative cover (bright red)			red
	4044201-511031	ZT310-R hood right decorative cover (bright yellow)			yellow
4	4044201-014064	ZT310-R hood left decorative cover (bright blue)	1		blue
	4044201-014041	ZT310-R hood left decorative cover (bright green)			green
	4044201-014061	ZT310-R hood left decorative cover (bright purple)			purple
	4044201-014021	ZT310-R hood left decorative cover (bright black)			black
	4044201-014011	ZT310-R hood left decorative cover (bright red)			red
	4044201-510031	ZT310-R hood left decorative cover (bright yellow)			yellow
5	1251300-063093	Splint M6×11×15 (environmental color)	2		
6	1244200-005000	ZT310-R hood cushion rubber	1		

PROCEDURE:

●Head cover assembly

Use a small flat-blade screwdriver to insert the hood and the headlight gap (as indicated by the arrow on the upper left). Open the buckle, hold the headlights in one hand and fix it. Pull the top of the head cover forward and pull the hood. The assembly is separate from the headlight assembly.

Remove the splint nut (5) from the headlight assembly.

Remove the hood cushion rubber (6) from the hood assembly.

Use a small flat-blade screwdriver to insert the hood and trim cover gap (as indicated by the arrow in the lower right corner) to open the buckle and separate the hood cover from the hood.

CAUTION:

- Protect protective measures to prevent scratching the lampshade or paint finish.
- Pay attention to the force when opening the buckle to prevent the buckle from breaking due to excessive force.
- 【1】 for bright blue motorcycle; 【2】 for dark grey bright blue / bright green / bright purple / bright red /bright yellow motorcycle; 【3】 for dark grey bright black motorcycle.

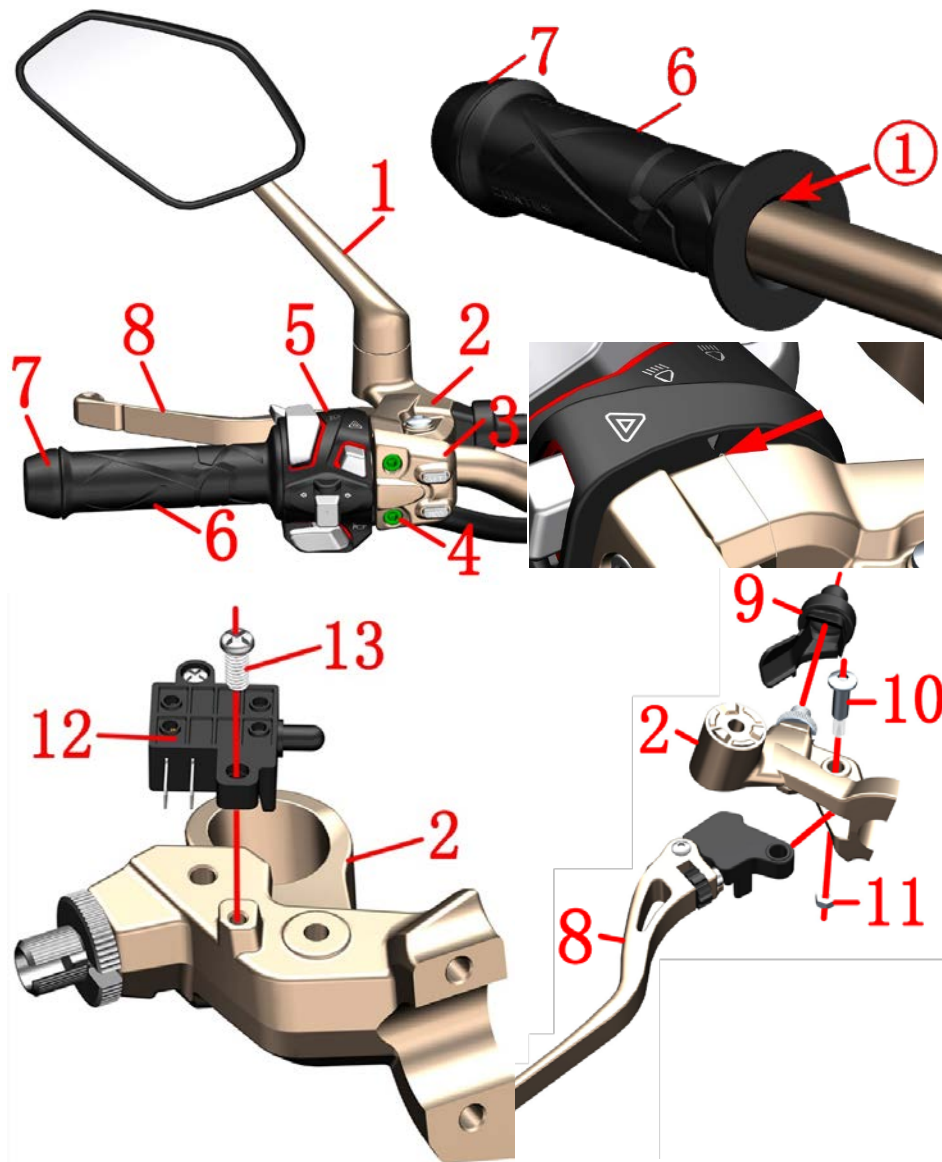


Fig.13 FRONT FORK COMPONENT		Left hand component		CHK	CAUTION
				ADJ	
NO.	PART NO.	PART NAME		QTY	
1	1194100-001000	ZT250-S left rear view mirror		1	
2	1244200-046000	ZT310—V left hand rocker arm component		1	
3	1184200-146000	Second Generation Left Handlebar auxiliary Switch (TFT)		1	
4	1250205-031091	GB70.1M6×30 (stainless steel)		2	
5	1184200-184000	ZT310-V1 left handlebar switch		1	
6	1244100-041000	ZT250-R left hand rubber sleeve		1	
7	1134200-023000	ZT250-R balance block		1	
8	1134200-010000	ZT310-V left hand rocker arm (machine plus)		1	
9	1244200-046000	ZT310—V protective rubber sleeve		1	
10	1251100-198000	Non-standard bolt M6×13—φ8×20		1	
11	1251300-073000	GB/T6185 nut M6		1	
12	1184200-170000	ZT310-V Clutch switch		1	
13	1250201-039000	GB818 cross recessed pan head screw M4×12 (color zinc)		1	

PROCEDURE:

● left rear view mirror, left switch, rocker arm

Remove the clutch line by referring to the "Replace Clutch Line" procedure. Remove the left rear view mirror (1), rocker base(2), left sub switch(3), bolt(4), left switch(5), and rocker arm(8) by referring to the steps in "Right Handle Assembly" and "Add Brake Fluid, Adjusting Rocker Arm".

● Left hand rubber sleeve and balance block assembly

Use a blow gun to blow the left hand grip between the rubber sleeve(6) and the direction handle tube while moving the rubber sleeve inward until the balance block positioning hole is exposed.

Use the tool to press the convex part at both ends of the elastic piece on the balance block and pull out the balance block assembly(7). Use a blow gun and move the outer sleeve to remove the left hand grip(6).

● Replace the left hand rocker arm and clutch switch

Fix the bolt(10) with a hexagonal tool, then remove the nut(11) with a sleeve or a wrench, remove the bolt(10) and then remove the left hand rocker arm(8).

First unplug the clutch switch, then remove the bolt (12) with a Phillips screwdriver and remove the clutch switch (12). The rotation adjustment nut can adjust the distance between the rocker arm and the left hand rubber sleeve to adapt to the feel of different drivers.

CAUTION:

● When assembling the switch, first align the locating hole under the switch with the direction to align the Threaded Hole on the tube, then assemble the Phillips head bolt first, and then install the hexagon socket head bolt. Be sure to pay attention to the cable that cannot be pressed inside the switch; the torque should not be too large.

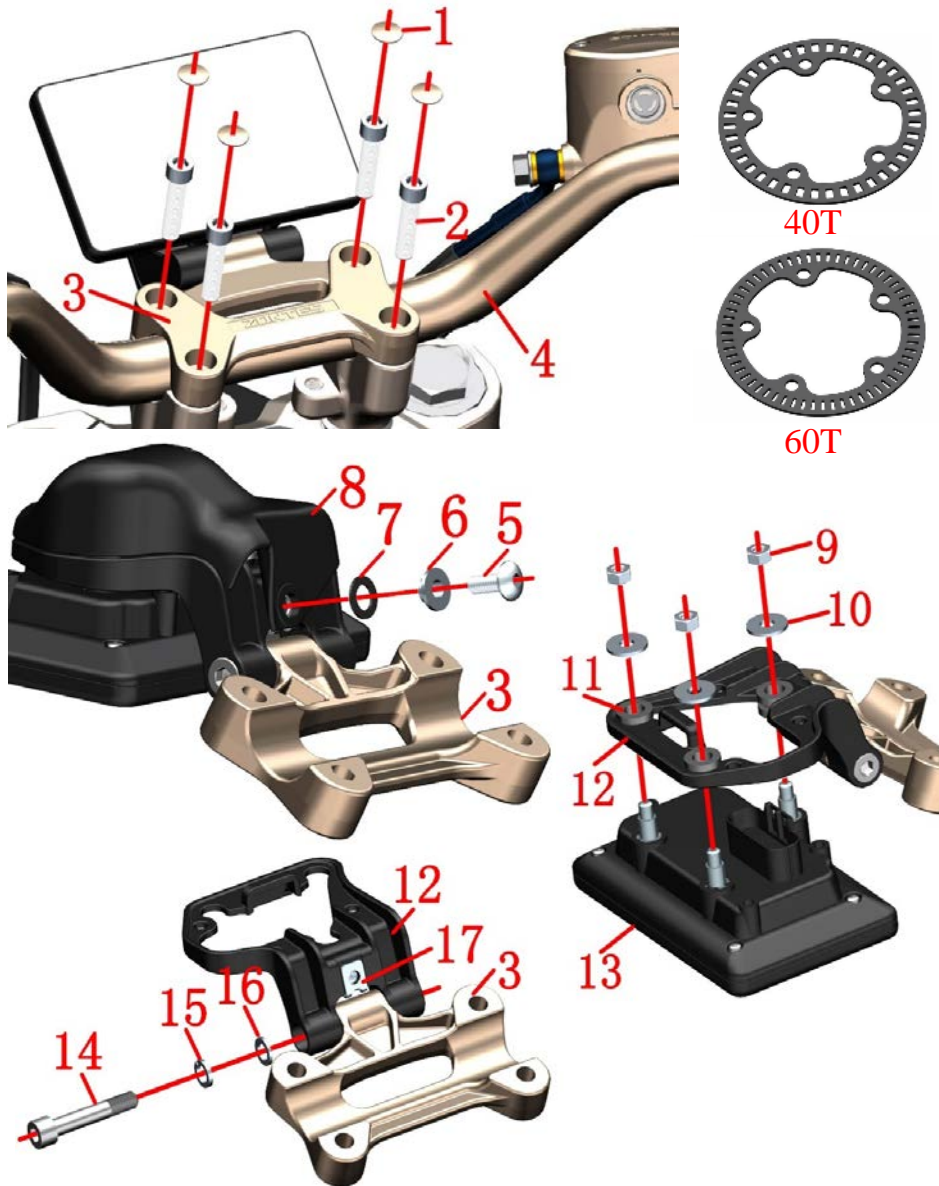


Fig.15 FRONT FORK COMPONENT		Direction handle&TFT Instrument	CHK	CAUTION
NO.	PART NO.	PART NAME	QTY	
1	4044102-001051	ZT250-SM8 bolt decorative buckle	4	
2	1250205-034093	GB70.1 Hexagon M8×30 (color zinc)	4	
3	1134200-018000	ZT310—R1 direction handlebar clamp (TFT meter)	1	
4	1134200-003000	ZT310-R direction	1	
5	1251100-102000	Non-standard bolt M6×16 (304 stainless steel)	1	
6	1274100-057095	Flanging bushing φ6.2×φ8.4×3.5+φ14×1.5	1	
7	1244100-052000	Cuff bushing cushioning rubber (φ8.5×φ14×1)	1	
8	1224200-128000	ZT310-R1 instrument decorative cover	1	
9	1250301-020093	GB6170M6 (environmental color)	3	
10	1250502-010093	GB96.1φ6 (environmental color)	3	
11	1244200-092000	ZT310 TFT instrument cushioning rubber	3	
12	1274200-355051	ZT310-R1 speedometerbracket (dark gray matte/TFT in	1	
13		ZT310 TFT instrument	1	
14	1250205-006091	GB70.1M8×45 (White Zinc)	1	
15	1250501-007093	GB93φ8 (environmental color)	1	
16	1251500-081000	Flat washer φ13×φ8.2×1.5 (environmental color)	1	
17	1251300-063093	Splint M6×11×15 (environmental color)	1	

PROCEDURE:

● Directional components

Use a blade to pick up the decorative buckle(1), hold the direction handle(4) in one hand, and remove the bolt(2) with a hexagonal tool in one hand; remove the clamp(3) and finally remove the direction handle(4).

● Instrumentation components



Flip the instrumentation components forward, remove the bolt (5), remove the flanging bushing (6) and cushioning rubber (7). Push the instrument decorative cover (8) forward and remove it.

Locate and unplug the meter cable connector. Remove the nut (9) separately, remove the gasket (10) and remove the instrument (13). Be careful to protect the meter screen.

Instrument Bracket Assembly Remove the bolt (14) and remove the spring washer (15) the flat washer (16). The instrument bracket (12) is separated from the pressure block (3) and the splint nut (17) is removed.

CAUTION:

● The motorcycles produced before May 18, 2019 use 40T inductive gear rings. And then use 60T. Bosch EFI and Delphi EFI instruments cannot be mixed and used. Please confirm the status of your bike before purchasing.

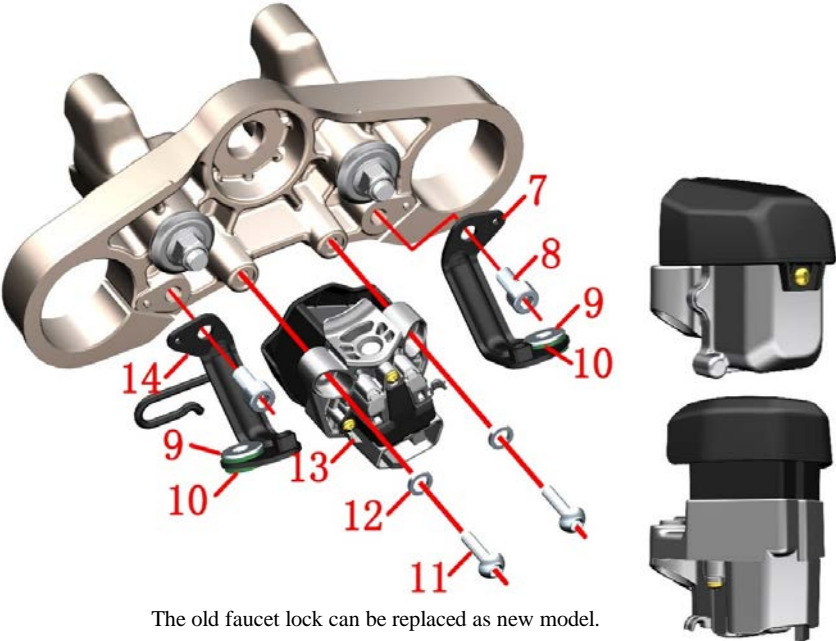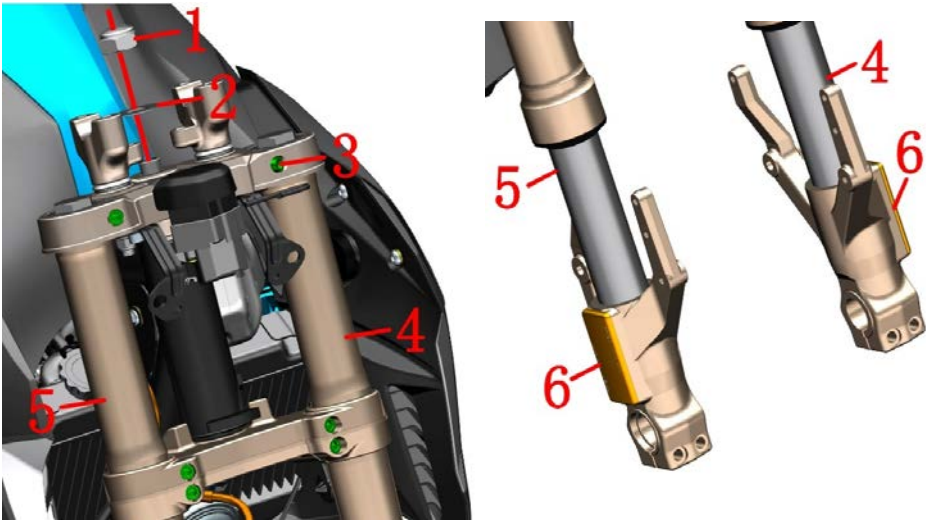

The old faucet lock can be replaced as new model.

Fig.15 FRONT FORK COMPONENT		Front shock absorber, upper plate component	CHK	
			ADJ	
NO.	PART NO.	PART NAME	QTY	CAUTION
1	1251300-045000	ZT250-S upper plate decorative nut (chrome plated)	1	
2	1251500-050000	ZT250-S upper plate gasket φ18.5×φ39×1	1	
3	1250205-034093	GB70.1 Hexagon M8×30 (color zinc)	6	25N.m
4		Front left shock absorption	1	
5		Front right shock absorption	1	
6	1174100-001000	ZT250-S reflector	2	after-sales
7	1274200-008000	ZT310-R headlights upper right bracket	1	
8	1250205-040095	GB70.1 Hexagon bolts M8×16(environmental color zinc)	2	
9	1251700-059093	Flanging bushing φ6.4×φ9×8+φ18×2	2	
10	1240400-007000	HJ125-3 battery bracket rubber circle	2	
11	1251100-121093	Non-standard bolt M6×25 (environmental color)	2	
12	1250501-007093	GB93φ8 (environmental color zinc)	2	
13	1184200-034000	ZT310-R electronic faucet lock (DC)	1	Old
	1184200-139000	ZT310 faucet lock (electromagnetic) assembly		New
14	1274200-006000	ZT310-R headlights upper left bracket	1	

PROCEDURE:

●Uplink board assembly

Locate the faucet lock plug and remove it; remove the nut(1) and the shims(2). Remove the upper plate bolt(3).

●Front left and right shock absorption

Old Remove the bolts(3) of the lower plate, and hold the shock absorber in the middle with one hand. Insert a slotted screwdriver into the slot of the upper and lower plates to slightly enlarge the slot clearance, and disassemble the left shock absorber (4) and the right shock absorber(5). under. Remove the upper plate assembly.

●Reflecting film

Reflective sheets are sold separately for sale (no replacement shock absorption). The heat-reflecting sheet can be moved back and forth by a hot air blower to reduce the viscosity of the double-sided adhesive after being heated, and the residual glue should be cleaned after removing the reflector.

●Headlight bracket

First remove the bushing(9) and cushion rubber (10). Remove the bolts(8) and remove the upper left bracket (14) and the upper right bracket (7).

●faucet lock

Remove the bolt (11) and the spring washer(12) and the faucet lock (13).

CAUTION:

●Old faucet lock can be replaced as new models.

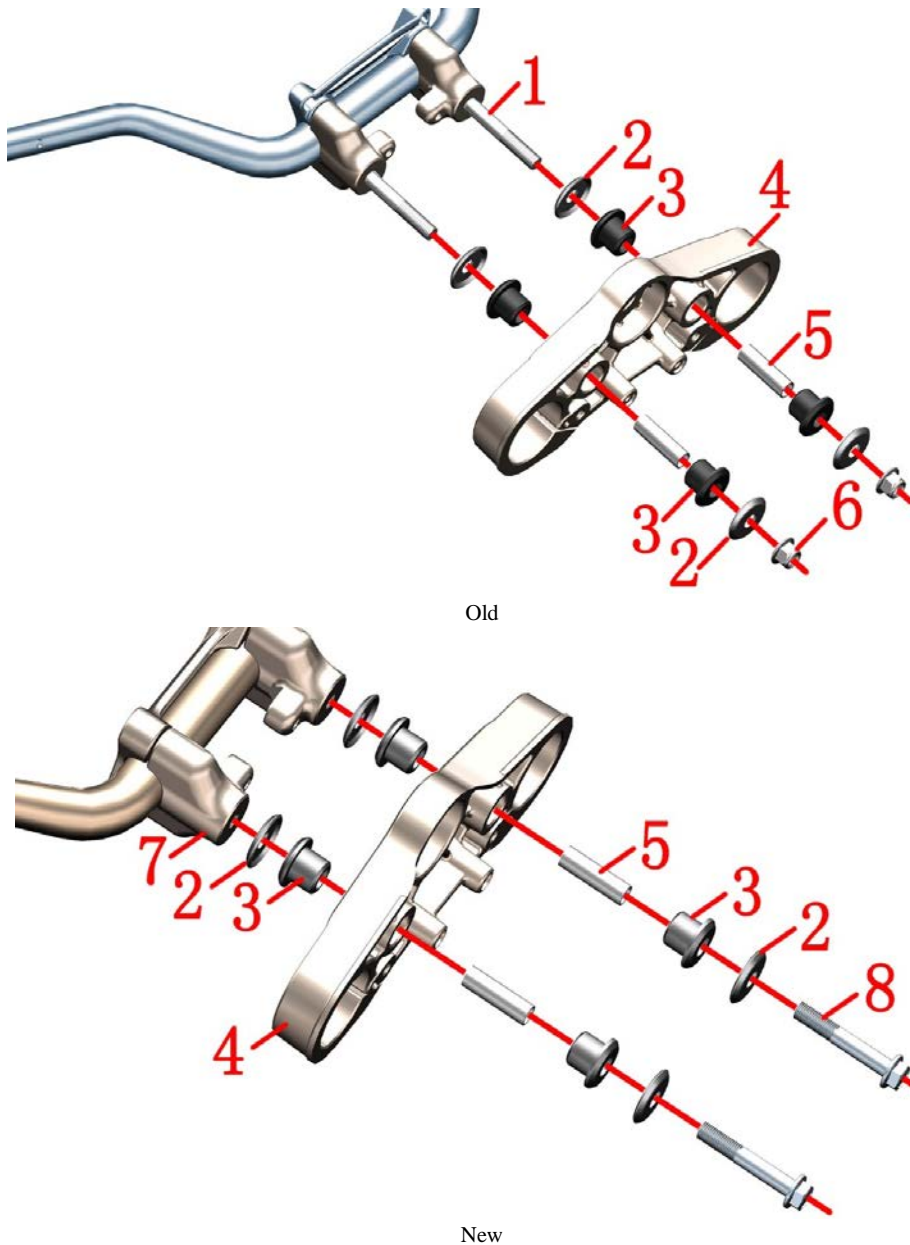


Fig.16 FRONT FORK COMPONENT		Uplink plate, direction handle block component		CHK	CAUTION
NO.		PART NO.		ADJ	
		PART NAME		QTY	
1	1134200-012000	ZT310-R direction pad component		2	Old
2	1274200-018000	ZT310-R upper plate gasket		4	
3	1244200-008000	ZT310-R upper plate buffer rubber		4	
4	1134200-004000	ZT310-R upper plate		1	
5	1251700-065000	ZT310-R bushing $\phi 10 \times \phi 12 \times 41$		2	
6	1251300-057093	Non-standard nut M10×1.5 (Dacro)		2	Old
7	4094200-002051	ZT310-R direction pad M10×1.25 (titanium/spray point)		2	New
8	1250105-280000	GB5789 M10×1.25×60 (level 10.9 dacromet)		2	

PROCEDURE:

● Uplink plate and spacer assembly

In order to facilitate the direction of the block, the direction and the upper block should be assembled first to prevent the block from rotating during the disassembly process. The direction should be wrapped with cotton or other soft materials to prevent scratching the paint surface.

Remove the nut(6) with a 14# sleeve and remove the gasket(2), cushion rubber(3), and bushing(5).

Remove the upper plate(4).

The spacer(1), the upper clamp and the direction handle are disassembled.

CAUTION:

● Protect protective measures to prevent scratching the appearance of parts.

● When reassembling, it is necessary to use the direction to ensure that the center and direction of the spacers on both sides are coaxial with the center. First install 4 pieces of cushioning rubber into the upper plate and then install the bushing separately. Make sure that the bushing is flush with the cushioning rubber, otherwise it should be reassembled. When tightening the nut, ensure that the torque is 40N.m. Check the buffer for spillage and reassemble if necessary.

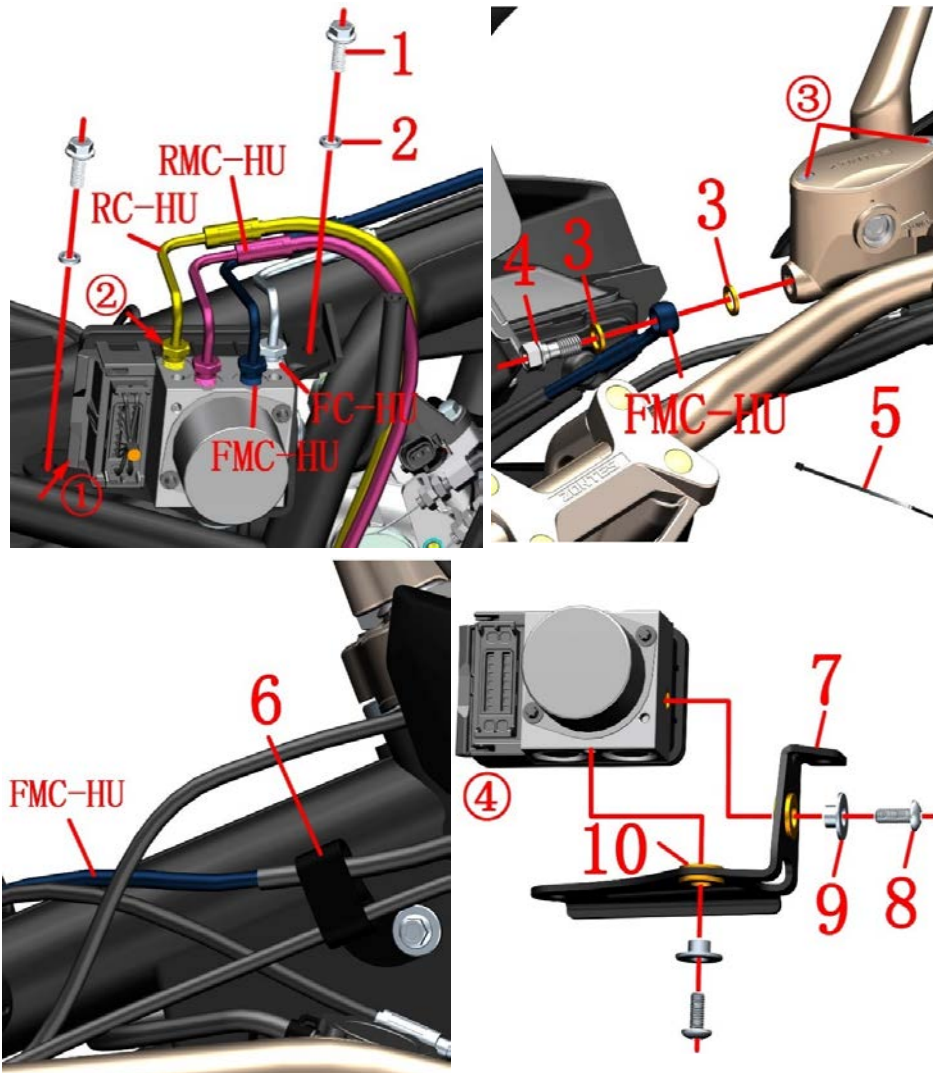


Fig.17 FRONT FORK COMPONENT		ABS brake system-1		CHK	CAUTION
NO.		PART NO.		ADJ	
		PART NAME		QTY	
1	1251112-001093	M6×16 Hex flange bolt (environmental color zinc)		2	
2	1250501-010000	GB93 φ6 (environmental color)		2	
3	1251513-013000	Brake brake tubing copper washer φ15×φ10.2×1.5		2	
4	1251100-112000	Disc brake tubing bolt M10×1—22		1	
5	1224100-037000	0 grade flame retardant cable tie (black 3.6×295)		1	
6	1224200-016000	ZT310—R Clamp		1	
7	4024200-006000	ZT310-R ABS mounting bracket		1	
8	1274100-007000	ZT250-S flanging sleeve (φ6.4×φ9×6+φ20×2)		2	
9	1251100-102000	Non—standard bolt M6×16 (304 stainless steel)		2	
10	1244100-004000	ZT250—S Flanging bushing buffer		2	

PROCEDURE:

● Release brake fluid

Remove the connector by pushing the cable connector① pusher open. Cut the cable tie (5).

Remove the bolt ③ first, and replace the oil cup top cover, cover plate and sealing gasket with reference to the front brake fluid addition step.

Remove the bolt (1) and remove the spring washer (2). Pull the ABS control unit and mounting bracket assembly out of the frame.

Wear waterproof gloves after placing the oil pan. Use the open-end wrench to loosen the nut joints of the 4 oil pipes. After the brake fluid is discharged, remove the hydraulic control unit and wipe off the oil. Be careful not to let the brake fluid come into contact with the cable connector to prevent poor contact due to corrosion. The torque of the nut ② is 18 N.m.

RC-HU is connected to the hydraulic control unit and rear brake caliper; RMC-HU is the rear disc brake main pump; FC-HU is the front disc brake caliper; FMC-HU is the front disc brake main pump.

● FMC-HU

For the disassembly of the front disc brake main pump and handle, see the previous steps.

After wearing the waterproof gloves, remove the bolts (4) with a 12# sleeve; remove the copper washers (3). Remove the FMC-HU tubing after removing the clamp (6). It is recommended to replace the two copper washers (3) at the same time when replacing the tubing. The bolts (4) needn't to be replaced if they are not damaged.

Wipe the end faces of the bolt (4) and the front disc brake main pump before replacing the FMC-HU tubing. After installing the tubing, add DOT4 brake fluid and vent the brake system. Detailed steps can be found in Adding Brake Fluid.

● ABS mounting bracket

Remove the bolt (8) and remove the bushing (9). Separate the mounting bracket assembly from the ABS control unit ④. The cushion rubber (10) is separated from the mounting bracket (7).

CAUTION:

● Be sure to disassemble the muffler and engine after they have cooled down completely. The horizontal support of the vehicle should be fixed before disassembly and assembly work.

● The precautions for brake fluid are described in the previous section.

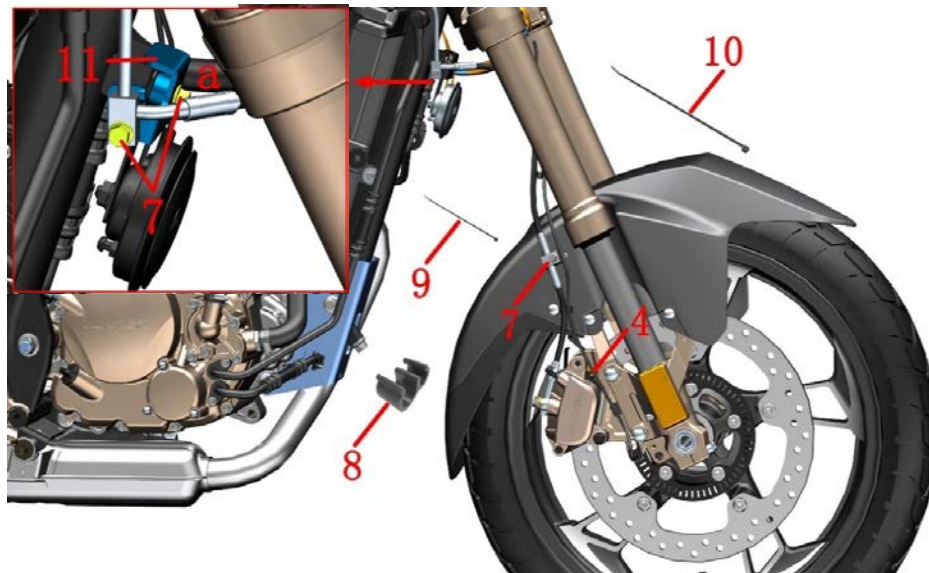
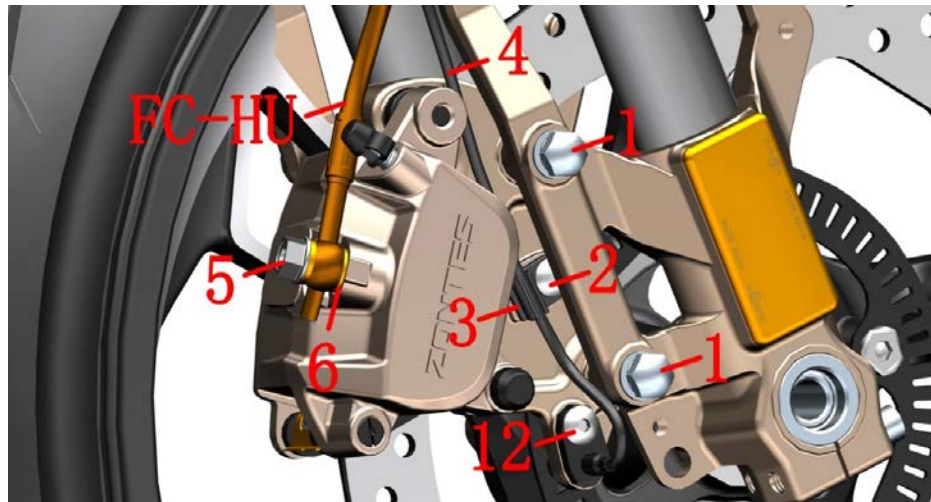


Fig.18 FRONT FORK COMPONENT		ABS brake system-2	CHK	
			ADJ	
NO.	PART NO.	PART NAME	QTY	CAUTION
1	1251100-080094	Non-standard bolt M8×37 (environmental color zinc)	2	
2	1251100-101000	Non—standard bolt M6×12 (304 stainless steel)	1	
3	1224200-127000	ZT310-T front wheel WSS wire clip	1	
4		System wheel speed sensor	1	
5	1251100-112000	Disc brake oil pipe bolt M10×1-22	1	
6	1251513-013000	Disc brake copper washer φ15×φ10.2×1.5	2	
7	1251100-061093	M6×22 Hex flange face full thread bolt	3	
8	1224100-044000	Wheel speed sensor clamp	3	
9	1224100-051000	0 Flame retardant tie (black 2.5×100)	1	
10	1224100-037000	0 grade flame retardant cable tie (black 3.6×295)	1	
11	1274200-033000	ZT310—R No.2 holder of front disc oil pipe	1	
12	1251100-102000	Non-standard bolt M6×16 (304 stainless steel)	1	

PROCEDURE:

● Brake brake fluid

Place the oil pan under the front disc brake caliper.

After wearing the waterproof gloves, remove the bolts (5) with a 12# sleeve; remove the copper washers (6).

Remove the two bolts (1) and remove the front disc brake caliper from the front shock absorber.

First remove the wheel speed sensor (4) from the clamp (3), then remove the bolt (2) and bolt (12), remove the wheel speed sensor (4) and the clamp (3) from the front disc brake caliper. Organize the wheel speed sensor line neatly.

Remove the two bolts (7) on the right side.

Cut the cable ties (9) and (10); remove the 3 clips (8). Then remove the FC-HU tubing. If you need to replace the FC-HU tubing, it is recommended to replace the two copper washers (6) at the same time; There is no need to replace the bolts (5) if they are not damaged.

● Front disc brake tubing bracket

If you only need to replace the oil pipe, you do not need to remove the oil pipe bracket (11). If you need to remove the bolt (7) on the position of a, remove it and can remove the bracket.

CAUTION:

● Be sure to disassemble the muffler and engine after they have cooled down completely. The horizontal support of the vehicle should be fixed before disassembly and assembly work.

● The precautions for brake fluid are described in the previous section.

● The torque of the nut ② is 18 N.m.

● It is recommended to replace the two copper washers (6) at the same time when replacing the oil pipe. There is no need to replace the bolts (5) if they are not damaged.

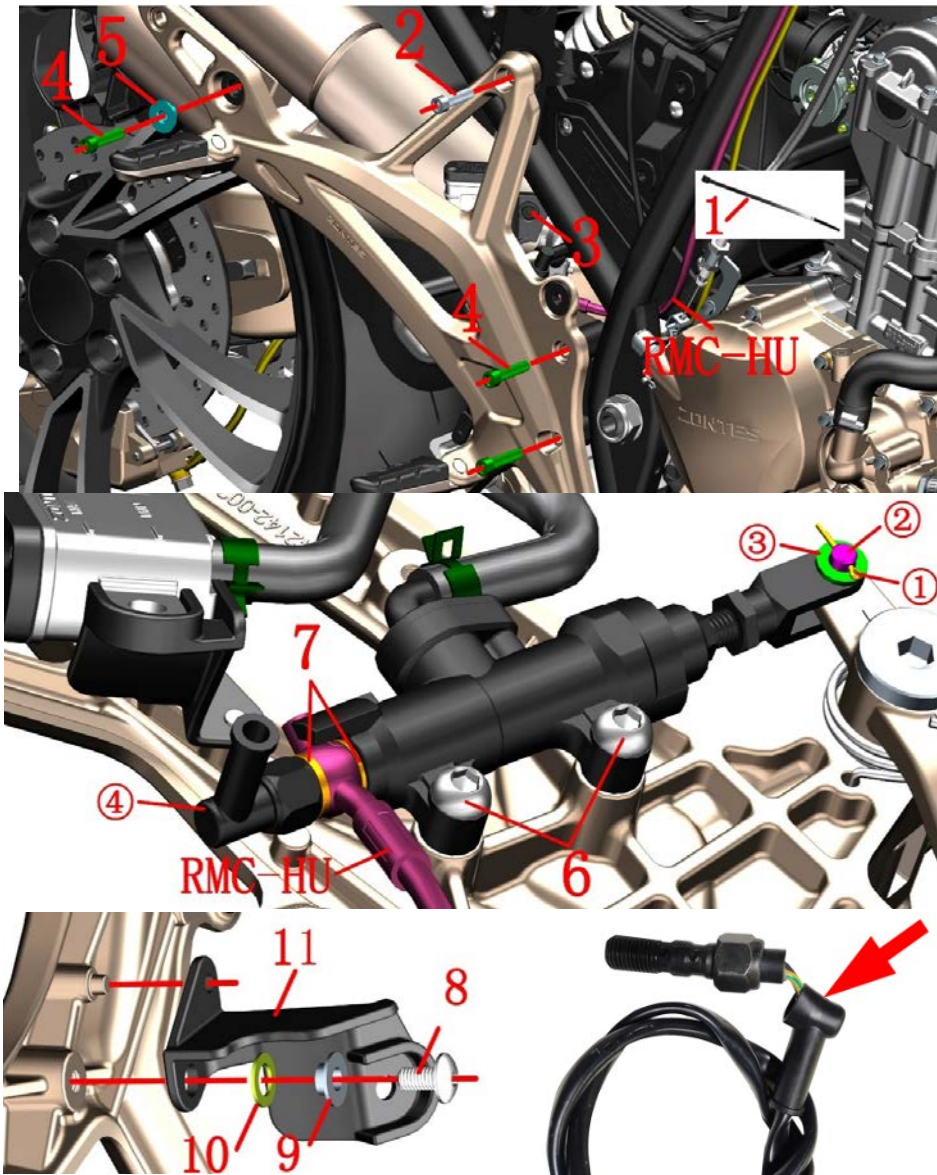


Fig.19 FRONT FORK COMPONENT		ABS brake system-3	CHK	
			ADJ	
NO.	PART NO.	PART NAME	QTY	CAUTION
1	1224100-037000	0 grade flame retardant cable tie (black 3.6×295)	1	
2	1250205-034093	GB70.1 Hexagonal M8×30 (environmental color zinc)	1	
3	1224100-010000	ZT250-S expansion nail	1	
4	1250205-023000	GB70.1 Hexagonal M8×35 (environmental color zinc)	3	
5	1274100-068095	ZT310 Muffler bush	2	
6	1251100-121093	Non-standard bolt M6×25 (environmental color)	2	
7	1251513-013000	Brake brake tubing copper washer φ15×φ10.2×1.5	2	
8	1251100-101000	Non-standard bolt M6×12 (304 stainless steel)	1	
9	1274100-057095	Flanging bushing φ6.2×φ8.4×3.5+φ14×1.5	1	
10	1244100-052000	Cuff bushing cushioning rubber (φ8.5×φ14×1)	1	
11	1224200-055000	ZT310-R rear disc brake oil cup holder	1	

PROCEDURE:

●Rear disc brake main pump

Use a small Phillips screwdriver to press down the center of the expansion nail(3) and remove the expansion nail.

Cut the cable tie (1) and find and remove the brake switch cable plug.

Remove the bolts (2) and bolts (4) and remove the gasket (5). Remove the right footrest bracket assembly and the RMC-HU tubing from the frame.

After wearing the waterproof gloves, remove the brake fluid by referring to the procedure of adding the brake fluid of the rear brake master pump. Use the open end wrench to loosen the brake switch nut 4. Remove the copper pad (7) and the RMC-HU oil tubing.

The cotter pin ① is straightened and then removed, and the pin ② and the spacer ③ are removed.

Remove the bolt (6) with the inner hexagon socket tool and remove the rear disc brake main pump assembly.

Remove the bolt (8), remove the bushing (9), rubber pad (10), and remove the oil cup bracket (11) from the right footrest bracket.

CAUTION:

●The precautions for brake fluid are described in the previous section.

● It is recommended to replace two copper washers (4) at the same time when replacing the oil pipe, rear brake switch wire or disc brake main pump.

● The rear brake switch line is prohibited from rotating the rubber cap at the arrow indication. Replace this switch wire. Be careful not to wrap the cable around the tool.

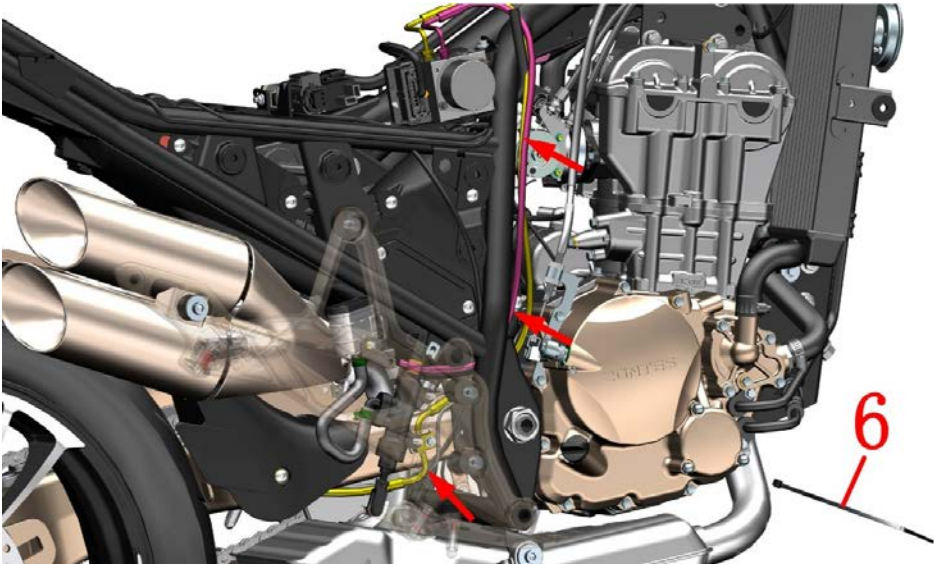
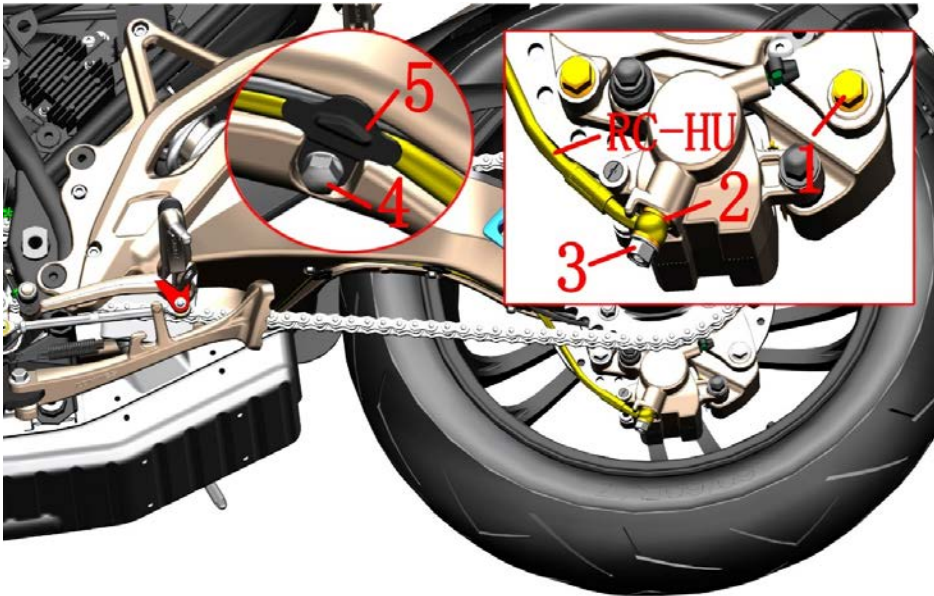


Fig. 20 FRONT FORK COMPONENT		ABS brake system-4	CHK	
			ADJ	
NO.	PART NO.	PART NAME	QTY	CAUTION
1	1251100-123093	non-standard bolt M8×25 (color zinc)	2	
2	1251513-013000	Brake brake tubing copper washer φ15×φ10.2×1.5	2	
3	1251100-112000	Disc brake tubing bolt M10×1-22	1	
4	1250104-006097	GB16674M6×12 (chromed/HH)	4	
5	1274200-119000	Single rocker rear flat fork tubing bracket	4	
6	1224100-037000	0 grade flame retardant cable tie (black 3.6×295)	3	

PROCEDURE:

●RC-HU tubing

Place the oil pan under the rear disc brake caliper
In the previous step of the parameter, the brake fluid step is used to loosen the nut connected to the RC-HU tubing and the pilot unit.

After wearing the waterproof gloves, remove the bolts (3) with a 12# sleeve; remove the copper washers (2). If you need to replace the RC-HU tubing, it is recommended to replace the two copper washers (2) at the same time; the bolts (3) can be replaced if they are not damaged.

Remove the 4 bolts(4) and remove the 4 pieces of tubing bracket(5).

Remove the RC-HU brake tubing after cutting the 3 straps(6) on the right side.

●Rear disc brake caliper

Remove the 2 bolts(1) to remove the rear disc brake caliper.

CAUTION:

- Be sure to disassemble the muffler and engine after they have cooled down completely. The horizontal support of the vehicle should be fixed before disassembly and assembly work.
- The precautions for brake fluid are described in the previous section.

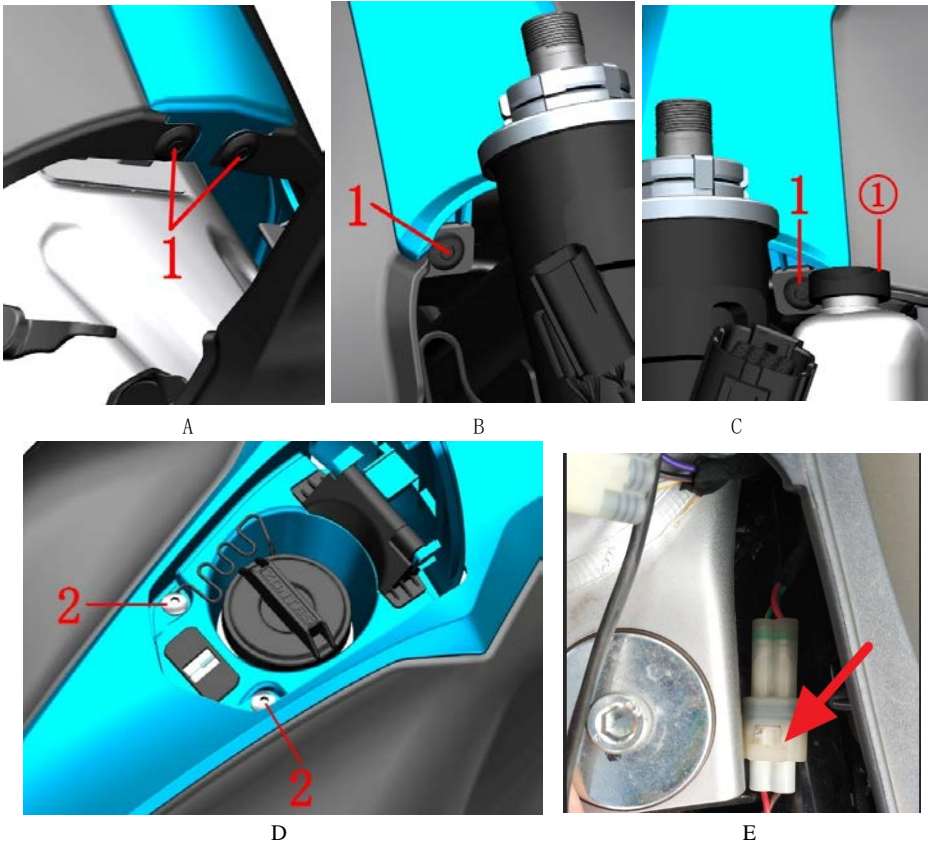


Fig.1 FUEL TANK COVER COMPONENT		Fuel tank middle cover component	CHK	
			ADJ	
NO.	PART NO.	PART NAME	QTY	CAUTION
1	1224100-010000	ZT250-S expansion nail	4	
2	1251100-102000	Non-standard bolt M6×16 (304 stainless steel)	2	

PROCEDURE:

- Middle cover assembly

Use a small Phillips screwdriver to push down the center of the expansion pin and remove the expansion pin(1) from the rear of the middle cover assembly (Figure A).

Turn the front of the car to the left and remove the expansion pin(1) on the right side of the front of the middle cover (Figure B).

Turn the front of the car to the right, open the sub tank cover and remove the expansion pin(1) on the left side of the front part of the middle cover (Fig. C).

Short press the unlock button " ". After the power-on self-test is completed, short press " " to open the fuel tank cover.

Remove the bolt(2) (Figure D).

Grasp the head of the middle cover assembly and pull it up; grasp the tail of the middle cover assembly and pull it up.

Locate the fuel tank lock cable plug (Figure E) on the right side cover and the rear of the tank liner and remove the middle cover assembly.

CAUTION:

- The material should be protected during the disassembly process to prevent damage to the paint surface.
- When removing the buckle, pay attention to the strength to prevent damage to the buckle.



Fig.2 FUEL TANK COVER COMPONENT		Fuel tank cover, fuel tank cover, fuel tank lock		CHK	ADJ	CAUTION
NO.	PART NO.	PART NAME	QTY	ADJ		
1	4044201-018064	ZT310-R fuel tank middle cover (bright blue)	1			blue
	4044201-018041	ZT310-R fuel tank middle cover (bright green)				green
	4044201-018061	ZT310-R fuel tank middle cover (bright purple)				purple
	4044201-018035	ZT310-R fuel tank middle cover (titanium matte)				black
	4044201-018011	ZT310-R fuel tank middle cover (bright red)				red
	4044201-514031	ZT310-R fuel tank middle cover (bright yellow)				yellow
2	1184200-002000	ZT310 electronic fuel tank lock	1			
3	4044201-019064	ZT310-R fuel tank cover (bright blue)	1			blue
	4044201-019041	ZT310-R fuel tank cover (bright green)				green
	4044201-019061	ZT310-R fuel tank cover (bright purple)				purple
	4044201-019035	ZT310-R fuel tank cover (titanium matte)				black
	4044201-019011	ZT310-R fuel tank cover (bright red)				red
	4044201-515031	ZT310-R fuel tank cover (bright yellow)				yellow
4	1224100-014000	ZT250-S fuel tank cover rotary damping	1			
5		Fuel tank cover rotating bracket	1			
6	1274100-090000	ZT250-S fuel tank cover rotating shaft	1			
7	1260100-215000	ZT310-T circlip	1			

PROCEDURE:

● fuel tank lock

Use a flat-blade screwdriver to carefully pry the ends of the middle cover and remove the fuel tank lock(2), taking care to prevent damage to the buckle.

● Fuel tank cover assembly


Use a needle-nose pliers to clamp the tab of the swivel bracket(5) with a slight force. Remove the cover assembly and take care to prevent damage to the buckle.

Remove the circlip(7) on the rotating shaft(6) ; the fuel tank cover rotating bracket(5) included circlip(7). Remove the rotating shaft and separate the rotating bracket(5) and the damper(4).

CAUTION:

- The material should be protected during the disassembly process to prevent damage to the paint surface.
- When removing the buckle, pay attention to the strength to prevent damage to the buckle.
- Be careful not to lose your own spring when removing the swivel bracket.
- When change fuel tank cover, pay attention to whether the length of the process clip① is too long. If it is too long, be sure to cut it short.

Fig.3 FUEL TANK	Decorative cover grill	CHK	
-----------------	------------------------	-----	--

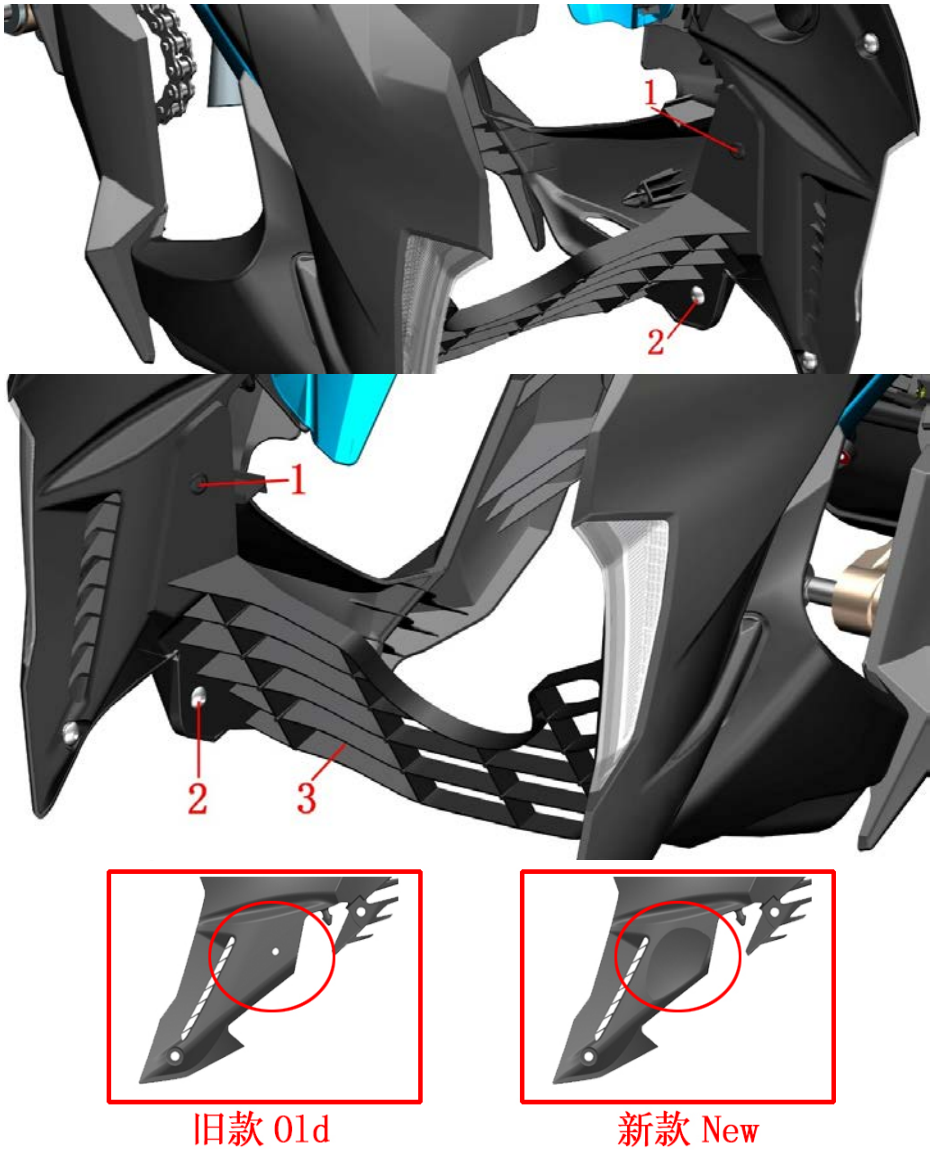

COVER COMPONENT		Decorative cover grille	ADJ	
NO.	PART NO.	PART NAME	QTY	CAUTION
1	1224100-010000	ZT250-S expansion nail	2	
2	1251100-102000	Non-standard bolt M6×16 (304 stainless steel)	2	
3	1224200-053000	ZT310-R decorative cover grill	1	

PROCEDURE:

●Furniture cover grille

Remove the expansion screw(1) and the bolt(2).


Remove the decorative cover grille in one hand, and grasp the bottom of the fuel tank trim cover with one hand and pull it out slightly, and remove the trim cover grille (3).

Starting in June 2021, the expansion nails and bolt mounting holes of the decorative cover grille have been removed from the rear cover of the new fuel tank decorative cover, and the decorative cover grille has been removed for subsequent production motorcycles.

CAUTION:

●The material should be protected during the disassembly process to prevent damage to the paint surface.

Fig.4 FUEL TANK COVER COMPONENT	Fuel tank trim cover component	CHK	
		ADJ	

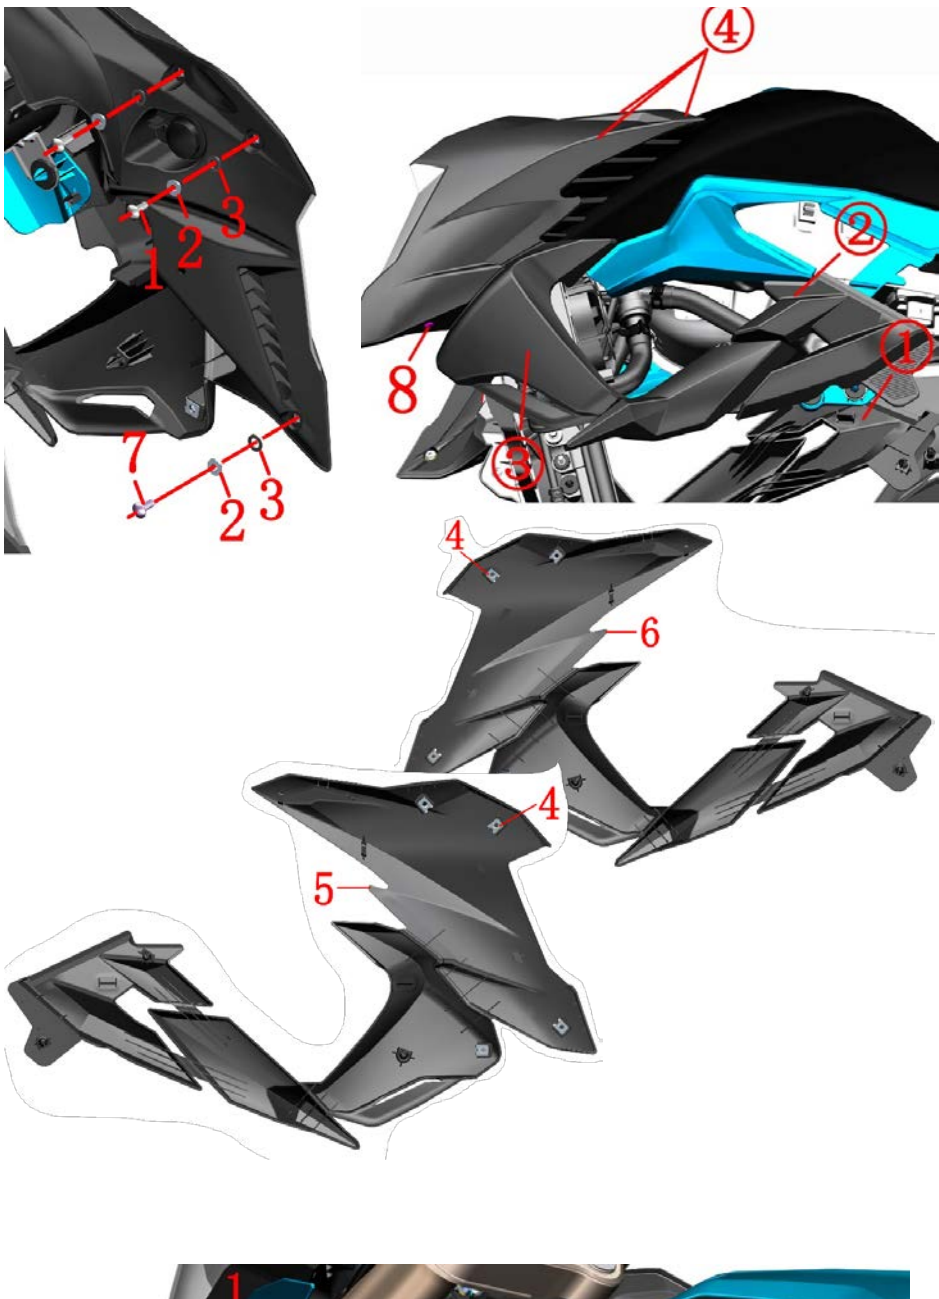

NO.	PART NO.	PART NAME	QTY	CAUTION
1	1251100-102000	Non-standard bolt M6×16 (304 stainless steel)	6	
2	1274100-057095	Flanging bushing φ6.2×φ8.4×3.5+φ14×1.5	6	
3	1244100-052000	Cuff bushing cushioning rubber (φ8.5×φ14×1)	6	
4	1251300-063093	Splint M6×11×15 (environmental color)	8	
5		ZT310-R fuel tank left decorative cover	1	
6		ZT310-R fuel tank right decorative cover	1	
7	1251100-101000	Non-standard bolt M6×12 (304 stainless steel)	2	
8	1224100-010000	ZT250-S expansion nail	2	

PROCEDURE:

●Left tank trim cover

Remove the bolts⁽¹⁾, ⁽⁷⁾separately;

Remove the bushing⁽²⁾ and the cushion rubber⁽³⁾.

Remove the expansion screw (8), Pull out in the order①-②-③ and pull out the trim cover⁽⁵⁾.

Press④ with one hand and push the trim cover forward to remove the left trim cover ⁽⁵⁾.


Remove the splint⁽⁴⁾ from the left trim cover⁽⁵⁾.




●Right tank trim cover

Remove the right trim cover⁽⁶⁾ by removing the left trim cover.

CAUTION:

- The left and right side covers and cushions must be removed in advance.
- The material should be protected during the disassembly process to prevent damage to the paint surface. The trim cover is long and should be handled or held by both hands during disassembly or assembly.
- When assembling, first fasten the ④ buckles, then install the staples in the order of ③-②-①.

Fig.5 FUEL TANK COVER COMPONENT		Fuel tank trim cover rear shell component	CHK	
			ADJ	
NO.	PART NO.	PART NAME	QTY	CAUTION

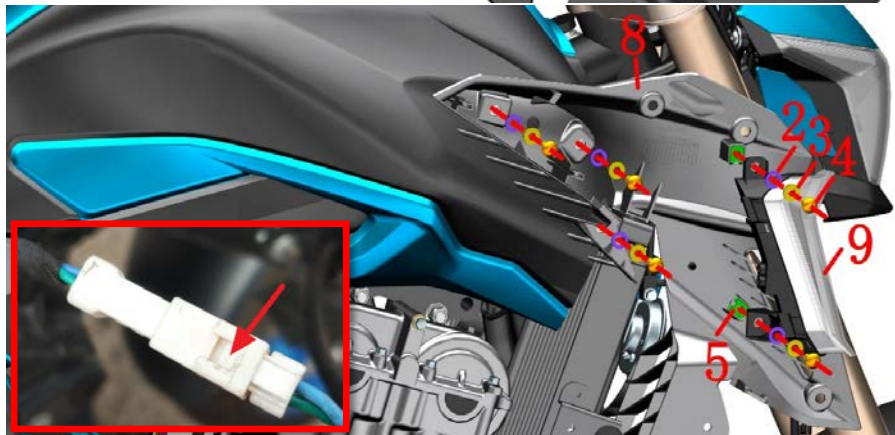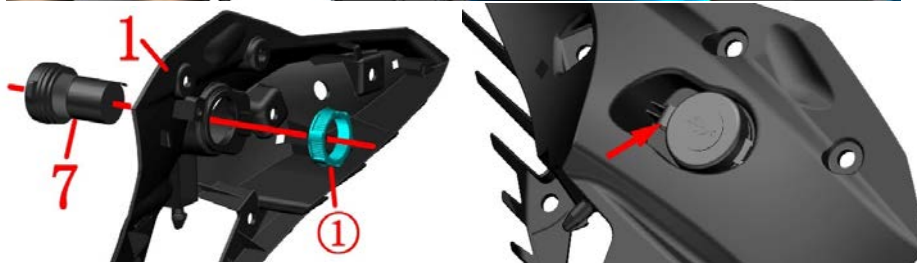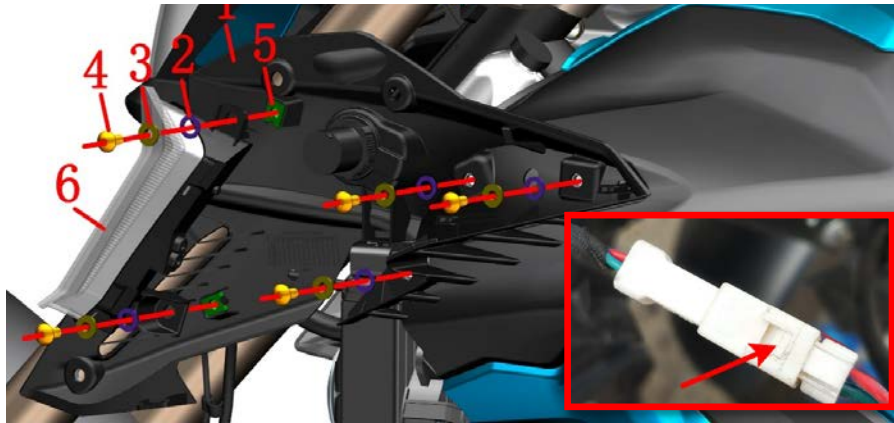

1	1224200-013000	ZT310-R fuel tank left decorative cover back shell	1	
2	1244100-052000	Cuff bushing cushioning rubber (φ8.5×φ14×1)	10	
3	1274100-057095	Flanging bushing φ6.2×φ8.4×3.5 + φ14×1.5	10	
4	1251100-102000	Non-standard bolt M6×16 (304 stainless steel)	10	
5	1251300-063093	Splint M6×11×15 (environmental color)	4	
6	1174200-004000	ZT310-R front left turn signal	1	
7		USB charging cable	1	dual-port
8	1224200-012000	ZT310-R fuel tank right decorative cover back shell	1	
9	1174200-005000	ZT310-R front right turn signal	1	

PROCEDURE:

●Left tank trim cover back shell assembly

Locate the left turn signal plug and press the limit buckle to pull it out. Locate the USB charging cable plug. Remove the 2 bolts(4) of the left turn signal(6) and remove the bushing(3) and the cushion rubber(2). Remove the left turn signal. Remove the splint(5) from the rear case.

Remove the other 3 bolts(4) from the rear cover of the left trim cover and remove the bushing(3) and cushion rubber(2). Remove the left rear housing assembly.

Remove the nut ① that comes with the USB charging cable. Remove the USB charging cable(7) from the rear case(1).

●Right tank trim cover back shell assembly

Locate the right turn signal plug and press the limit buckle to pull it out.

Remove the 2 bolts(4) of the right turn signal(9) and remove the bushing(3) and the cushion rubber(2). Remove the right turn signal. Remove the splint(5) from the rear case.

Remove the other 3 bolts(4) from the rear cover(8) of the right trim cover, and remove the bushing(3) and the cushion rubber(2). Remove the right decorative cover back cover(8).

CAUTION:


●Do not pull the cable directly when unplugging the connector. The cable should not be bent or entangled excessively during assembly.

●Pay attention to the alignment when assembling the USB charging cable, as shown on the right.

●When removing the turn signal, the transparent lamp cover should be protected to prevent scratches.



Fig.5 FUEL TANK COVER COMPONENT		New fuel tank trim cover rear shell component		CHK	CAUTION
				ADJ	
NO.	PART NO.	PART NAME		QTY	
1	1224300-090000	ZT350-R fuel tank left decorative cover back shell		1	

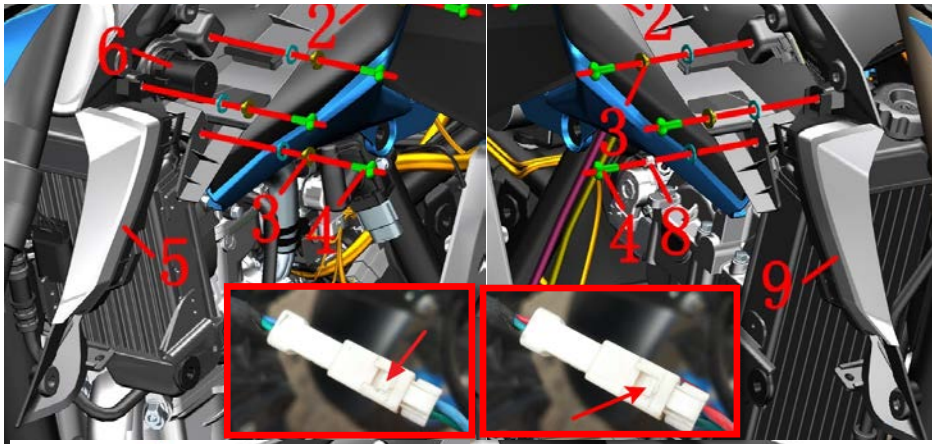

2	1244100-052000	Cuff bushing cushioning rubber ($\phi 8.5 \times \phi 14 \times 1$)	12	
3	1274100-057095	Flanging bushing $\phi 6.2 \times \phi 8.4 \times 3.5 + \phi 14 \times 1.5$	11	
4	1251100-102000	Non-standard bolt M6×16 (304 stainless steel)	8	
5	1174200-004000	ZT310-R front left turn signal	1	
6		USB charging cable	1	
7	1224300-091000	ZT350-R fuel tank right decorative cover back shell	1	
8	1274100-018000	Anti-hot plate sleeve, muffler	1	
9	1174200-005000	ZT310-R front right turn signal	1	
10	1251300-063093	Splint M6×11×15 (environmental color)	2	
11	1244100-015000	ZT250—S Adjusting nut rubber pad	1	
12	1251100-061093	M6×22 Hex flang bolt thread level 8.8 (color zinc)	2	
13	1250303-010093	GB6177.1M6 (environmental color)	2	
14	1224200-066000	ZT310PKE External antenna mount	1	

PROCEDURE:

● Left tank trim cover back shell assembly

Locate the left turn signal plug and press the limit buckle to pull it out. Locate the USB charging cable plug.

Use 4# inner hexagon remove the other 3 bolts(4) from the rear cover of the left trim cover and remove the bushing(3) and cushion rubber(2). Remove the left rear housing assembly.

Use 4# inner hexagon and 8# sleeve and 10# open ended spanner remove the bolts(4) and (12) of the left turn signal(7) and remove the bushing(3) and the cushion rubber(2) and nut(13). Remove the left turn signal. Remove the splint(10) from the rear case.

Remove the nut ① that comes with the USB charging cable. Remove the USB charging cable(7) and rubber pad(11) from the rear case(1).

● Right tank trim cover back shell assembly

Locate the right turn signal plug and press the limit buckle to pull it out.

Use 4# inner hexagon remove the other 3 bolts(4) from the rear cover(7) of the right trim cover, and remove the bushing(3) and the cushion rubber(2). Remove the right decorative cover back cover(7).

Use 4# inner hexagon and 8# sleeve and 10# open ended spanner remove the bolts(4) and (12) of the right turn signal and remove the bushing(3) and the cushion rubber(2) and nut(13). Remove the right turn signal. Remove the splint(10) from the rear case.

CAUTION:

● Do not pull the cable directly when unplugging the connector. The cable should not be bent or entangled excessively during assembly.

● Pay attention to the alignment when assembling the USB charging cable, as shown on the right.

● When removing the turn signal, the transparent lamp cover should be protected to prevent scratches.


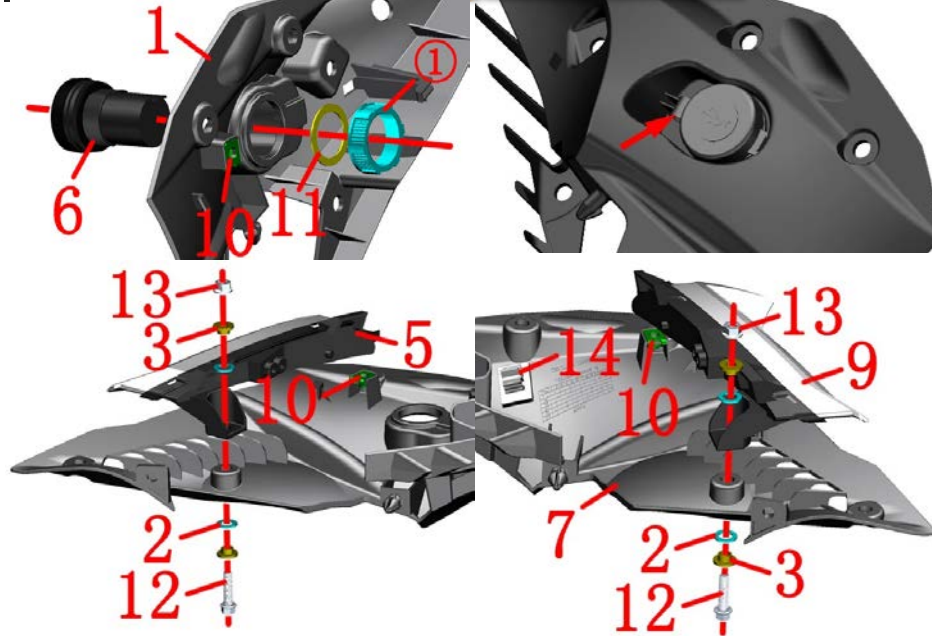


Fig.6 FUEL TANK COVER COMPONENT		Fuel tank cover component1		CHK	CAUTION
NO.	PART NO.	PART NAME	QTY	ADJ	
1	1244100-004000	ZT250-S Flanging bushing buffer	8		
2	1274100-007000	ZT250-S flanging sleeve ($\phi 6.4 \times \phi 9 \times 6 + \phi 20 \times 2$)	8		

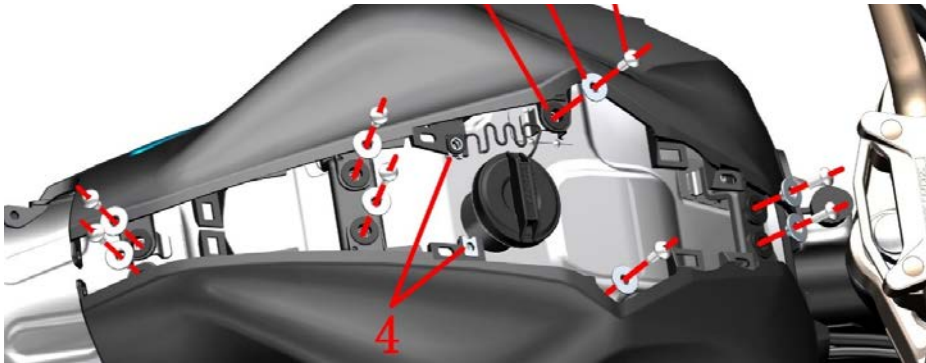

3	1251100-102000	Non-standard bolt M6×16 (304 stainless steel)	8	
4	1251300-063093	Splint M6×11×15 (environmental color)	8	
5	1244100-002000	ZT250-S side cover round glue	2	
6	1224200-066000	ZT310PKE external antenna mount	1	

PROCEDURE:

●Fuel tank cover assembly

Remove the 4 bolts(3) of the left tank cover and remove the bushing(2).

Pull out the parallel antennas at ① and ② respectively to find the external antenna mount(6). Press ③ and then pull the ④ toward the arrow to remove the PKE cable(6). Then remove the left Fuel tank cover assembly.

Remove the splint(4) and the side cover round(5) from the left Fuel tank cover assembly.

Follow the steps above to remove the right Fuel tank cover assembly, as well as the splint and side cover round.




CAUTION:

- The left and right side covers, the middle cover assembly and the seat cushion must be removed in advance.
- The material should be protected during the disassembly process to prevent damage to the paint surface.
- When removing and installing the staples, use parallel force to prevent damage to the staples.



Fig.7 FUEL TANK COVER COMPONENT		Fuel tank cover component2		CHK	
				ADJ	
NO.	PART NO.	PART NAME	QTY	CAUTION	
1	4044201-033052	fuel tank left cover upper part (iron grey)	1	blue	
	4044201-033051	fuel tank left cover upper part (dark gray)		【1】	
	4044201-033021	fuel tank left cover upper part (bright black)		black	

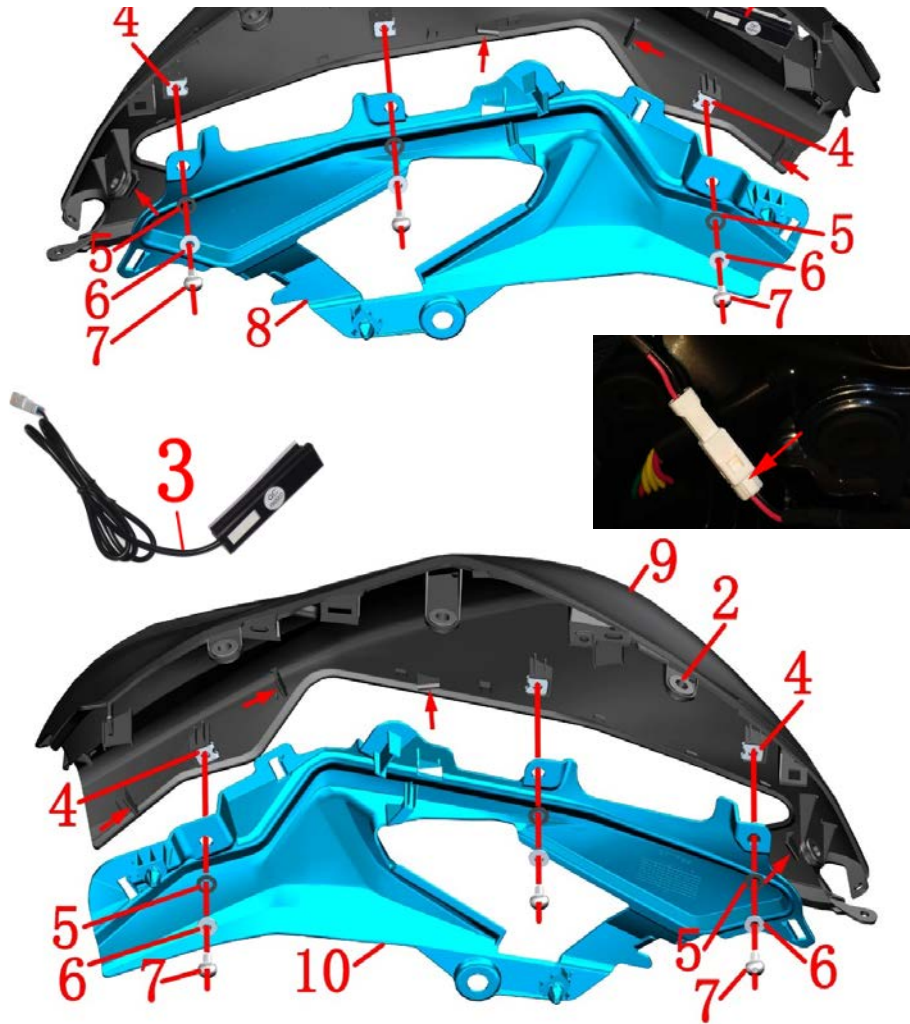

2	1244100-004000	ZT250-S Flanging Bushing Buffer	8	
3	1184200-053000	ZT310PKE external single antenna	1	
4	1251300-063093	Splint M6×11×15 (environmental color)	6	
5	1244100-052000	Flanging bushing cushioning rubber (φ8.5×φ14×1)	6	
6	1274100-057095	Flanging bushing φ6.2×φ8.4×3.5+φ14×1.5	6	
7	1251100-102000	Non-standard bolt M6×16 (304 stainless steel)	6	
8	4044201-016064	fuel tank left cover lower part (bright blue)	1	blue
	4044201-016041	fuel tank left cover lower part (bright green)		green
	4044201-016061	fuel tank left cover lower part (bright purple)		purple
	4044201-016051	fuel tank left cover lower part (dark gray matte)		black
	4044201-016011	fuel tank left cover lower part (bright red)		red
	4044201-512031	fuel tank left cover lower part (bright yellow)		yellow
9	4044201-034052	fuel tank right cover upper part (iron grey)	1	blue
	4044201-034051	fuel tank right cover upper part (dark gray)		【2】
	4044201-034021	fuel tank right cover upper part (bright black)		black
10	4044201-017064	fuel tank right cover lower part (bright blue)	1	blue
	4044201-017041	fuel tank right cover lower part (bright green)		green
	4044201-017061	fuel tank right cover lower part (bright purple)		purple
	4044201-017051	fuel tank right cover lower part (dark gray matte)		black
	4044201-017011	fuel tank right cover lower part (bright red)		red
	4044201-513031	fuel tank right cover lower part (bright yellow)		yellow

PROCEDURE:

● Fuel tank cover assembly

Remove the 3 bolts(7) from the left Fuel tank cover assembly and remove the bushing(6) and cushion rubber(5). Slightly push the snap on the upper part of the left cover(1) to remove the lower part of the left cover(8). Remove the cushion rubber(2) and the splint(4) from the upper part(1) of the left cover.

Locate the PKE external antenna(3) cable connector on the left side of the vehicle and unscrew the nut at the arrow indication. Remove the PKE external antenna from the upper part of the left trim cover. After slightly heating with a heat gun, tear off the double-sided tape and clean the residual glue.

Remove the right cover upper part(9) and the right cover lower part(10) as described above.

CAUTION:

● 【1】 and 【2】 is dark gray bright green/bright purple/bright red/bright yellow for the car.

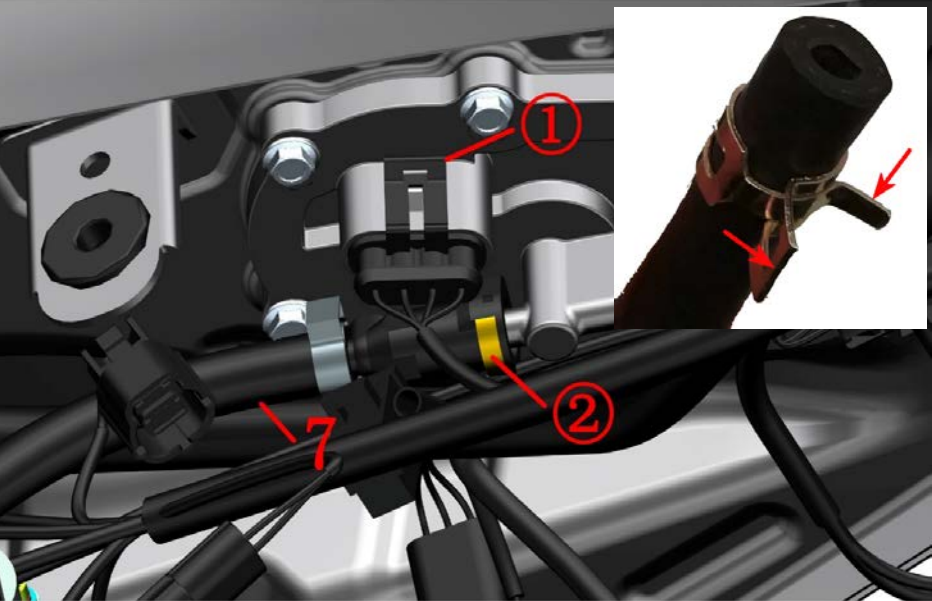
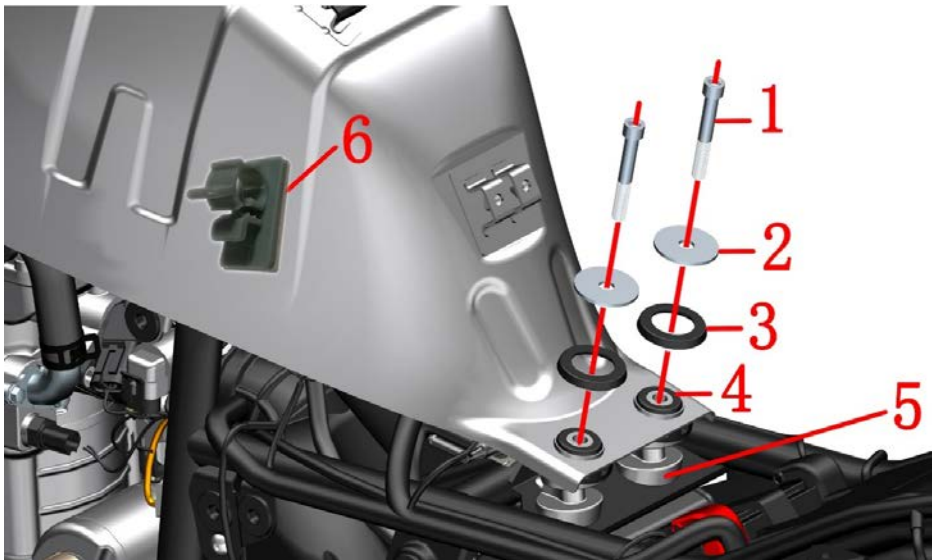


Fig.1 TANK LINER COMPONENT		Tank liner component		CHK	
				ADJ	
NO.	PART NO.	PART NAME		QTY	CAUTION
1	1250205-043093	GB70.1M8×55 (environmental color)		2	
2	1251900-028093	ZT250-R fuel tank flat pad φ9×φ37.5×2		2	
3	1244100-020000	ZT250-S fuel tank pressure		2	
4	1244100-053000	ZT250-S second generation fuel tank gasket		2	
5	1274100-080000	ZT250-R cushion fixing block		1	
6	1224200-066000	ZT310PKE external antenna mount		1	
7	1050954-006000	ZT250-R EFI High Pressure Tubing Sub-assembly		1	Delphi EFI
	1050954-035000	ZT310-R EFI High Pressure Tubing Sub-assembly			Bosch EFI

PROCEDURE:

● Tank liner assembly

Remove the bolt(1) with a hexagonal tool; remove the gasket(2) and press the rubber(3).

Lift the tail of the tank inner assembly and remove the rubber(4) and seat cushion(5).

Pull the main harness limit card① out and pull the plug down.

After removing the antenna fixing block(6) from the inner liner assembly, clean the remaining glue.

Locate the limit retaining ring② on the high-pressure tubing sub-assembly(7) and pull it out while pressing hard. Continue to raise the tank liner assembly, clamp the tube clamp on the snorkel with pliers in the direction of the arrow, and remove the vent tube.

Swing the tank liner assembly slightly left and right while pulling it back obliquely upwards.

CAUTION:

- The seat cushion, side cover, fuel tank cover, etc. must be removed in advance.
- When removing the high-pressure oil pipe, be sure to wait until the engine and muffler are completely cooled before operating to prevent accidental ignition of the fuel and cause fire.
- Fireworks, answering or dialing should be strictly prohibited near the car-breaking site to prevent accidents.
- A small amount of fuel leakage is required when the high-pressure oil pipe sub-assembly is pulled out, and the fuel should be prevented from dripping to the outside of the engine or the muffler.
- It is recommended to use the oil pump to pump out the fuel or consume the fuel before disassembling the tank assembly.

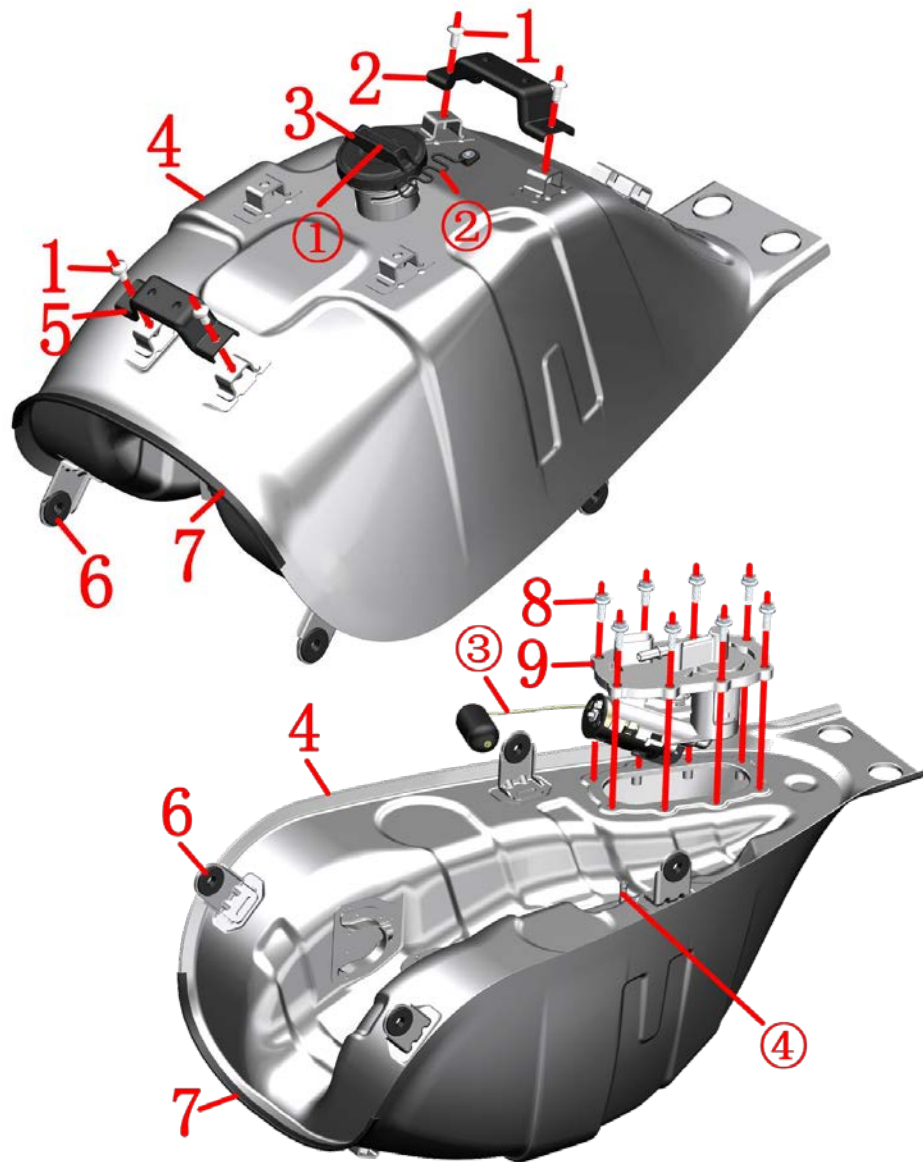


Fig.2 TANK LINER COMPONENT		Tank liner	CHK	CAUTION
			ADJ	
NO.	PART NO.	PART NAME	QTY	
1	1251100-101000	Non-standard bolt M6×12 (304 stainless steel)	4	
2	1274200-014000	ZT310-R fuel tank cover rear mounting bracket	1	
3	1224100-033000	ZT250-S threaded fuel tank cap	1	
4	4034200-001000	ZT310-R fuel tank liner	1	
5	1274200-013000	ZT310-R fuel tank cover front mounting bracket	1	
6	1244100-002000	ZT250-S side cover round glue	4	
7	1240300-021000	HJ125-6 shroud glass strip (1.5m)	0.17	
8	1250105-137093	GB5789M6×16 (environmental color)	8	
9	1050954-018000	T02 built-in fuel pump -300	1	

PROCEDURE:

●Fuel tank cover bracket

Remove the bolts(1) separately, and remove the tank cover to install the bracket(2) and the front bracket(5).

●Fuel tank cap

Pinch① by hand to remove the fuel tank cap(3) counterclockwise. Be careful not to pull the nylon cord② hard.

●Adhesive strip

Pull the strip(7) off the end of the strip by hand.

●Side cover round glue

Remove the side cover round rubber(6) from the tank liner(4).

●Fuel pump

After the Tank liner assembly is placed upside down, remove the bolts(8) with a sleeve.

When the fuel pump(9) is removed, the float connecting rod③ cannot be bent or bent to avoid inaccurate oil display.

CAUTION:


●Before removing the Tank liner assembly, it is recommended to use the oil pump to pump out the fuel or dissipate the fuel before disassembling.

●Fireworks, answering or dialing should be strictly prohibited near the car-breaking site to prevent accidents.

●Reverse the Tank liner assembly When disassembling the fuel pump, be sure to check that the fuel tank cap is tightened to prevent the remaining fuel from overflowing from the fuel tank port; the vent pipe 4 may have a small amount of fuel overflow when the fuel tank cap is turned back.

●When reassembling the fuel pump, be sure to clean the joint surface of the fuel pump sealant and the tank liner. When locking the bolt, the position should be locked to ensure uniform deformation of the seal gasket.

●When assembling the fuel tank cap, be careful to rotate 1 to the position shown in the figure. In other positions, it may interfere with the process clip of the fuel tank cover.

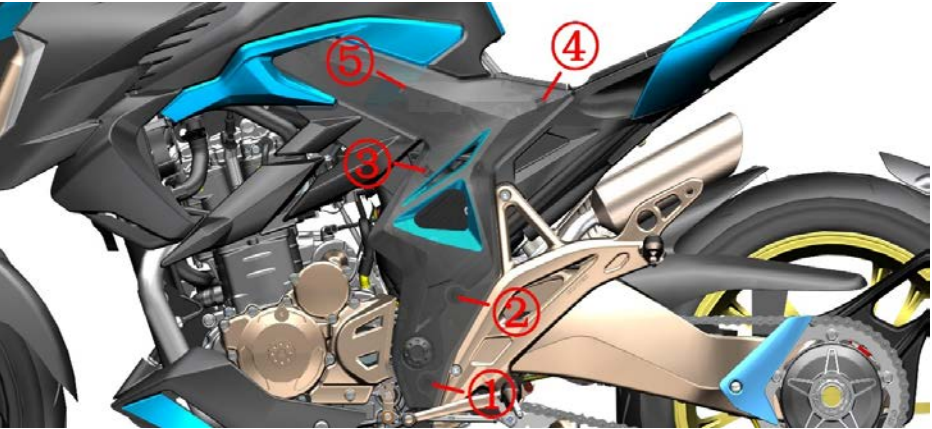

R310
SUPER MOTORCYCLE
R310
SUPER MOTORCYCLE

Stop
selling

Fig.1 SIDE COVER COMPONENT		SIDE COVER COMPONENT(Old applique)	CHK ADJ	
NO.	PART NO.	PART NAME	QTY	
1	1224100-010000	ZT250-S Expansion nail	2	
2	4044201-027052	ZT310-R Right side cover (iron grey)	1	blue
	4044201-088051	ZT310-R Right side cover (dark grey bright blue)		bright blue
	4044201-084051	ZT310-R Right side cover (dark grey bright green)		green
	4044201-080051	ZT310-R Right side cover (dark grey bright purple)		purple
	4044201-092051	ZT310-R Right side cover (dark grey matte)		black
	4044201-084011	ZT310-R Right side cover (dark grey bright red)		bright red
3	4044201-026052	ZT310-R Left side cover (iron grey)	1	blue
	4044201-087051	ZT310-R Left side cover (dark grey bright blue)		bright blue
	4044201-083051	ZT310-R Left side cover (dark grey bright green)		green
	4044201-079051	ZT310-R Left side cover (dark grey bright purple)		purple
	4044201-091051	ZT310-R Left side cover (dark grey matte)		black
	4044201-083011	ZT310-R Left side cover (dark grey bright red)		bright red

PROCEDURE:

●Side cover assembly

Use a small Phillips screwdriver to press down on the center of the expansion screw and remove the expansion screw(1).

Pull out the gap by hand and pull it out. Pull out the ①-②-③ staples first.


Hold the front end of the side cover with one hand and grasp the front part of the skirt with one hand, and then pull the staples at the side cover ④ out.

Press the ⑤ points in one hand, grasp the rear part of the side cover with one hand, and then pull backwards with force to remove the side cover from the fuel tank trim cover.

CAUTION:

●When inserting, firstly insert the latch of the head of the side cover→the buckle that buckles at⑤ →install the staples by④-①; finally install the expansion screw.

●The side cover already contains applique.Old applique side cover will stop selling ,and it's recommended to buy a new stripes applique or a new side cover(the part no. ples see next page) when replacing the side cover.

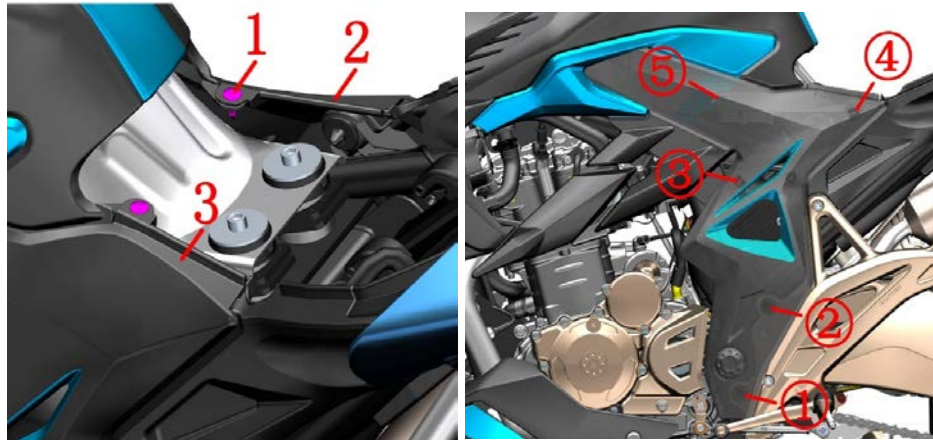

1210342-473000 ZT310-R right side cover applique (black/stripes/R310)



1210342-474000 ZT310-R left side cover applique (black/stripes/R310)

PROCEDURE:

●Side cover assembly

Use a small Phillips screwdriver to press down on the center of the expansion screw and remove the expansion screw(1).

Pull out the gap by hand and pull it out. Pull out the ①-②-③ staples first.

Hold the front end of the side cover with one hand and grasp the front part of the skirt with one hand, and then pull the staples at the side cover ④ out.

Press the ⑤ points in one hand, grasp the rear part of the side cover with one hand, and then pull backwards with force to remove the side cover from the fuel tank trim cover.

CAUTION:

●When inserting, firstly insert the latch of the head of the side cover→the buckle that buckles at⑤ → install the staples by④-①; finally install the expansion screw.

●The side cover already contains applique.Old applique(see previous page) will stop selling ,and it's recommended to buy a new stripes applique or a new side cover when replacing the side cover.

Fig.2 SIDE COVER COMPONENT		SIDE COVER COMPONENT(Stripes applique)	CHK ADJ	CAUTION
NO.	PART NO.	PART NAME	QTY	
1	1224100-010000	ZT250-S Expansion nail	2	
2	4044201-460052	Right side cover (iron grey/stripes applique /R310)	1	blue
	4044201-457051	Right side cover (dark grey bright blue/stripes applique /R310)		bright blue
	4044201-456051	Right side cover (dark grey bright green/stripes applique /R310)		green
	4044201-454051	Right side cover (dark grey bright purple/stripes applique /R310)		purple
	4044201-458051	Right side cover (dark grey matte/stripes applique /R310)		black
	4044201-455051	Right side cover (dark grey bright red/stripes applique /R310)		bright red
	4044201-517051	Right side cover (dark grey bright yellow/stripes applique /R310)		yellow
3	4044201-459052	Left side cover (iron grey/stripes applique /R310)	1	blue
	4044201-452051	Left side cover (dark grey bright blue/stripes applique /R310)		bright blue
	4044201-451051	Left side cover (dark grey bright green/stripes applique /R310)		green
	4044201-449051	Left side cover (dark grey bright purple/stripes applique /R310)		purple
	4044201-453051	Left side cover (dark grey matte/stripes applique /R310)		black
	4044201-450051	Left side cover (dark grey bright red/stripes applique /R310)		bright red
	4044201-516051	Left side cover (dark grey bright yellow/stripes applique /R310)		yellow

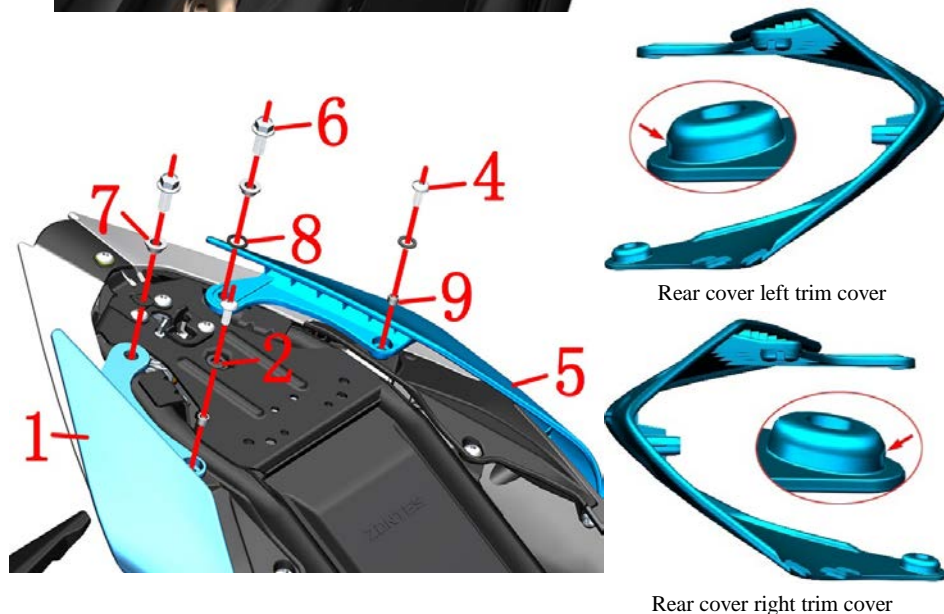
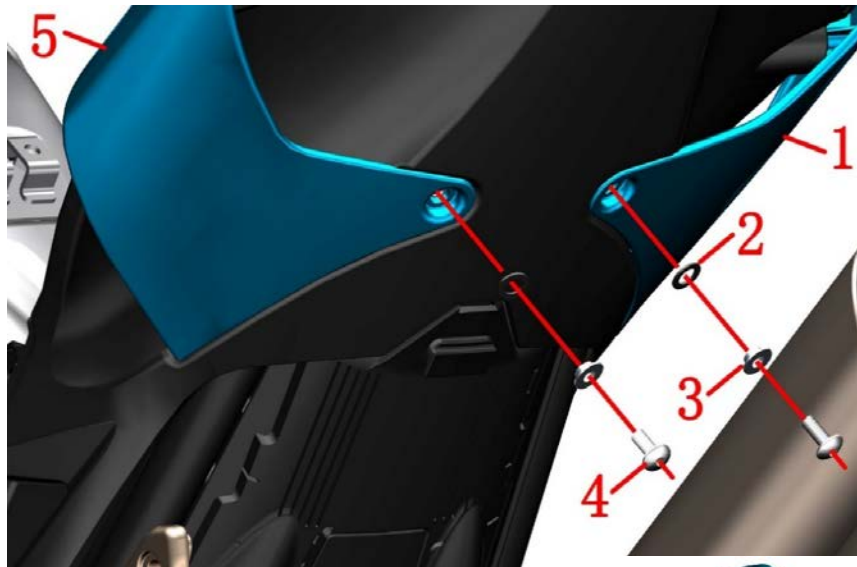


Fig.1 REAR COVER COMPONENT		Rear cover trim cover component(lithium battery)	CHK	CAUTION
			ADJ	
NO.	PART NO.	PART NAME	QTY	
1		ZT310-R Rear cover right trim cover (bright blue)	1	blue
		ZT310-R Rear cover right trim cover (bright green)		green
		ZT310-R Rear cover right trim cover (bright purple)		purple
		ZT310-R Rear cover right trim cover (bright black)		black
		ZT310-R Rear cover right trim cover (bright red)		bright red
2	1244100-052000	Flange bushing buffer (φ8.5×φ14×1)	2	
3	1274100-057095	Flanged bush φ6.2×φ8.4×3.5+φ14×1.5	2	
4	1251100-102000	Non-standard bolt M6×16 (stainless steel)	4	
5		ZT310-R Rear cover left trim cover (bright blue)	1	blue
		ZT310-R Rear cover left trim cover (bright green)		green
		ZT310-R Rear cover left trim cover (bright purple)		purple
		ZT310-R Rear cover left trim cover (bright black)		black
		ZT310-R Rear cover left trim cover (bright red)		bright red
6	1250105-142093	GB5789M8×20 (environmental color)	2	
7	1251700-058093	Flange bushing φ8.2×φ11×4.5+φ16×1.5	2	
8	1240300-071000	Flange bushing buffer (φ11×φ16×1)	2	
9	1274100-018000	ZT250-S Muffler anti-hot plate bushing	2	

PROCEDURE:

●Rear cover left trim cover

Remove the bolt(4) on the bottom left side and remove the bushing(3) and cushion rubber(2).

Remove the upper left bolt(4) and remove the cushion(2) and bushing(9).

Hold the left rear trim cover(1) with one hand, remove the upper left bolt(6) with one sleeve, and remove the bushing(7) and cushion rubber(8).

Remove the rear cover left trim cover(1).

●Rear cover right trim cover

Remove the rear cover right trim cover(5) as described above.

CAUTION:

●Remove side covers and seat cushions in advance.

●The material should be protected during discomponent to prevent damage to the paint.

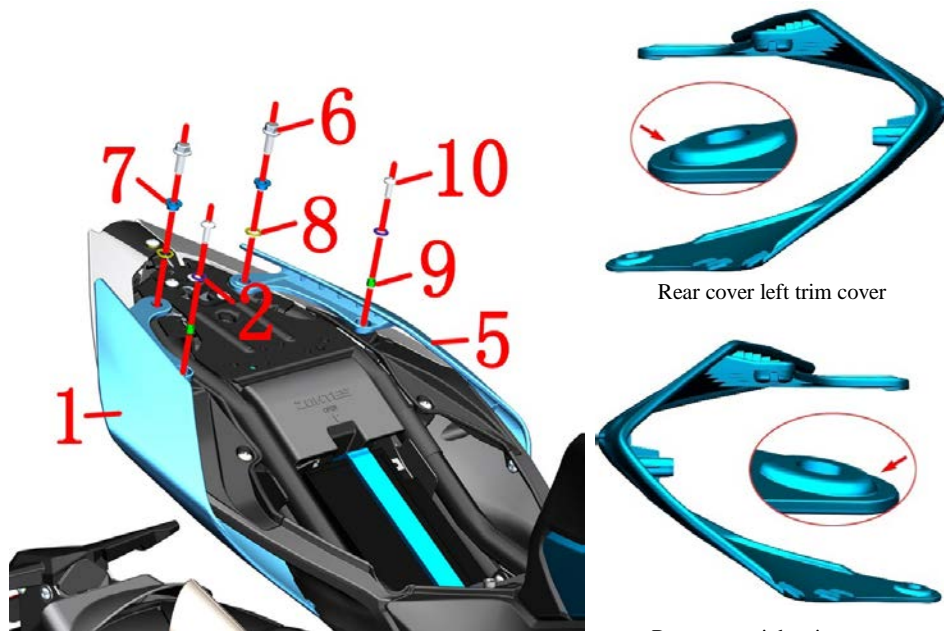
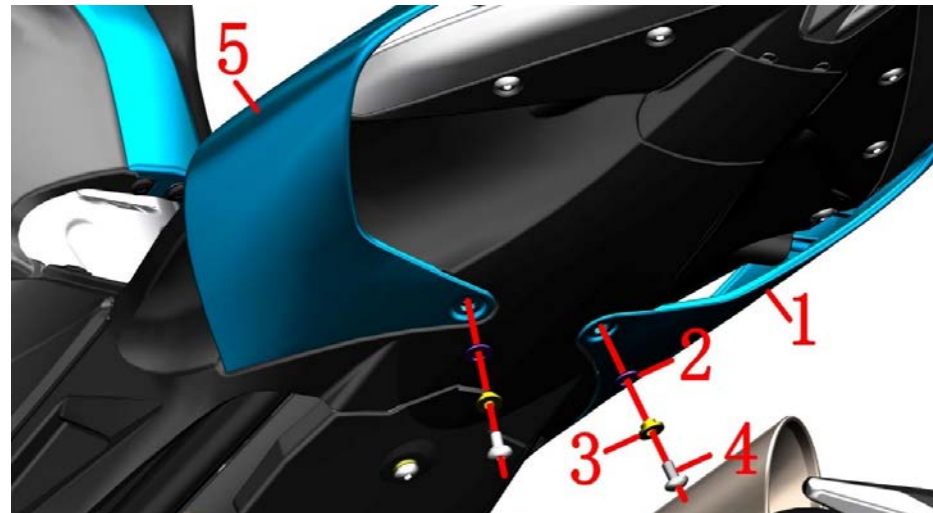



Fig.2 REAR COVER COMPONENT		Rear cover trim cover component (collid battery)	CHK	
			ADJ	
NO.	PART NO.	PART NAME	QTY	CAUTION
1	4044201-416064	Rear cover right trim cover (bright blue/collid battery)	1	blue
	4044201-414041	Rear cover right trim cover (bright green/collid battery)		green
	4044201-415061	Rear cover right trim cover (bright purple/collid battery)		purple
	4044201-413021	Rear cover right trim cover (bright black/collid battery)		black
	4044201-412011	Rear cover right trim cover (bright red/collid battery)		bright red
	4044201-522031	Rear cover right trim cover (bright yellow/collid battery)		yellow
2	1244100-052000	Flange bushing buffer (φ8.5×φ14×1)	4	
3	1274100-057095	Flanged bush φ6.2×φ8.4×3.5+φ14×1.5	2	
4	1251100-101000	Non-standard bolt M6×12 (304 stainless steel)	2	
5	4044201-421064	Rear cover left trim cover (bright blue/collid battery)	1	blue
	4044201-419041	Rear cover left trim cover (bright green/collid battery)		green
	4044201-420061	Rear cover left trim cover (bright purple/collid battery)		purple
	4044201-418021	Rear cover left trim cover (bright black/collid battery)		black
	4044201-417011	Rear cover left trim cover (bright red/collid battery)		bright red
	4044201-521031	Rear cover left trim cover (bright yellow/collid battery)		yellow
6	1250105-142093	GB5789M8×20 (environmental color)	2	
7	1251700-058093	Flange bushing φ8.2×φ11×4.5+φ16×1.5	2	
8	1240300-071000	Flange bushing buffer (φ11×φ16×1)	2	
9	1274100-018000	ZT250-S Muffler anti-hot plate bushing	2	
10	1251100-102000	Non-standard bolt M6×16 (stainless steel)	2	

PROCEDURE:

●Rear cover left trim cover

Remove the bolt(4) on the bottom left side and remove the bushing(3) and cushion rubber(2).

Remove the upper left bolt(10) and remove the cushion(2) and bushing(9).

Hold the left rear trim cover(1) with one hand, remove the upper left bolt(6) with one sleeve, and remove the bushing(7) and cushion rubber(8).

Remove the rear cover left trim cover(1).

●Rear cover right trim cover

Remove the rear cover right trim cover(5) as described above.

CAUTION:

●Remove side covers and seat cushions in advance.

●The material should be protected during discomponent to prevent damage to the paint.

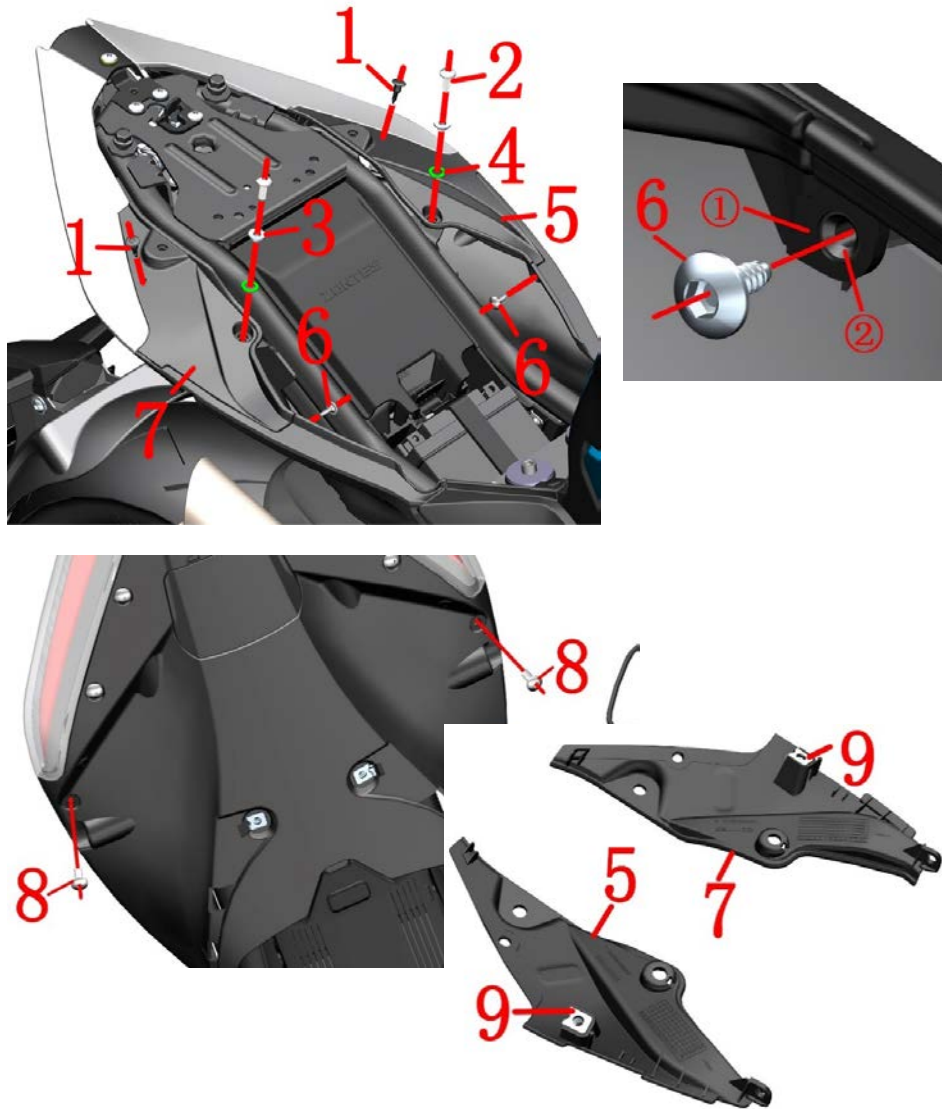



Fig.3 REAR COVER COMPONENT		Rear cover interior trim cover component (lithium battery)	CHK	
			ADJ	
NO.	PART NO.	PART NAME	QTY	CAUTION
1	1224100-010000	ZT250-S Expansion nail	2	
2	1251100-102000	Non-standard bolt M6×16 (stainless steel)	2	
3	1274100-057095	Flanged bush φ6.2×φ8.4×3.5+φ14×1.5	2	
4	1244100-052000	Flange bushing buffer (φ8.5×φ14×1)	2	
5	1224200-095000	ZT310-R Rear cover interior left trim cover	1	
6	1251200-033093	Non-standard self-tapping screws ST4.2×12	2	
7	1224200-096000	ZT310-R Rear cover internal right trim cover	1	
8	1251100-101000	Non-standard bolt M6×12 (304 stainless steel)	2	
9	1251300-063093	plywood M6×11×15 (environmental color)	2	

PROCEDURE:

●Rear cover left interior trim cover

Use a small Phillips screwdriver to press down the center of the expansion screw(1) and remove it.

Remove the bolt(2) and remove the bushing(3) and cushion rubber(4).

Remove the bolt(8) from the bottom left of the cover.

Remove the self-tapping screws(6). Remove the cover left interior trim cover component.

Turn to the back and remove the plywood(9) from the end cover left interior trim cover(5).

●Front cover right interior trim cover

Remove the rear cover right interior trim cover(7) as described above.

CAUTION:

●Remove the side cover, seat cushion, and cover decoration cover in advance.

●The material should be protected during discomponent to prevent damage to the paint.

●When assembling self-tapping screws(6), it must be perpendicular to mounting surface①, otherwise it will be damaged②.

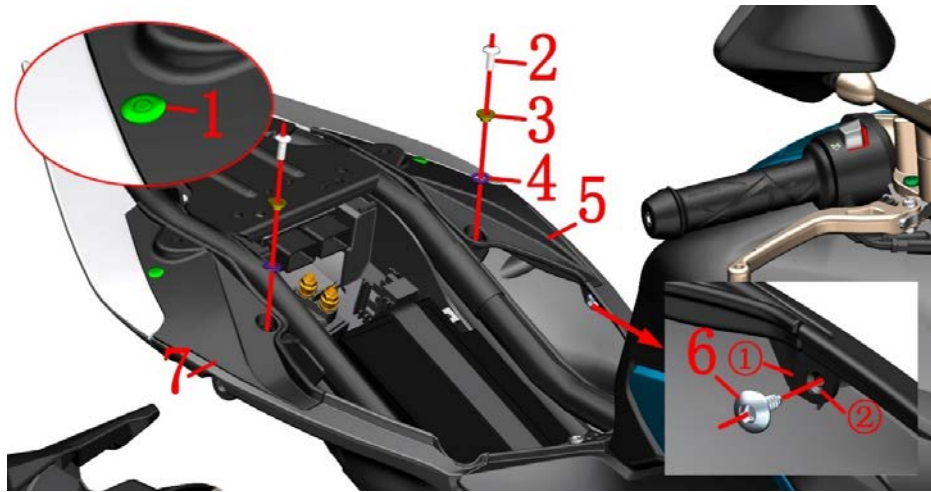


Fig.4 REAR COVER COMPONENT		Rear cover interior trim cover component (colliod battery)		CHK	CAUTION
		PART NAME		ADJ	
NO.	PART NO.	PART NAME		QTY	
1	1224100-010000	ZT250-S Expansion nail		2	
2	1251100-102000	Non-standard bolt M6×16 (stainless steel)		2	
3	1274100-057095	Flanged bush φ6.2×φ8.4×3.5+φ14×1.5		2	
4	1244100-052000	Flange bushing buffer (φ8.5×φ14×1)		2	
5	1224200-095000	ZT310-R Rear cover interior left trim cover		1	
6	1251200-033093	Non-standard self-tapping screws ST4.2×12		2	
7	1224200-096000	ZT310-R Rear cover internal right trim cover		1	
8	1251100-101000	Non-standard bolt M6×12 (304 stainless steel)		2	
9	1251300-063093	plywood M6×11×15 (environmental color)		2	

PROCEDURE:

●Rear cover left interior trim cover

Use a small Phillips screwdriver to press down the center of the expansion screw(1) and remove it.

Remove the bolt(2) and remove the bushing(3) and cushion rubber(4).

Remove the bolt(8) from the bottom left of the cover.

Remove the self-tapping screws(6). Remove the cover left interior trim cover component.

Turn to the back and remove the plywood(9) from the end cover left interior trim cover(5).

●Front cover right interior trim cover

Remove the rear cover right interior trim cover(7) as described above.

CAUTION:

●Remove the side cover, seat cushion, and cover decoration cover in advance.

●The material should be protected during discomponent to prevent damage to the paint.

●When assembling self-tapping screws(6), it must be perpendicular to mounting surface①, otherwise it will be damaged②.

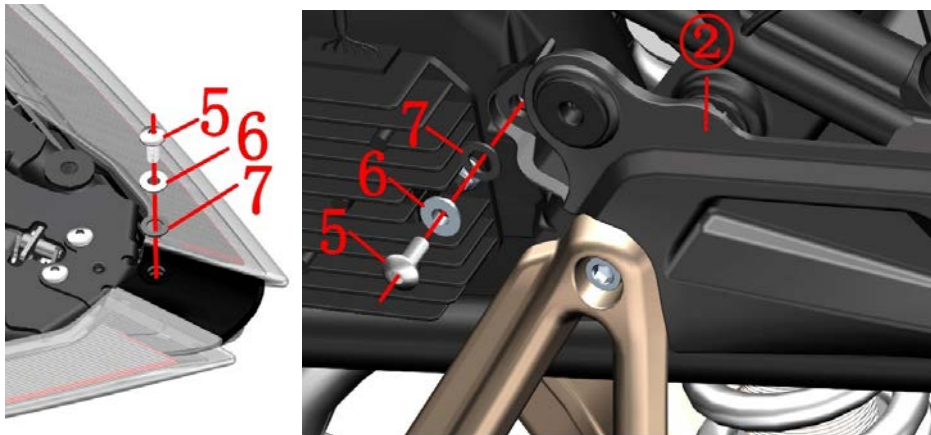
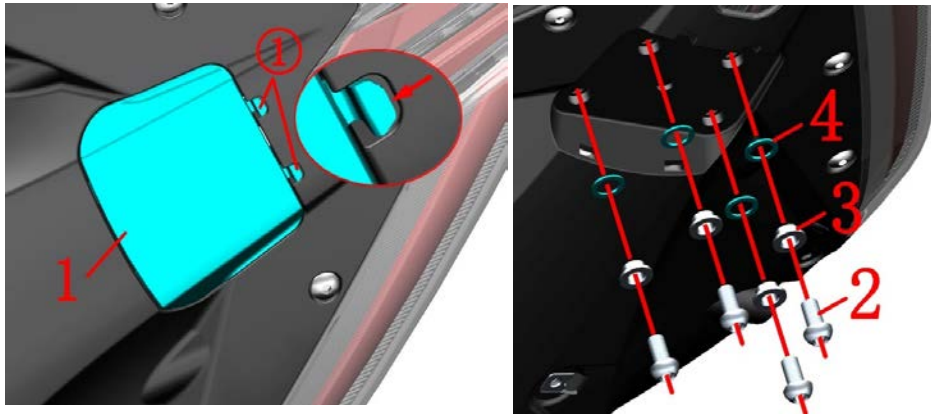


Fig.5 REAR COVER COMPONENT		Rear cover tail light component 1	CHK	
			ADJ	
NO.	PART NO.	PART NAME	QTY	CAUTION
1	4044201-029052	ZT310-R Rear cover mudguard Installation Cover (Iron Grey)	1	blue
	4044201-029021	ZT310-R Rear cover mudguard mounting cover (bright black)		black
	4044201-029051	ZT310-R Rear cover fender cover (dark bright grey)		【1】
2	1251100-122093	Non-standard bolt M8×16 (environmental color)	4	
3	1251700-058093	Flange bushing φ8.2×φ11×4.5+φ16×1.5	4	
4	1240300-071000	Flange bushing buffer (φ11×φ16×1)	4	
5	1251100-102000	Non-standard bolt M6×16 (304 stainless steel)	3	
6	1274100-057095	Flanged bush φ6.2×φ8.4×3.5+φ14×1.5	3	
7	1244100-052000	Flange bushing buffer (φ8.5×φ14×1)	3	

PROCEDURE:

●Rear cover mudguard mounting cover

Find and remove the plug connector for the rear lamps.

Push the buckle① on the mounting cover(1) forward and remove it. Pay attention to efforts.

Remove the 4 bolts(2) and remove the bushing(3) and pad(4).

Remove the bolts(5) on the upper part of the rear cover lamp component and remove the bushing(6) and pad(7).

Remove the bolt(5) at the front left end of the cover and remove the bushing(6) and the pad(7).

Remove the bolt (5) at the front right end of the cover and remove the bushing(6) and pad(7).

Remove the② and ③ clips respectively and remove the rear cover component.

CAUTION:

●Remove the side cover, seat cushion, and cover decoration cover in advance.

●The material should be protected during discomponent to prevent damage to the paint.

●Use a parallel force to remove the staples to prevent damage to the staples. At the same time should pay attention to efforts.

●【1】 is dark gray bright blue/bright green/bright purple/bright red for the car.

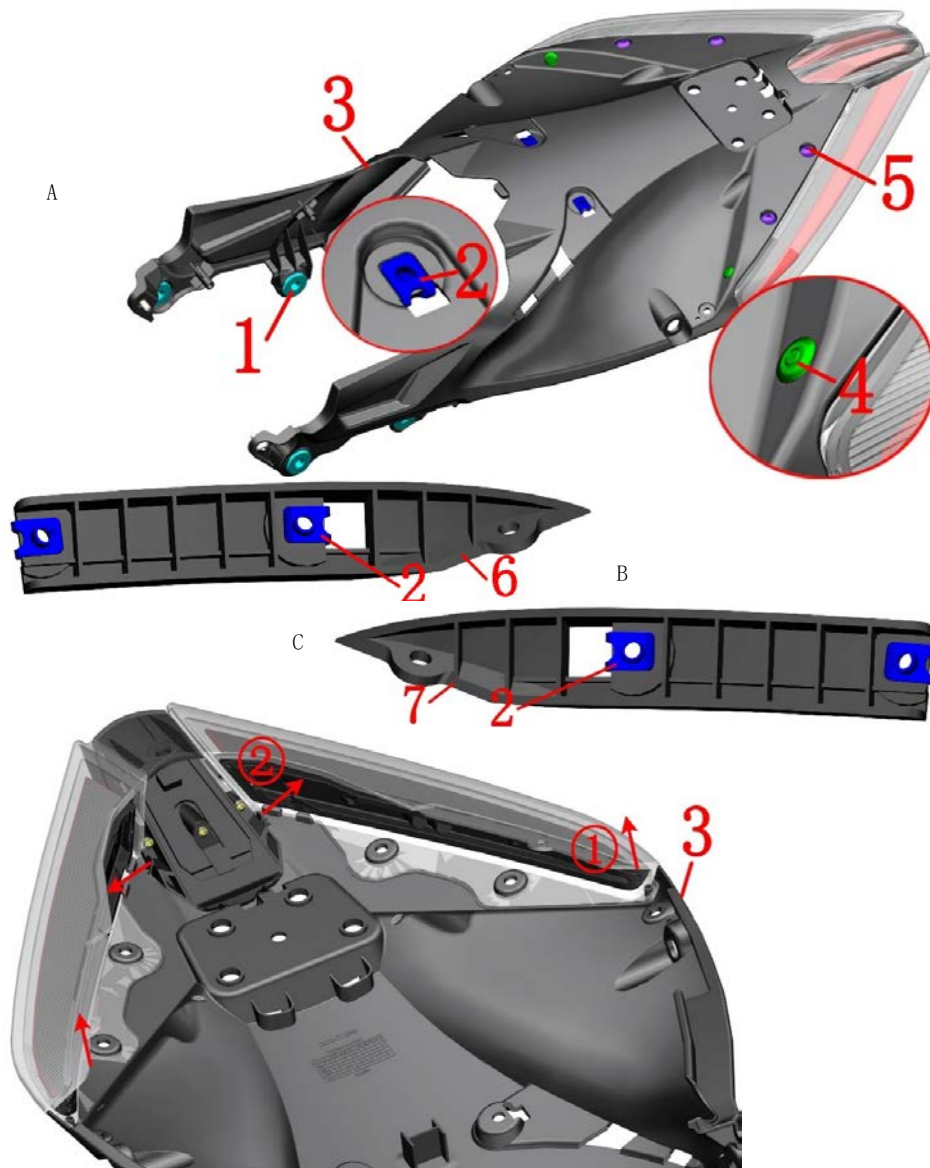


Fig.6 REAR COVER COMPONENT		Rear cover taillight component 2	CHK	
			ADJ	
NO.	PART NO.	PART NAME	QTY	CAUTION
1	1244100-002000	ZT250-S Side cover round rubber	4	
2	1251300-063093	plywood M6×11×15 (environmental color)	6	
3		ZT310-R Rear cover (iron grey)	1	blue
		ZT310-R Rear cover (dark bright grey)		【1】
		ZT310-R Rear cover (dark bright black)		black
	4044201-411052	ZT310-R Rear cover (iron grey/colliod battery)		blue
	4044201-410051	ZT310-R Rear cover (dark bright grey/colliod battery)		【1】
	4044201-409021	ZT310-R Rear cover (dark bright black/colliod battery)		black
4	1224100-010000	ZT250-S Expansion nail	2	
5	1251100-102000	Non-standard bolt M6×16 (304 stainless steel)	4	
6	1224200-054000	ZT310-R Taillight left mounting plate	1	
7	1224200-056000	ZT310-R Taillight right mounting plate	1	

PROCEDURE:

●Rear cover taillight component

Remove 4 pieces of side cover round glue(1) and 2 pieces of plywood nuts(2) and 2 pieces of expansion nails(4) from the rear cover(3), as shown in Picture A.

Remove the bolts(5) and remove the left and right mounting plate component.

●Mounting plate component

Remove the plywood nut(2) from the taillight left mounting plate(6) as shown in Picture B.

Remove the plywood nut(2) from the taillight right mounting plate(7) as shown in Picture C.

●Taillight component

With both hands, grasp the left front and rear cover connections of the taillights and pull up in the direction of arrow① to pull the taillight component out of the pin on the cover. Snap the② in the direction of the arrow and pull them up while pulling them outwards. In the same procedure, pull up the right taillight component.

CAUTION:

●The material should be protected during discomponent to prevent damage to the paint or scratching the lamp.

●The front of the cover is a litter long and care must be taken to prevent it from being broken unevenly.

●【1】 for dark gray bright blue/bright green/bright purple/bright red for the car.



Colliod battery version



Lithium battery version

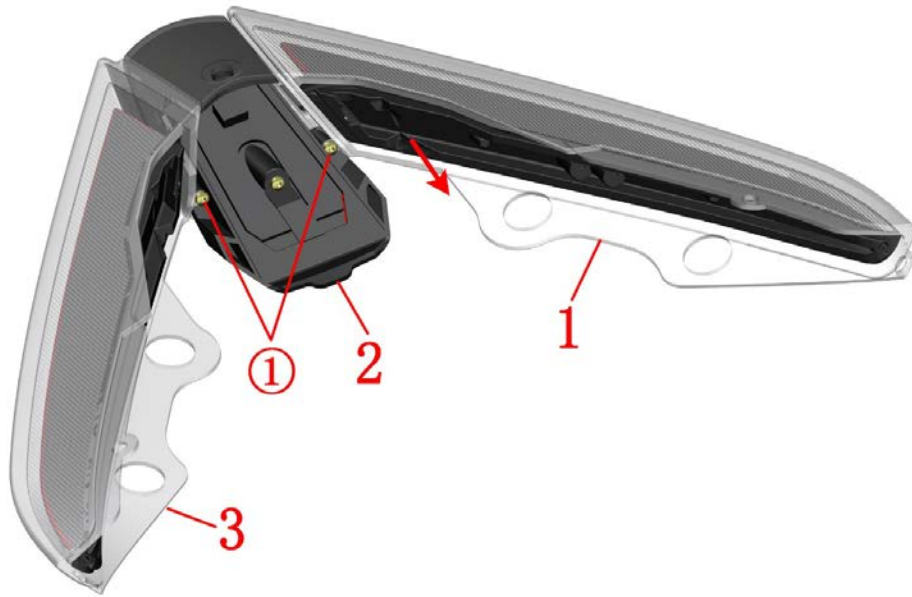


Fig.7 REAR COVER COMPONENT		Taillight component	CHK	
			ADJ	
NO.	PART NO.	PART NAME	QTY	CAUTION
1	1174200-012000	ZT310-R left rear position lamp	1	
2	1174200-014000	ZT310-R stop lamp	1	
3	1174200-013000	ZT310-R right rear position lamp	1	

PROCEDURE:

● Taillamp component

Remove the left bolt① and hold the stop lamp(2). Pull the left rear position lamp(1) out in the direction of the arrow. Remove the left rear position lamp(1).

Remove the right rear position bright(3) as described above.

CAUTION:

- The material should be protected during discomponent to prevent scratching the lamp.
- Never pull the cable directly.



Fig.8 REAR COVER COMPONENT		Electric component box cover component (TFT Instrument/lithium battery)		CHK	
				ADJ	
NO.	PART NO.	PART NAME		QTY	CAUTION
1	1224200-039000	ZT310 Electrical device box cover		1	
2	1184200-024000	ZT310-R Side bracket relay		1	G8HN-1C4T-RJ
3	1184100-017000	ZT250-S Electric spray relay		3	KH-1A4T
4	1050954-019000	MT05.2 Engine Controller - Model ZT310-RC4		1	ECU
5		Start relay		1	
6	1184200-016000	ZT310 PKE buzzer		1	

PROCEDURE:

- Electrical device box cover
Pull the metal buckle of the electrical device box cover (1) in the direction of the arrow, pull it down, remove it.
- Relay
Pull up the cable and unplug the side bracket relay (2) and the EFI relay (3).
Open the positive and negative protective caps of the starter relay (5) (red is positive, black is negative), unscrew the nut to remove the positive and negative connectors, and then screw the nut back to the relay stud to prevent loss. Locate the starter relay and the main cable connector.
- Engine controller (ECU)
Grasp the connector 1 of the ECU (4) and pull it out in the direction of the arrow to separate the ECU (4) from the main cable.
- Fuse box
There is a corresponding description on the fuse box cover.
- PKE buzzer
Remove the PKE buzzer(6). Clean up the remaining offset.

CAUTION:

- Never pull the cable directly.

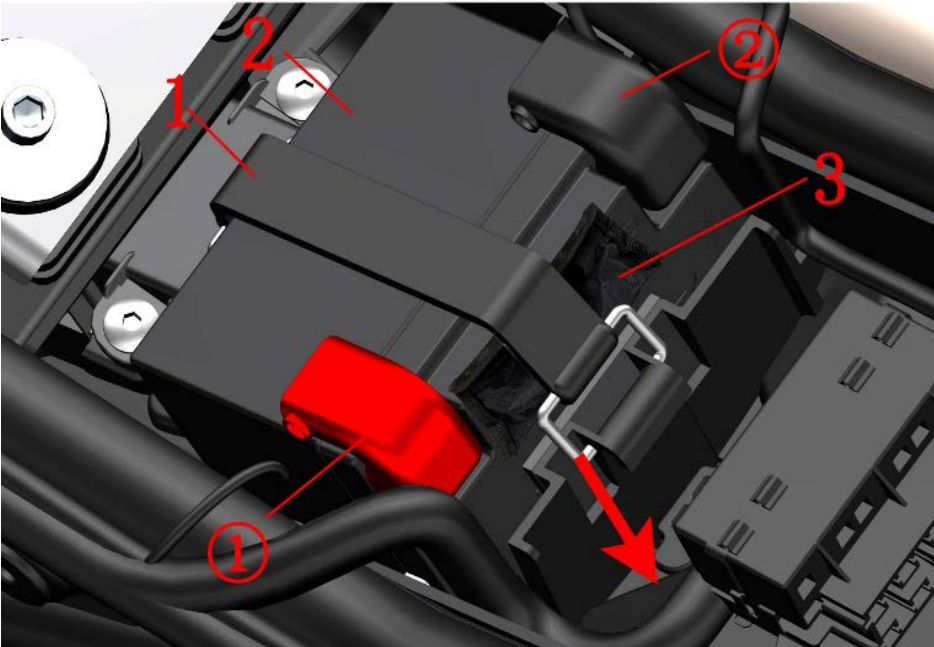


Fig.9 REAR COVER COMPONENT		Battery pack(lithium battery)		CHK	
				ADJ	
NO.	PART NO.	PART NAME		QTY	CAUTION
1	1244100-072000	ZT250-R Battery straps		1	
2	1184100-116000	ZT250 Lithium battery		1	
3	1274200-234000	ZT310-R1 Finished motorcycle tool		1	

PROCEDURE:

- Battery straps, finished motorcycle tools
Pull the metal snap ring ③ of the battery strap (1) in the direction of the arrow, press it down, remove it, and remove the on-board tool (3).
- Battery
Unscrew the black protective cap ② to remove the negative pole; then remove the red protective cap ① and remove the positive pole; remove the battery. For reinstallation, connect the positive electrode first, then connect the negative electrode. No parallel battery charging or ignition.
A qualified lithium battery charger should be used for manual charging. Pay attention to fire prevention and ventilation during charging. Pay attention not to overcharge the charging time.

CAUTION:

- Pull the plugs ①、② out of the cable.
- Be careful not to overcharge the charging time. About the use and maintenance of the battery see the instructions.
- Attention should be paid to the discomponent process to avoid damaging the material. Attention must be paid to the installation sequence when removing the battery.
- The battery voltage should be checked regularly. If it is lower than 12.5V, it is recommended to charge it in time; it must not be overcharged; it should be taken out of storage for a long time without being used, and it should be charged once a month.
- Reassemble the battery or fuse, etc. Remember to remember to reset the EFI hardware: Turn on the key-Ignition- 10 seconds After the ignition is turned off - After 10 seconds Turn on the ignition switch and repeat 2 times.
- If the battery has reached the end of its useful life, it should be handed over to a qualified organization or a dedicated recycling center for proper disposal. Discard it at will.
- July 17,2019,"1274200-078000 ZT310-R Finished motorcycle tool"replaced by"1274200-234000 ZT310-R1 Finished motorcycle tool".

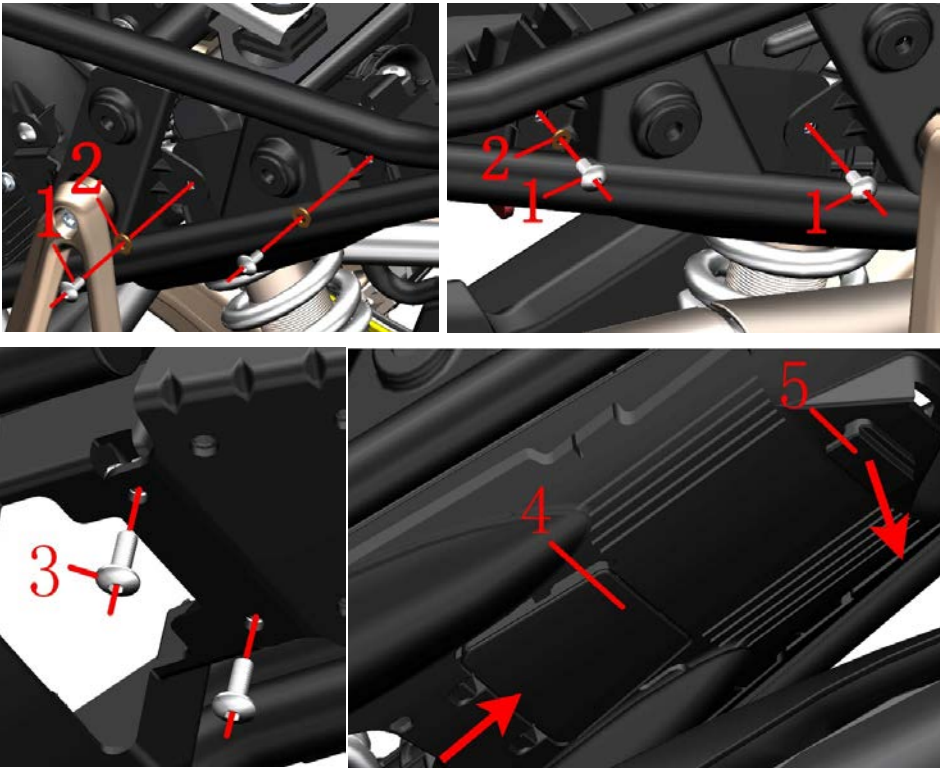


Fig.10 REAR COVER COMPONENT		Electrical device box component 1(lithium battery)		CHK	
				ADJ	
NO.	PART NO.	PART NAME		QTY	CAUTION
1	1251100-101000	Non-standard bolt M6×12 (304 stainless steel)		4	
2	1251513-001019	6.3 x 12 x 1.6 copper gasket		3	
3	1251100-102000	Non-standard bolt M6×16 (304 stainless steel)		2	
4	1224200-040000	ZT310 Electrical device box cover		1	
5	1244200-047000	ZT310-X Electric device box back glue		1	

PROCEDURE:

●Electrical device box component

Remove the bolts on the left side of the front of the electrical component box(1) Remove the two washers(2).

Remove the bolts(1) on the right side of the front of the electrical component box remove the washers(2).


Remove the bolts(3) on the bottom of the rear frame of the frame.

Push the card in the direction of the arrow to snap the lower cover(4).

Pull down the electrical device box backing(5) in the direction of the arrow.

Find and unplug the connectors(3) of the PKE antenna(single).

Hold the electric device box component in one hand and grasp the front part downwards with one hand. Unplug the PKE cable connectors(1) and (2) and remove the electrical device box component.

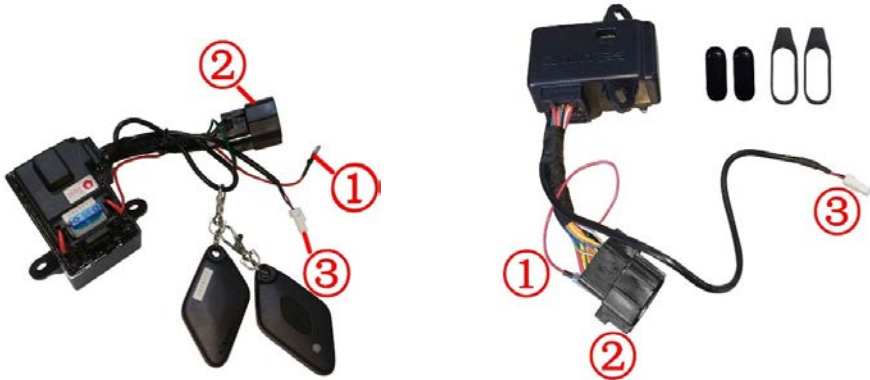


CAUTION:

●Do not pull the cable directly when unplugging it.

●If you need to replace the PKE fuse, you can directly replace the lower cover of the electrical device box to replace it.

●When refitting connector (2), check whether the metal contacts inside are bent. If necessary, straighten them first.



Fig.11 REAR COVER COMPONENT		Electrical device box component 2(lithium battery)	CHK	
			ADJ	
NO.	PART NO.	PART NAME	QTY	CAUTION
1	1251100-101000	Non-standard bolt M6×12 (304 stainless steel)	2	
2	1184200-054000	ZT310 PKE Controller （single antenna ）	1	stop selling
	1184200-137000	ZT310 PKE Controller （bracelet edition）		
3	1251300-063093	Plywood M6×11×15 (environmental color)	8	
4	1184100-080000	ZT250-S Fuse (15A)	1	For after-sale
5	1224200-038000	ZT310 Electrical Device Box	1	
6	1240300-007000	HJ125-6 Battery Pad	1	
7	1184200-043000	PKE key shell （containing key glue+key ring ）	1	For after-sale
8	1184200-128000	ZT310 Universal Fuse （15A small）	2	bracelet edition
9	1244200-100000	ZT310 Induction key glue ring	1	after-sale

PROCEDURE:

●PKE controller

Remove the bolt(1) and remove the PKE controller(2).

●Electrical device box component

Remove 8 pieces of plywood nuts(3) from the electrical component box(5).

Remove the battery pad(6) and clean the remaining adhesive.

●Fuses

Unplug the fuse(4) or (8) and check if it is blown. If it has blown, replace the fuse of the same specification.

The dual antenna and the single antenna PKE controller used medium 15A fuses.

The bracelet edition PKE controller used 2pcs small fuses.

CAUTION:



●When inserting or removing the fuse, pay attention to the vertical alignment and then disassemble it. Do not bend it. Use a qualified fuse.

●PKE cables need to be protected. Non-professionals are strictly prohibited from dismantling the PKE system components, as this may cause permanent damage.

●Please refer to the driving manual for details on the use of PKE.


●PKE key shell (containing key glue+key ring) just for after-sale to change the shell,no internal electrical appliances.

●The single antenna PKE controller has been stop selling, it can be replaced by bracelet edition.

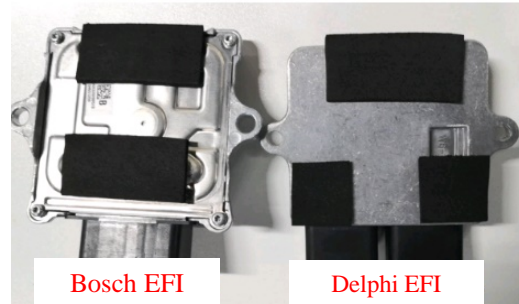
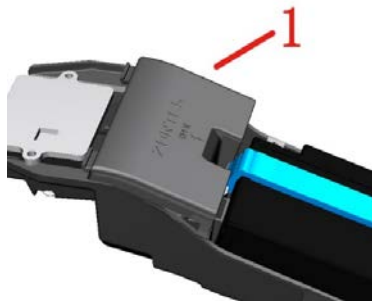


Bosch EFI

Delphi EFI

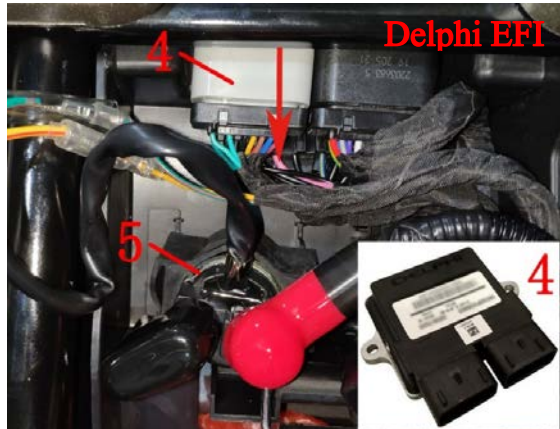

Delphi EFI

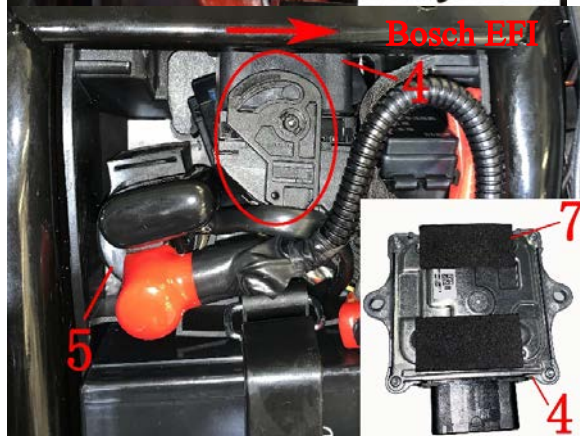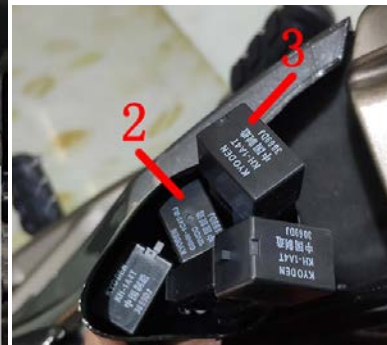

Bosch EFI



Fig. 13 REAR COVER COMPONENT		Electrical component (colloid battery)	CHK	
			ADJ	
NO.	PART NO.	PART NAME	QTY	CAUTION
1	1224200-176000	Colloid battery electric device box upper cover	1	
2	1184200-024000	ZT310—R Side bracket relay	1	G8HN-1C4T-RJ
3	1184100-017000	ZT250—S EFI relay	3	KH-1A4T
4	1050954-019000	MT05.2 Engine Controller - Model ZT310-RC4	1	Delphi EFI
	1050954-037000	MSE6.0 controller-ZT180MN		Bosch EFI
5		Start relay	1	
6	1184200-016000	ZT310 PKE buzzer	1	
7	1240300-007000	HJ125—6 Battery rubber gasket	3	

PROCEDURE:

●Relay

Remove the colloid battery electric device box upper cover (1).

Pull up the cable and unplug the side stand relay (2) and the EFI relay (3).

Turn off the positive and negative.

protective rubber caps (red for the positive and black for the negative) of the starter relay (5). Remove the positive and negative connectors by unscrewing the nut, and screw the nut back onto the relay stud to prevent loss.

Find the starting relay and main cable connector unplugged.

●Engine Control Unit (ECU)

Delphi EFI: Hold the ECU (4) connector in the direction of the arrow and separate the ECU (4) from the main cable.

Bosch EFI: Urn the switch on ECU(4) in the direction of the arrow and pull it out to separate ECU(4) from the main cable.

●Fuse box

Fuse box cover with corresponding instructions.

●PKE buzzer

Remove the PKE buzzer (6). Clean up the remaining offset.

CAUTION:

● Starting from July 10, 2020, all ECUs need to add battery pads, as shown in the upper left picture.



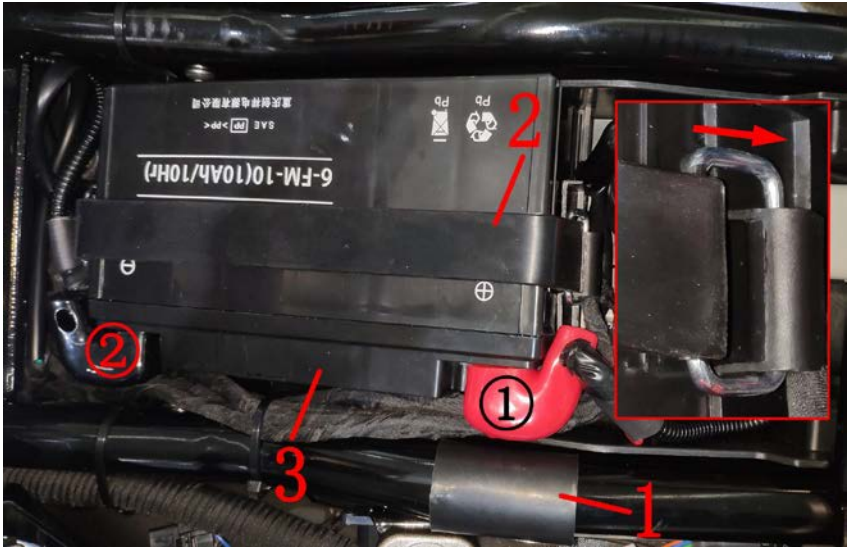


Fig. 13 REAR COVER COMPONENT		Battery component (colloid battery)	CHK	
			ADJ	
NO.	PART NO.	PART NAME	QTY	CAUTION
1	1240100-023000	Battery anode protection glue	1	
2	1244200-111000	ZT310 gel battery strap	1	
3	1184200-099000	ZT310 colloid battery (6-FM-10/10Ah)	1	
4	1184200-163000	ZT310 lead acid battery charger	1	

PROCEDURE:

- Battery straps
Pull the metal snap ring ③ of the battery strap (2) in the direction of the arrow, press it down, remove the positive end ,by negative extreme temporarily can not be removed.
- Battery
Unscrew the black protective cap ② to remove the negative pole; then remove the red protective cap ① and remove the positive pole; remove the battery. For reinstallation, connect the positive electrode first, then connect the negative electrode. No parallel battery charging or ignition.Just use the battery charger"ZONTES" provide for you. The bracelet version of the PKE assembly integrates a charging interface
- Battery anode protection glue
Always check that the center of the battery anode protection glue is aligned to the center of the battery positive after the battery is assembled, and dose the read protective cap cover the positive. Prevents the positive battery from coming into contact with the frame.

CAUTION:

- Be careful not to overcharge the charging time. About the use and maintenance of the battery see the instructions.
- Attention should be paid to the discomponent process to avoid damaging the material. Attention must be paid to the installation sequence when removing the battery.
- The battery voltage should be checked regularly. If it is lower than 12V, it is recommended to charge it in time; it must not be overcharged; it should be taken out of storage for a long time without being used, and it should be charged once a month.
- Reassemble the battery or fuse, etc. Remember to remember to reset the EFI hardware: Turn on the key-Ignition- 10 seconds After the ignition is turned off - After 10 seconds Turn on the ignition switch and repeat 2 times.
- If the battery has reached the end of its useful life, it should be handed over to a qualified organization or a dedicated recycling center for proper disposal. Discard it at will.

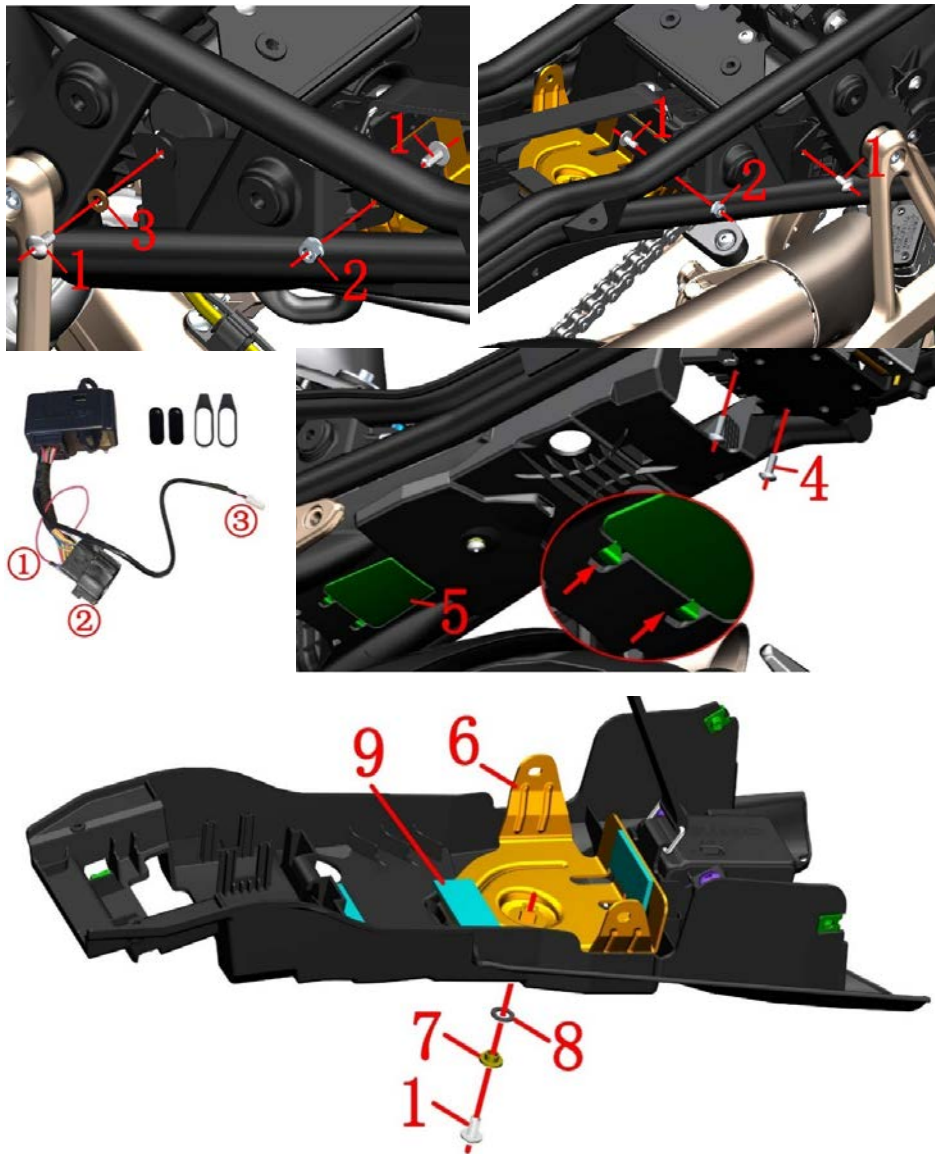


Fig. 14 REAR COVER COMPONENT		Electrical device box component 1 (colloid battery)	CHK	CAUTION
			ADH	
NO.	PART NO.	PART NAME	QTY	
1	1251100-101000	Non-standard bolt M6×12 (304 stainless steel)	5	
2	1250303-010093	GB6177.1M6 (environmental color zinc)	2	
3	1251513-001019	6.3 x 12 x 1.6 copper gasket	1	
4	1251100-102000	Non-standard bolt M6×16 (304 stainless steel)	2	
5	1224200-040000	ZT310 Electrical device box cover	1	
6	1274200-238000	ZT310-R battery holder (gel battery)	1	
7	1274100-057095	Flanging bushing $\phi 6.2 \times \phi 8.5 \times 3.5 + \phi 14 \times 1.5$	1	
8	1244100-052000	Buffer rubber of flanging bushing ($\phi 8.5 \times \phi 14 \times 1$)	1	
9	1240300-007000	HJ125—6 Battery rubber gasket	2	

PROCEDURE:

● Electrical device box component

Fix the bolt (1) on the left side of the battery holder and remove the nut (2).

Remove the bolts(1) on the left side of the front of the electrical component box Remove the gasket (3).

Fix the bolt (1) on the right side of the battery holder and remove the nut (2).

Remove the bolts(1) on the right side of the front of the electrical component box.

Remove the bolts (4) on the bottom of the rear frame of the frame.

Push the card in the direction of the arrow to snap the lower cover(5).

Find and remove the connector ③ of the PKE antenna.

Hold the electric device box component in one hand and grasp the front part downwards with one hand.

Unplug the PKE cable connectors① and ② and remove the electrical device box component.

● Battery holder

Remove bolt(1) then remove bushing(7) and the cushion rubber(8). Remove battery holder (6).

Remove the battery pad (9) and clean the remaining adhesive.

CAUTION:

● Do not pull the cable directly when unplugging it.

● If you need to replace the PKE fuse, you can replace it by directly removing the lower cover of the electrical device box.

● For PKE antenna disassembling, see "Fuel Tank Cover component 2" and "End cover Interior Trim component" above.

● When refitting connector ②, check whether the metal contacts inside are bent. If necessary, straighten them first.

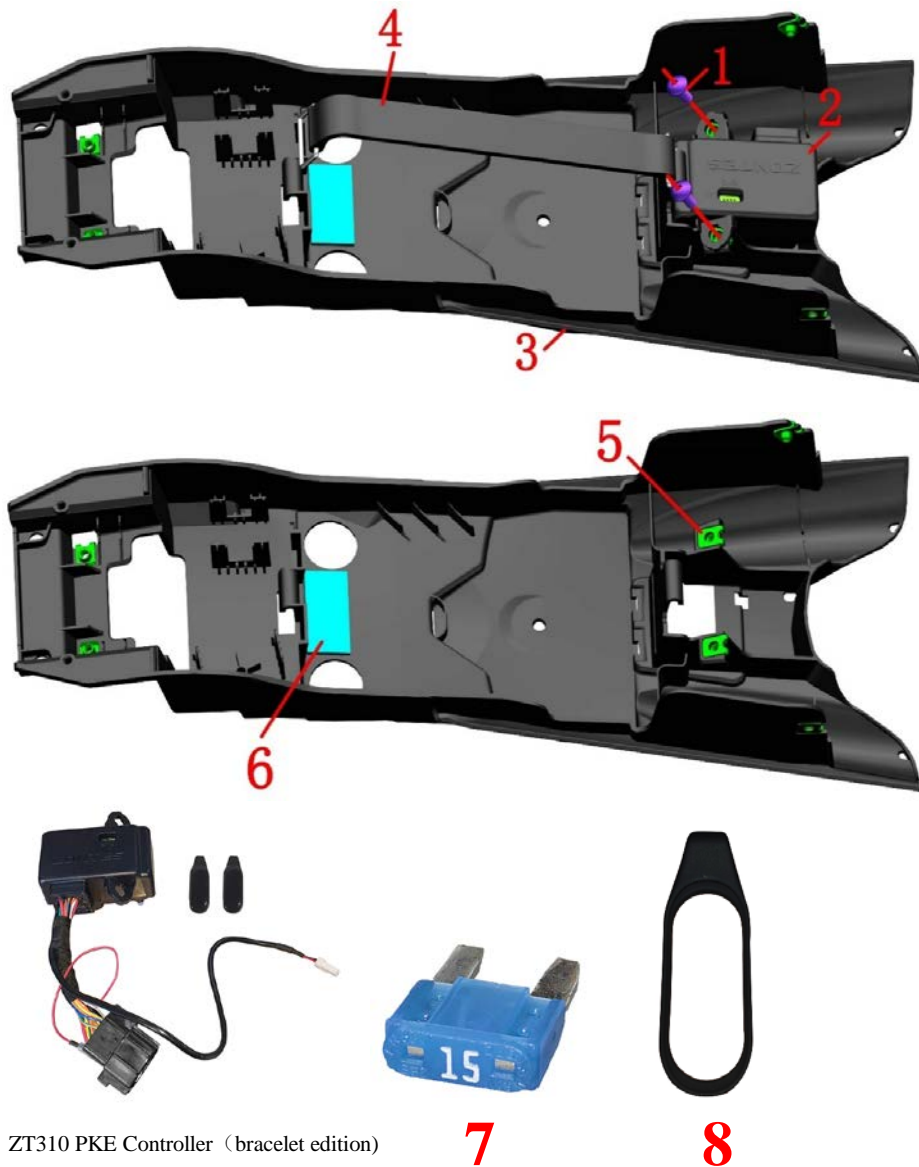


Fig. 15 REAR COVER COMPONENT		Electrical device box component 2 (colloid battery)		CHK	CAUTION
				ADH	
NO.	PART NO.	PART NAME		QTY	
1	1251100-101000	Non-standard bolt M6×12 (304 stainless steel)		2	
2	1184200-137000	ZT310 PKE Controller (bracelet edition)		1	
3	1224200-161000	ZT310-R Electrical Device Box (colloid battery)		1	
4	1244200-111000	ZT310 gel battery strap		1	
5	1251300-063093	Plywood M6×11×15 (environmental color)		6	
6	1240300-007000	HJ125-6 Battery Pad		1	
7	1184200-128000	ZT310 Universal Fuse (15A small)		2	bracelet edition after-sale
8	1244200-100000	ZT310 Induction key glue ring		1	

PROCEDURE:

●PKE controller

Remove the bolt (1) and remove the PKE controller (2).

Remove the battery strap (4).

●Electrical device box component

Remove 6 pieces of plywood nuts(5) from the electrical component box(3).

Remove the battery pad(6) and clean the remaining adhesive.

●Fuses

Unplug the fuse(7) and check if it is blown. If it has blown, replace the fuse of the same specification.

The bracelet edition PKE controller used 2pcs small fuses.


CAUTION:

●When inserting or removing the fuse, pay attention to the vertical alignment and then disassemble it. Do not bend it. Use a qualified fuse.


●PKE cables need to be protected. Non-professionals are strictly prohibited from dismantling the PKE system components, as this may cause permanent damage.

●Please refer to the driving manual for details on the use of PKE.


●The button battery model used for the bracelet version is: CR1225.

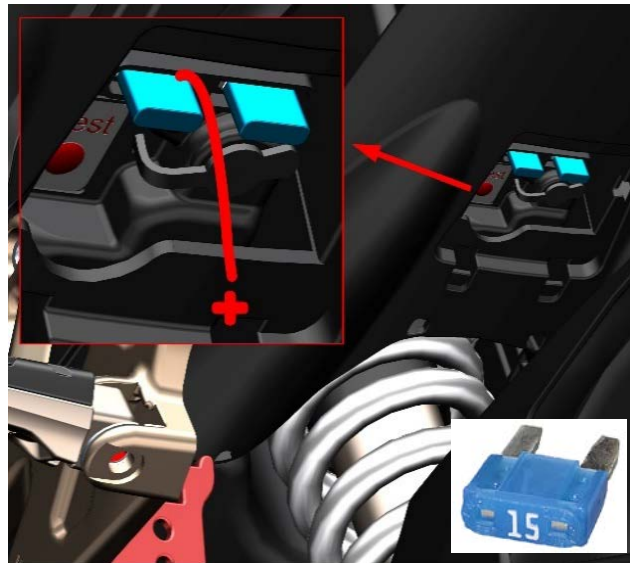


ZT310 PKE Controller
(bracelet edition)

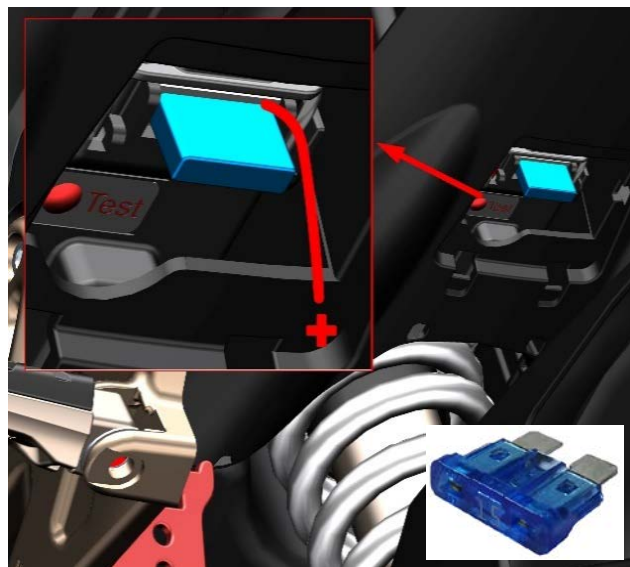

ZT310 PKE Controller
(single antenna)

Fig.16 REAR COVER COMPONENT	External battery start PKE system	CHK	
		ADJ	

PROCEDURE:


- Emergency handling method after the battery is destroyed or the battery is exhausted for too long:
Find a 15A fuse and wind a wire around any one of the fuses as shown in the left side.
Remove the lower cover of the electrical device box; insert the previously made wire into the right side of the PKE fuse slot.
Find a battery with sufficient power and connect the previously made wire to the positive side of the battery.
Find one end of the wire attached to the frame (the bolt is directly connected to the frame) and the other end to the negative pole of the battery.
After connecting the wires, check that the wires are fixed and short press the unlock button "  turn on the PKE system. Disable pressing the ignition button at this time.

CAUTION:

- The wire must be connected to the right slot in the forward direction of the finished motorcycle.
- When connecting the battery, always connect the positive electrode first and then connect the negative electrode. When disassembling, disassemble the negative electrode and then remove the positive electrode. Be sure to pay attention to the order of discomponent.
- The negative pole must be connected with the frame and can be connected to the bolt head directly connected to the frame.






FIG.1 CUSHION COMPONENT		Cushion component	CHK	
			ADJ	
NO.	PART NO.	PART NAME	QTY	REMARKS
1	1204200-002000	ZT310-R Seat cushion	1	【1】
	1200100-465000	ZT310-R Seat cushion (2021)		
2	1010502-005000	ZT310-R Cushion belt	1	
3	1244100-024000	ZT250-S Cushion front rubber	2	
4	1244100-022000	ZT250-S Cushion rubber	4	
5	1244100-025000	ZT250-S Cushion round rubber	4	
6	1250303-010093	GB6177.1M6 (environmental color)	2	

PROCEDURE:

● Remove seat cushion

Press the unlock button "  ' shortly. After the power-on self test is completed, press the "SEAT" button briefly to open the electronic cushion lock.

Grasp the seat cushion(1) and pull it diagonally upwards. At the same time, remove the cushion by moving the rear part of the cushion from side to side.

● Assembly cushion

When assembling the cushion, check whether all the cushion rubbers are complete. Insert the front part of the cushion first. After the assembly is in place, shoot the rear part of the cushion firmly. When you hear the "click" sound, it indicates that the cushion lock has been assembled.

● Cushion rubber and belt, purchased separately

If the cushion rubber aging or excessive wear of the belt can be purchased on the Zontes official website. The corresponding installation position is shown in the lower left figure.

CAUTION:

- The motorcycle should be fixed before operation.
- 【1】 Cushion(1) contains all cushion rubber and locks, bolts.
- Cushion can cause accidents if it is not installed properly.

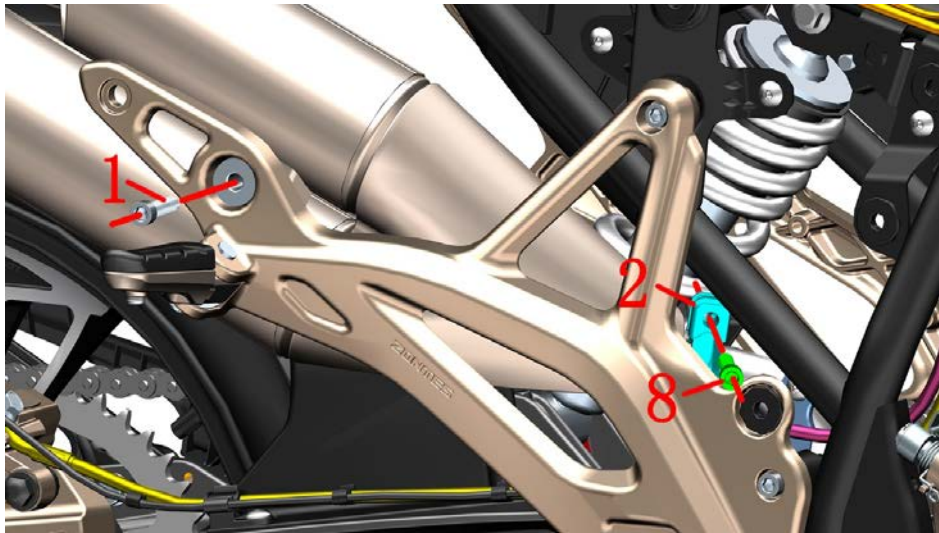



FIG.1 MUFFLER COMPONENT		Muffler rear assembly	CHK	
			ADJ	
NO.	PART NO.	PART NAME	QTY	REMARKS
1	1250205-023000	GB70.1 Hexagon M8×35 (environmental color zinc)	2	
2	1274100-074000	ZT310-R Muffler clamp	1	
3	4024200-003035	ZT310-R Titanium rear muffler	1	Delphi EFI
	4084200-001051	ZT310-R Dark gray rear muffler		Bosch EFI
4	4024200-004035	ZT310-R Titanium anti-hot plate	1	Delphi EFI
	4084200-002051	ZT310-R Dark gray anti-hot plate		Bosch EFI
5	1251100-101000	Non-standard bolt M6×12 (304 stainless steel)	2	
6	1250501-010000	GB93φ6 Spring washer	2	
7	1124100-012000	ZT310-R Muffler graphite seal gasket (37.8×25×10)	1	
8	1250205-133000	GB70.1M8×35(stainless steel A2—70)	1	

PROCEDURE:

● Remove the muffler rear assembly

Hold the muffler rear assembly in one hand, and use the hexagon tool to remove the bolt(8) from the space between the frame tube and the pedal bracket. Remove the clamp (2).


Remove the bolt(1) at the pedal bracket and remove the muffler rear assembly.

Remove the bolt(5) and remove the spring washer(6).

Remove the anti-hot plate(4) from the muffler rear part(3).

● Graphite gasket

Remove the graphite gasket(7) and protect the nozzle. If there is any deformation, it may cause air leakage.

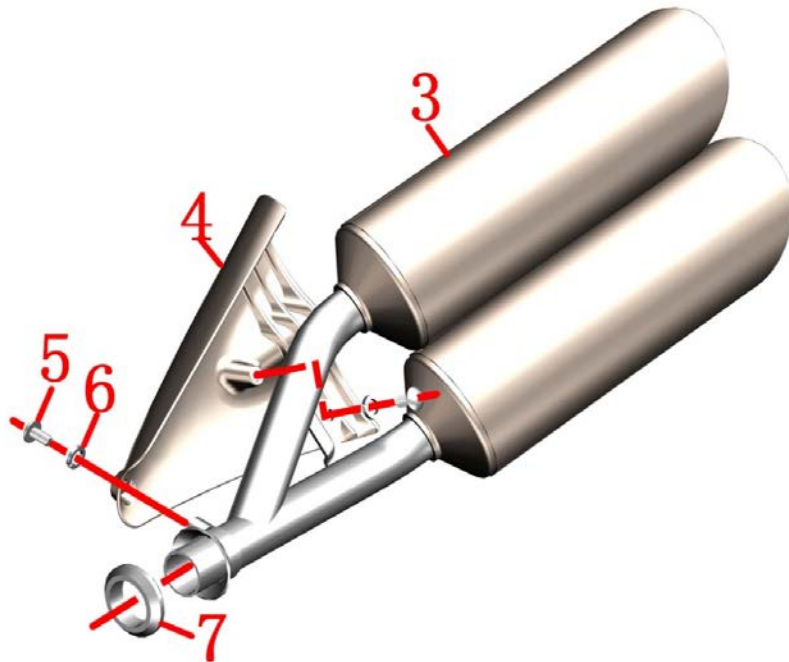

CAUTION:


● The material should be protected during disassembly to prevent damage to the paint.

● The muffler should be completely cooled before it is disassembled.

● Prevent foreign matter from entering the interior of the muffler.


● The muffler nozzle needs to be protected. If there is any deformation, it may cause air leakage.

● It is recommended that new seals be replaced each time the muffler front assembly is removed to prevent air leakage.

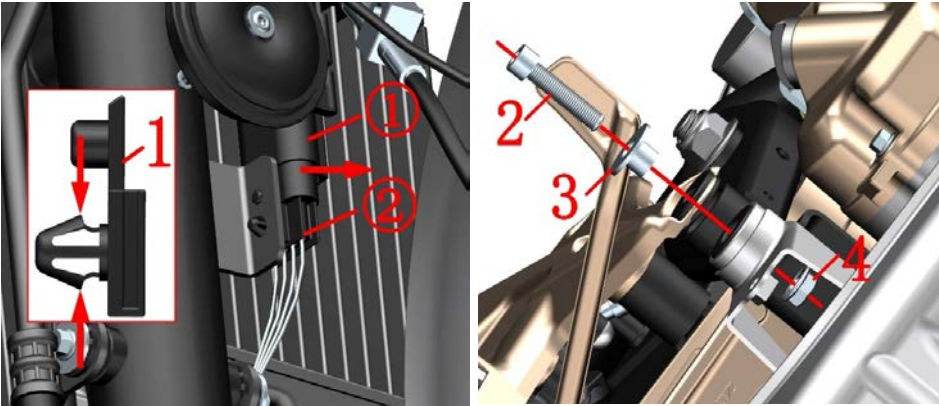


A

B

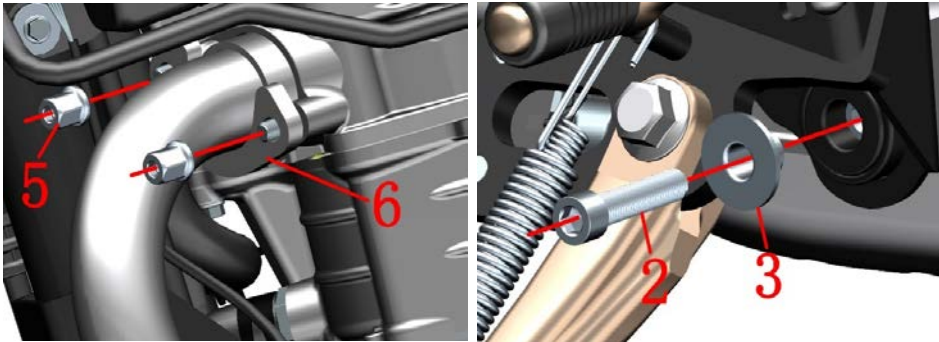

C

D

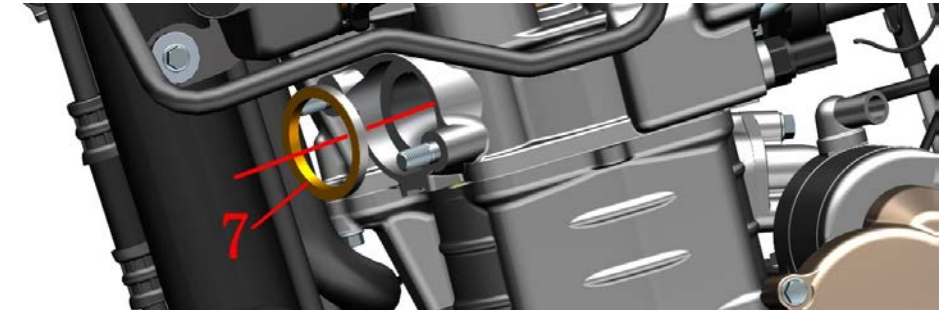

E

FIG.2MUFFLER COMPONENT		Muffler front assembly 1		CHK	
NO.		PART NO.		ADJ	
		PART NAME		QTY	REMARKS
1	1224100-013000	ZT250-S Oxygen sensor fixing buckle		1	
2	1250205-023000	GB70.1 Hexagon M8×35 (environmental color zinc)		2	
3	1274100-068095	ZT310 Muffler flange bushing		4	
4	1250303-011093	GB6177.1 M8 (environmental color)		1	
5	1251300-058093	Hexagon nut M8 (environmental color zinc)		2	
6	1020265-155000	ZT250-S Muffler flange		1	
7	1070100-133000	ZT250-S Engine exhaust seal gasket		1	

PROCEDURE:

- Oxygen sensor fixing buckle
Pull the cable clip(1) out of the radiator bracket with the pliers after slightly clamping it to the outside top (as shown in Figure A). Separate the oxygen sensor connector from the main harness.
- Muffler assembly
Lower the side bracket to fix the motorcycle.
Under the right nameplate of the motorcycle, after fixing the nut(4) with a boxer wrench, remove the bolt(2) and remove the bushing(3), as shown in Figure B.
Remove the nut(5) and remove the muffler flange(6) as shown in Figure C.
Hold the muffler front assembly with one hand, remove the bolt(2) from under the side bracket mounting plate with one hand, and remove the bushing(3) as shown in Figure D.
After removing the muffler front assembly, remove the gasket(7) as shown in Figure E.

CAUTION:

- The lower shroud assembly needs to be removed in advance. For the removal procedure, see "Lower shroud assembly".
- The muffler should be completely cooled before it is disassembled.
- Prevent foreign matter from entering the muffler or engine interior.
- It is recommended that new seals should be replaced each time the muffler front assembly is removed to prevent air leakage.

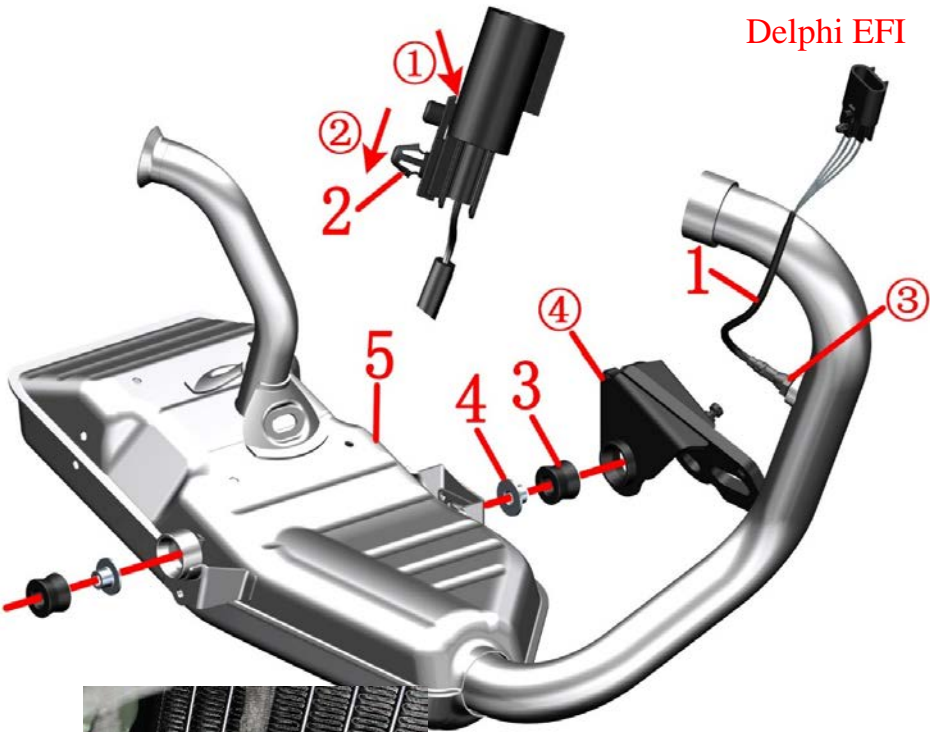



FIG.3 MUFFLER COMPONENT		Muffler front assembly 2		CHK	
				ADJ	
NO.	PART NO.	PART NAME		QTY	REMARKS
1	1050953-008000	OSM planar oxygen sensor 25322728		1	Delphi EFI
	1050954-026000	LSF oxygen sensor			Bosch EFI
2	1224100-013000	ZT250-S Oxygen sensor fixing buckle		1	Delphi EFI
	1224200-008000	ZT310-R line card nail			Bosch EFI
3	1244100-064000	ZT310 Muffler cushion rubber		2	
4	1274100-068095	ZT310 Muffler Flange Bushing		2	
5	1124200-002000	ZT310-R Front muffler (homemade/Euro IV)		1	Delphi EFI
	1124200-017000	ZT310-R Front muffler (homemade/ bosch)			Bosch EFI

PROCEDURE:

● oxygen sensor

Delphi EFI :Insert the screwdriver with a small slotted screwdriver① to open the fastener, and press it in the direction indicated by arrow② to push it out from the oxygen sensor connector. Remove the oxygen sensor(1) with an open wrench.

Bosch EFI: Remove the plug connected to the oxygen sensor (1) on the main cable in the direction of the arrow, and unplug the oxygen sensor (1). Note: The line card nail of Bosch EFI is placed on the connector at one end of the main cable.


● Buffer assembly

Remove the bushing(3) and cushion rubber(2) from the frame④.

Remove the bushing(3) and cushion rubber(2) from the muffler front part(5).

CAUTION:

- The muffler should be completely cooled before it is disassembled.
- Prevent foreign matter from entering the interior of the muffler.

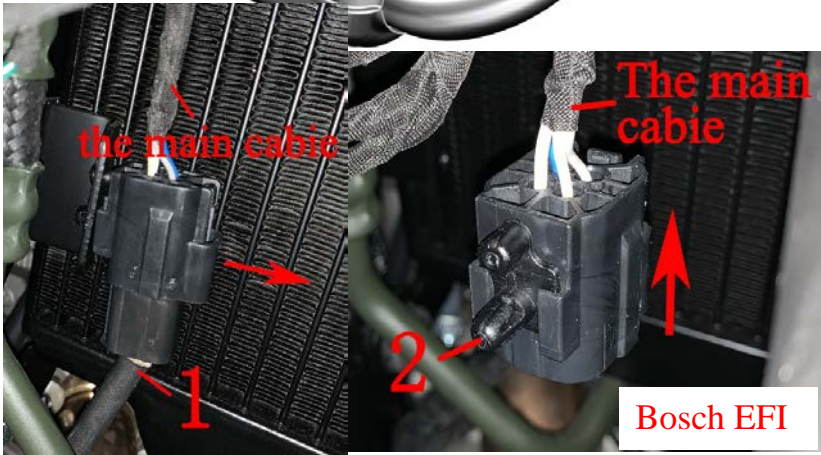

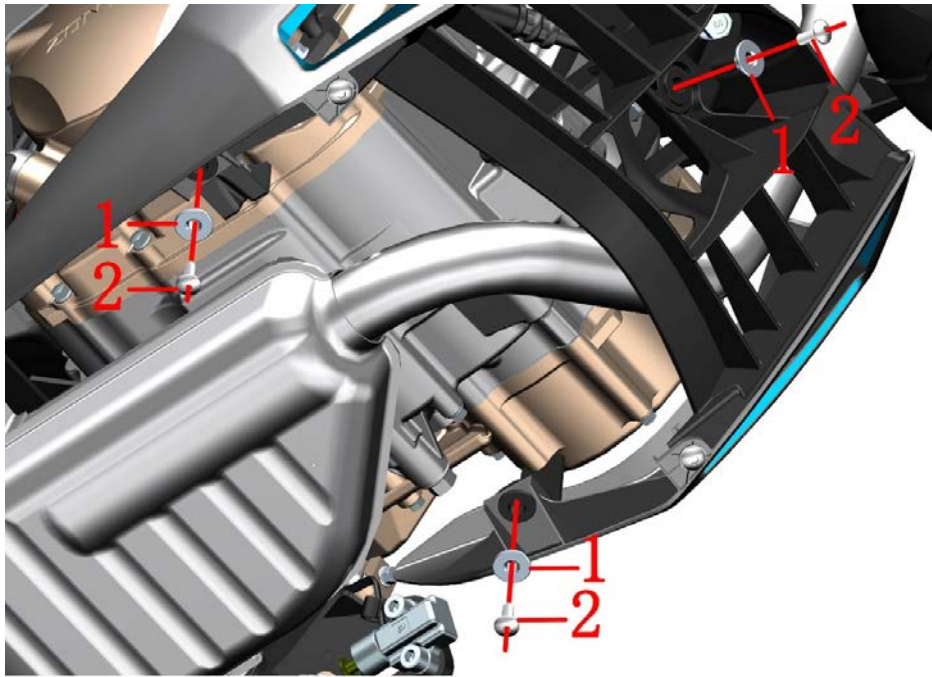


FIG.1 LOWER SHROUD COMPONENT		Lower shroud component 1	CHK	
			ADJ	
NO.	PART NO.	PART NAME	QTY	REMARKS
1	1274100-007000	ZT250-S flanging sleeve (φ6.4×φ9×6+φ20×2)	3	
2	1251100-102000	Non-standard bolt M6×16 (304 stainless steel)	3	
3	1251112-005093	M6×75 Hexagonal flange bolt (color zinc)	1	
4	1274200-015000	ZT310-R Lower shroud left bracket	1	
5	1274200-016000	ZT310-R Lower shroud right bracket	1	
6	1251112-003093	M6×45 Hex flange surface 9.8 bolts (color zinc)	1	

PROCEDURE:


●Lower shroud assembly

Raise the platform of the motorcycle and support the lower shroud assembly with one hand. Remove the 3 bolts (2) with the hexagonal tool and remove the flange bush(1).
Remove the shroud assembly and place it.

●Lower shroud bracket

Remove the bolt(3) with the sleeve and remove the left shroud bracket(4).

Remove the bolt(6) with the sleeve and remove the right shroud bracket(5).

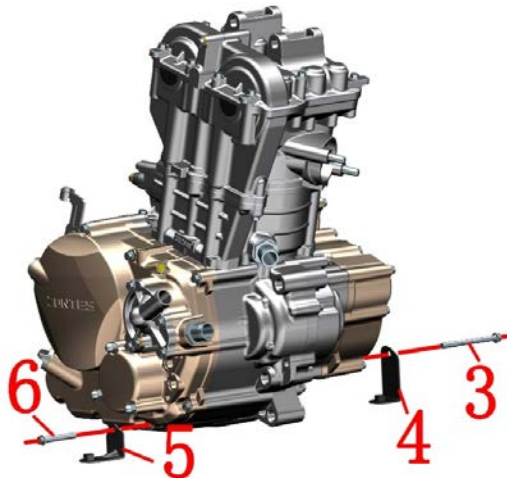

CAUTION:

- The motorcycle support should be fixed during disassembly to prevent accidents caused by incline.
- The shroud should be supported during disassembly to prevent fracture due to uneven force.
- The bolts(3) and (6) must meet the standard torque and must be coated with a thread tightening glue.

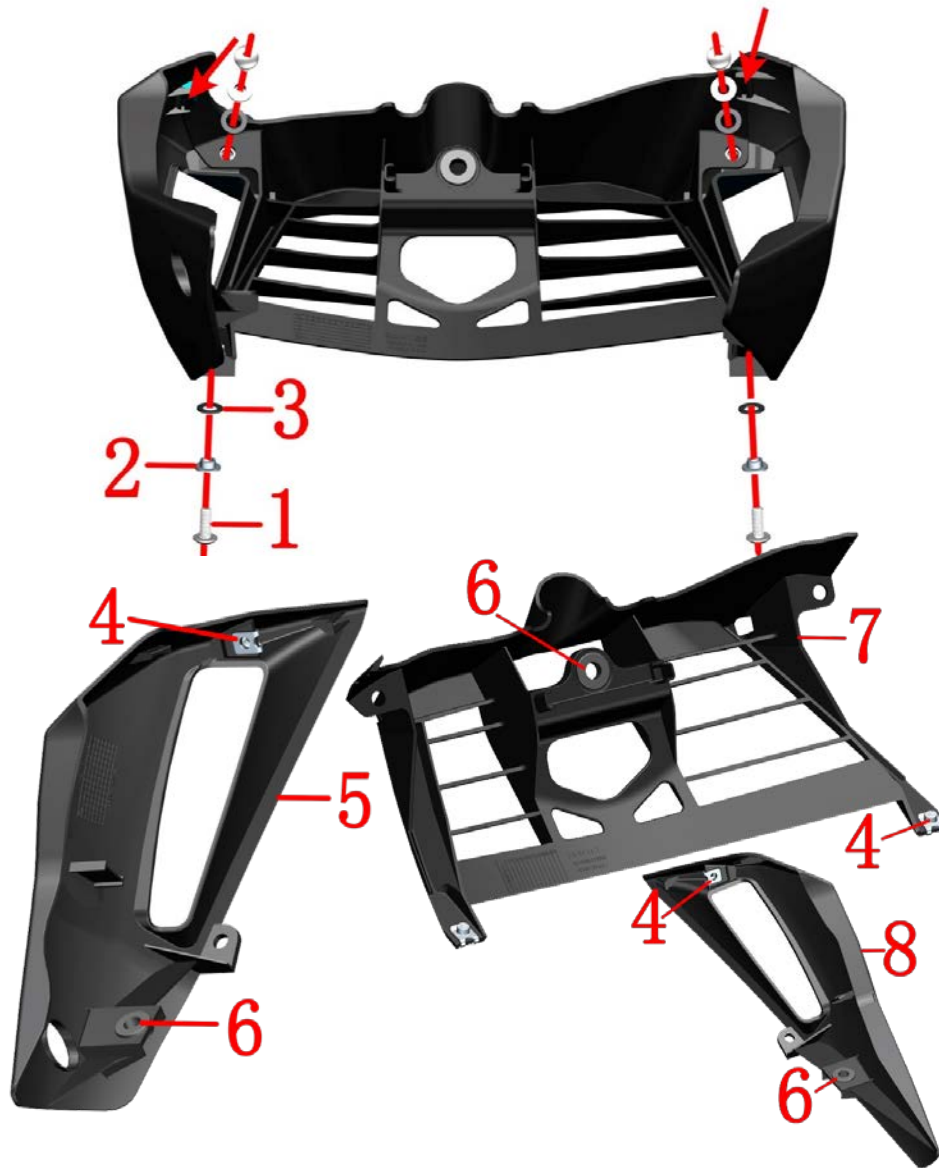


FIG.2 LOWER SHROUD COMPONENT		Lower shroud component 2		CHK	REMARKS
				ADJ	
NO.	PART NO.	PART NAME	QTY		
1	1251100-102000	Non-standard bolt M6×16 (304 stainless steel)	4		
2	1274100-057095	Flanged bush φ6.2×φ8.4×3.5+φ14×1.5	4		
3	1244100-052000	Flange bushing buffer (φ8.5×φ14×1)	4		
4	1251300-063093	Plywood M6×11×15 (environmental color)	4		
5	4044201-032052	Lower shroud left part (iron grey)	1		blue
	4044201-089051	Lower shroud left part (dark grey bright blue)			bright blue
	4044201-085051	Lower shroud left part (dark grey bright green)			green
	4044201-081051	Lower shroud left part (dark grey bright purple)			purple
	4044201-093021	Lower shroud left part (bright black)			black
	4044201-085011	Lower shroud left part (dark grey bright red)			red
	4044201-518051	Lower shroud left part (dark grey bright yellow)			yellow
6	1244100-004000	ZT250—S Flanging bushing buffer	3		
7	1224200-011000	ZT310—R Lower shroud middle part	1		
8	4044201-036052	Lower shroud right part (iron grey)	1		blue
	4044201-090051	Lower shroud right part (dark grey bright blue)			bright blue
	4044201-086051	Lower shroud right part (dark grey bright green)			green
	4044201-082051	Lower shroud right part (dark grey bright purple)			purple
	4044201-094021	Lower shroud right part (bright black)			black
	4044201-086011	Lower shroud right part (dark grey bright red)			red
	4044201-519051	Lower shroud right part (dark grey bright yellow)			yellow

PROCEDURE:

●Lower shroud assembly

Remove 4 bolts(1) and remove the flange bush(2) and pad(3).

Use a flathead screwdriver to open the snaps indicated by the arrows and separate the lower shroud assembly into three parts.

Remove the plywood nut(4) and cushion rubber(6) from the left part of the shroud(5).

●Shroud right part

Remove the plywood nut(4) and cushion rubber(6) from the right part of the shroud(8).

●Shroud middle part

Remove the plywood nut(4) and cushion rubber(6) from the middle part of the shroud(7).

CAUTION:

●The shroud should be well protected during disassembly to prevent breakage or paint scratches caused by uneven force.