




边箱支架安装指南

Side box bracket installation guide


散件清单

parts and components list



M8x65

① x 2




M8x60

② x 2



M8x25

③ x 2

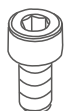

M8x16

④ x 2



M8螺母
M8 Nut

⑤ x 4




边箱支架左连接板
side box bracket left
connecting plat

⑥ x 1



边箱支架右连接板
side box bracket right
connecting plate

⑦ x 1

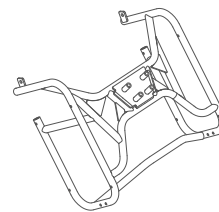


边箱支架
side box support

⑧ x 1


- 该部分零件仅安装铝箱时需要。

The parts below are only needed when installing the Aluminum side box.



M6x35

⑨ x 4




M6x40

⑩ x 8




M6锁紧螺母
M6 Locknut

⑪ x 12




垫片
Gasket

⑫ x 16

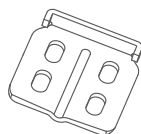

边箱安装锁扣片
Side box mounting clips

⑬ x 2

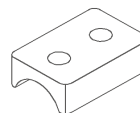

边箱安装锁垫块
Side box mounting pad

⑭ x 2



边箱安装衬套
Side box mounting bushing


⑮ x 8

步骤一:

Step 1:

用工具拆下固定后泥板的4颗螺栓。

Remove 4 units bolts off fixed rear mudguard by using tool.

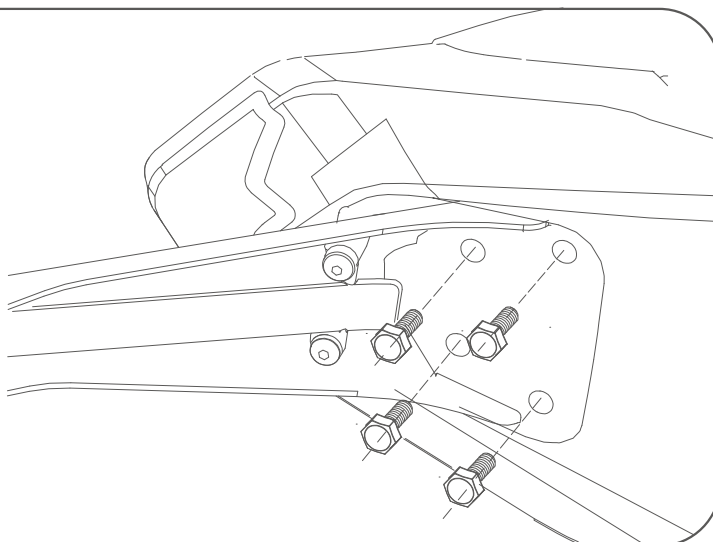

注意attention

1. 安装前请仔细阅读安装说明。

Please read the installation instruction carefully before installation.


2. 定期检查各部件固定螺栓。

Check the fixed bolts on each part periodically.

3. 该支架仅适用于我司官网销售的边箱，其它边箱请谨慎购买，以免不适。

The bracket is only suitable for the side box which is sold by our official website, not suitable for other side boxes, please purchase it carefully to avoid mismatch.

安装示意图
installation chart

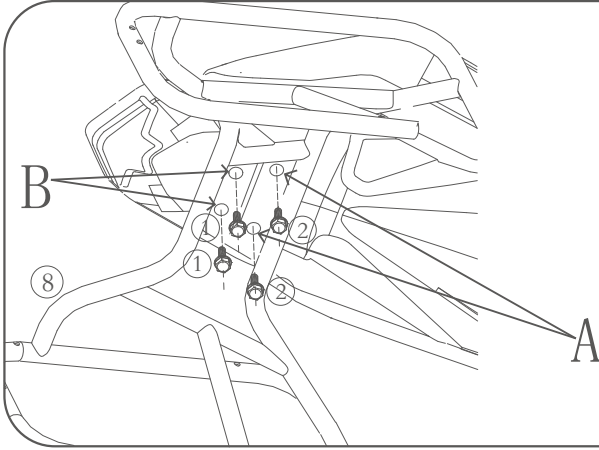


安装步骤二：
Installation step 2:

先预紧A处两个M8X60螺栓，再装配B处两个M8X65螺栓。

Pre-tighten the two M8X60 bolts at A, then assemble the two M8X65 bolts at B

推荐工具：棘轮扳手（12#套头）。
Recommended tools: ratchet wrench(12#).

- ① x 2
- ② x 2
- ⑧ x 1

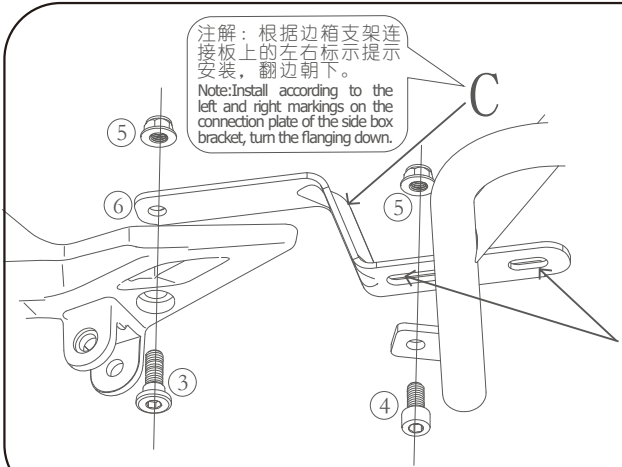

注解：根据边箱支架连接板上的左右标示提示安装，翻边朝下。
Note: Install according to the left and right markings on the connection plate of the side box bracket, turn the flanging down.

安装步骤三：
Installation step 3:

边箱支架连接板与脚踏连接。


The side box bracket connecting plate is connected with the foot pedal .

工具：6#内六角，13#扳手。

Tools: 6# inner hexagon wrench, 13# wrench.

注解：-U/G1装前一孔位，Z1装后一孔位。
Note: -U / G1 is equipped with a hole in front, Z1 is equipped with a hole on the back.

- 单边 ③ x 1
One-sided
- 单边 ④ x 1
One-sided
- 单边 ⑤ x 2
One-sided
- 单边 ⑥ x 1
One-sided

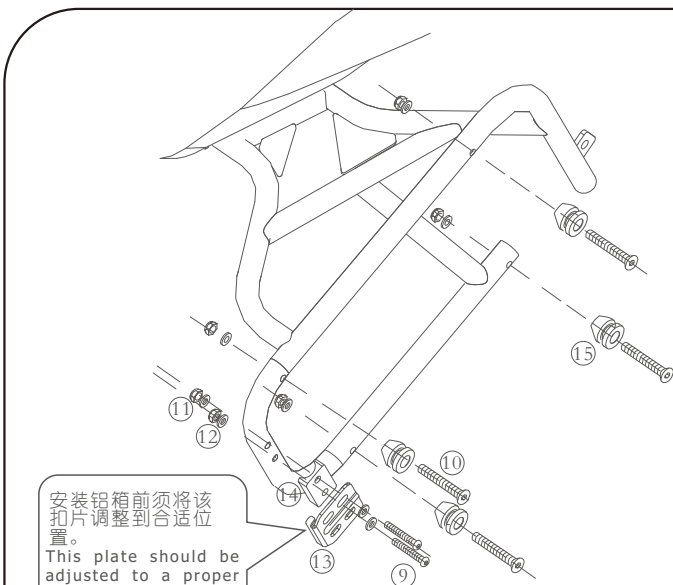

安装铝箱前须将该扣片调整到合适位置。
This plate should be adjusted to a proper position before installing the Aluminum side box.

安装步骤四：
Installation step 4:

此步骤仅安装铝箱时需要。

This step is only needed when installing the Aluminum side box.

工具：4#内六角，10#开口扳手。

Tools: 4# inner hexagon wrench, 10# open wrench.

- 单边 ⑨ x 2
One-sided
- 单边 ⑩ x 4
One-sided
- 单边 ⑪ x 6
One-sided
- 单边 ⑫ x 8
One-sided
- 单边 ⑬ x 1
One-sided
- 单边 ⑭ x 1
One-sided
- 单边 ⑮ x 4
One-sided